



E86015-00

**BETCO**®

# FOREMAN™ AS26B

26" Automatic Scrubber



**Operator's Manual  
Parts Schematic**

The Cleaning Edge™ |

©2007 Betco Corporation. All Rights Reserved. 1001 Brown Avenue • Toledo, Ohio 43607-0127 • 888-GO-BETCO • www.betco.com





---

## Receiving the machine

---

Immediately check, when receiving the machine, that all the material indicated on delivery documents has been received and also that the machine has not been damaged in transit. If it has been damaged, this damage must be immediately reported to the shipper and also to our customer service department. Only acting promptly in this manner will make it possible to receive missing material and to be compensated for damage.

---

## Identification plate

---


---

## Foreword

---


This is a floor scrubbing machine that is able to clean any type of floor by using the mechanical action of the rotating brush and the chemical action of a water-detergent solution. As it moves forward it also gathers up the dirt removed and the detergent solution that has not been absorbed by the floor.

**The machine must only be used for this function.** Even the best machines will only operate efficiently and work with profit if they are used properly and kept in perfect operating order. Read this instruction booklet carefully and consult it every time problems arise with machine operation. Remember that, if necessary, our service organization, in collaboration with our dealers, is always available for helpful hints or direct intervention.

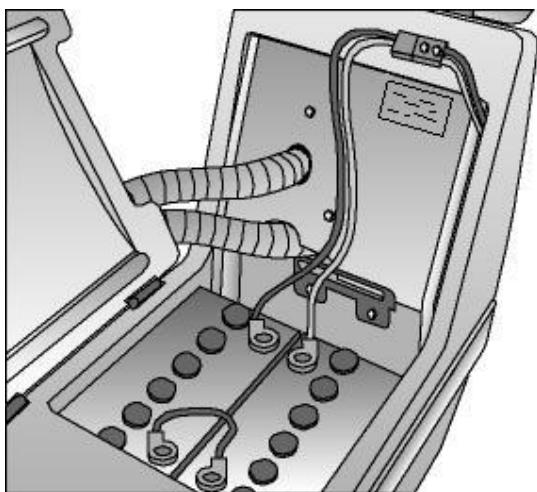





## SYMBOLS USED ON THE MACHINE

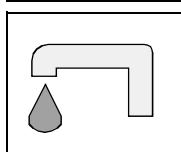


Cock symbol  
Used to indicate the cock opening solenoid valve switch

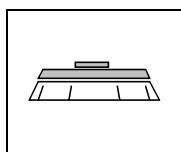


Brush symbol  
Used to indicate the main/brush motor switch

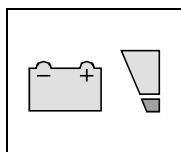


Battery charge level symbol.

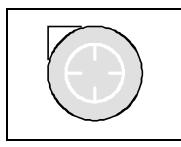


Aspiration motor symbol.  
Indicates the aspiration motor switch.

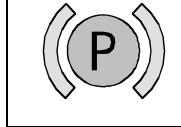

Brake symbol.  
Indicates the hand brake engaged signal lamp. Used over the emergency brake lever.

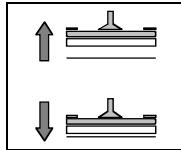


Squeegee lift/lower symbol. Indicates the squeegee lift lever.

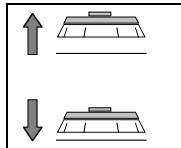

Brush base lift/lower symbol. Indicates the base lift lever.



Brake symbol.  
Indicates the parking brake disengaged position.  
**MODIFICARE SIMBOLO**

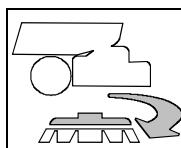

Automatic brush uncoupling symbol. Indicates the switch for automatic removal of brush.



This symbol [the crossed-out wheeled bin/PICTURE] means that the product should be brought to the return and/or separate collection systems available to end-users, when the product has reached the end of its lifetime. This symbol applies only to the countries within the EEA (\*).

(\*) EEA = European Economic Area, which comprises the EU Member States plus Norway, Iceland and Liechtenstein.



## GENERAL RULES OF SECURITY

The rules below have to be followed carefully in order to avoid damages to the operator and to the machine.

- Read the labels carefully on the machine. Do not cover them for any reason and replace them immediately if damaged
- The machine must be used exclusively by authorized staff that has been instructed for its use
- During the working of the machine, pay attention to other people and especially to the children
- Do not mix different detergents, avoiding harmful odours
- Do not place any liquid containers onto the machine
- The storage temperature has to be between - 25° C and + 55° C
- Operating conditions: room temperature between 0°C and 40°C with respective humidity between 30 and 95%
- Do not use the machine in explosive atmosphere
- Do not use the machine as a means of transport
- Do not use acid solutions which could damage the machine and/or the persons
- Avoid working with the brush when the machine stands still, in order to prevent floor damages
- Do not vacuum inflammable liquids
- This appliance is not suitable for picking up hazardous dust
- In case of fire, use a powder extinguisher. Do not use water
- Do not strike shelvings or scaffoldings, where
  - there is danger of falling objects
- Adapt the utilization speed to the adhesion conditions
- ATTENTION! Do not use the machine on areas having a higher gradient than the one stated on the number plate
- When the machine is in parking position, take off the key and insert the parking brake
- The machine has to carry out simultaneously the operations of washing and drying. Different operations have to be carried out in areas which are not permitted for the passage of non employed staff. Signal the areas of moist floors with suitable signs
- If the machine does not work properly, check by conducting simple maintenance procedures. Otherwise, it is better to ask for **FIMAP** technical service
- Where parts are required, ask for ORIGINAL spare parts to an agent and/or to an authorized **FIMAP** dealer
- Use only original **FIMAP** brushes indicated in the paragraph "CHOICE AND USE OF BRUSHES"
- In case of danger act immediately upon the emergency brake
- For any cleaning and maintenance operation take off the power supply from the machine
- Do not take off the pieces which require the use of tools to be removed
- To restore all the connections electrical workers after whichever maintenance operation
- Do not wash the machine with direct water jets or with high water pressure nor with corrosive material
- Every 200 working hours have a machine check through a **FIMAP** service department
- In order to avoid scales on the solution tank filter, do not fill the detergent solution many hours before the machines' use
- Before using the machine, check that all doors and coverings are in their position as indicated in this use and maintenance catalogue
- Be sure the recovery tank is empty before removing it
- Provide for the scrapping of the material of normal wear following strictly the respective rules
- When, after years of precious work, your **FIMAP** machine has to be abandoned, provide for the scrapping in appropriate centres, because of the presence of toxic-harmful materials, especially oils, batteries and electronic components, and considering that the machine itself has been constructed using materials integrally recyclable.



## MACHINE PREPARATION

### 1. HANDLING OF THE PACKED MACHINE


The machine is packed in a specific package provided on a pallet for the handling with fork trucks. Do not place more than two packages on top of each other.

The total weight is : 187 kg, machines without traction

The overall dimensions are:


MAXIMA 50/450/500/452/502      A : 1140 mm  
                                          B : 720mm  
                                          C : 1425 mm

MAXIMA 650      A : 1260mm  
                                          B : 720mm  
                                          C : 1660mm

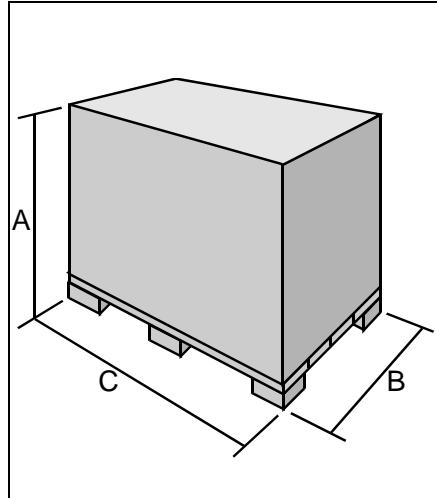


### 2. HOW TO UNPACK THE MACHINE

1. Take off the outer package
2. The machine is fixed on the pallet with wooden wedges which block the wheels
3. Take off these wedges

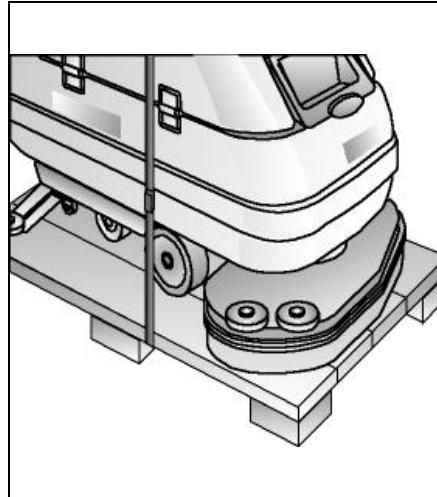

4. Using a chute, get the machine down from the pallet, pushing it in reverse motion. Avoid violent blows to the base.
5. Keep the pallet for eventual transport necessities

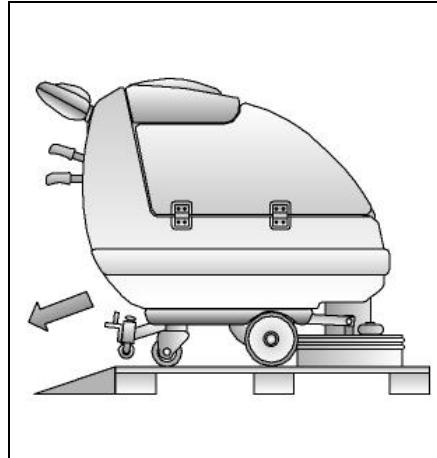




## MACHINE PREPARATION

### 3. INSTALLATION OF THE BATTERIES INTO THE MACHINE

The batteries must be housed in the battery compartment below the recovery tank. They must be handled using special hoisting equipment with suitable grasping systems and designed to support the weight of the batteries. The batteries must also conform to the requirements given in CEI 21-5 standards.



**ATTENTION!** Comply scrupulously with the instructions given by the manufacturer or his retailer for daily battery charging and maintenance. All installation and maintenance procedures must be done by expert personnel. Danger of inhalation of gases and leakage of corrosive fluids. Danger of fire: do not approach with open flames.

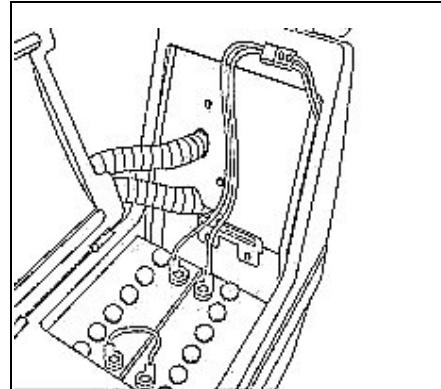

### 4. CONNECTING THE DRIVE MOTOR CABLE




**ATTENTION!** This job must be done by a Fimap Service Center technician.

### 5. CONNECTING THE BATTERY CHARGER

The battery connector (1) must fit into the corresponding connector on the battery charger. The battery charger connector is delivered inside the bag that contains this instruction booklet. It must be fitted to the battery charger cables according to instructions.



**ATTENTION!** This operation must be completed from qualified staff. A wrong or imperfect connection of cables to the connector can cause serious damages to persons or things.

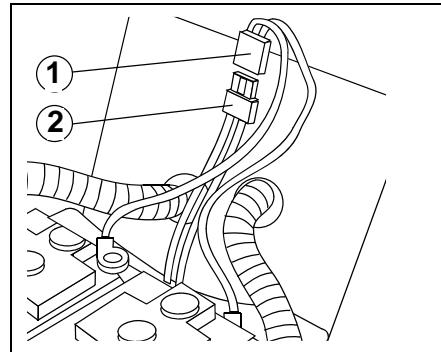

### 6. RECHARGE OF THE BATTERIES


Batteries, to avoid permanent harm to them, should never be totally discharged. They should be recharged within a few minutes after the battery discharged signal starts to flash.



**ATTENTION!** Never leave the batteries completely discharged, even if the machine is not being used. When recharging the batteries, keep the recovery tank lifted supporting it with the prop as indicated in figure. Make sure that the battery charger is suitable for the used batteries capacity and type.

**ATTENTION!** Danger of gas exhalations and emission of corrosive liquids

**ATTENTION!** Fire danger Do not approach with free flames

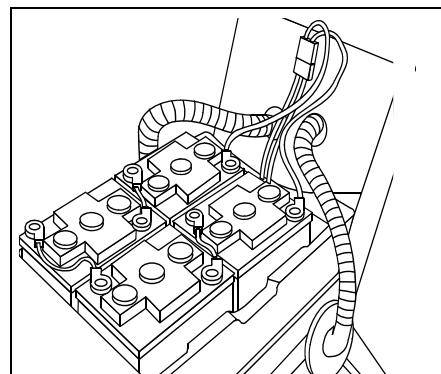




## MACHINE PREPARATION

### 7. CONNECTION OF THE BATTERY CONNECTOR

The battery connector (2) has to be connected to the connector of the machine (1)

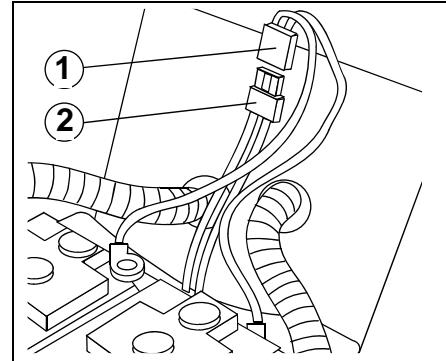


### 8. BATTERIES' INDICATOR (machines with traction)

The batteries' indicator is digital with 4 fixed positions and a blinking one. The numbers, which appear on the display, show the approximate charge level.

4 = maximum charge, 3 = charge 3/4, 2 = charge 2/4, 1 = charge 1/4,  
0 = (blinking) discharged batteries




**ATTENTION!** Some seconds after that "0" blinks, the brush motor automatically switches off. Anyway, the machine can finish to dry before recharging the batteries.

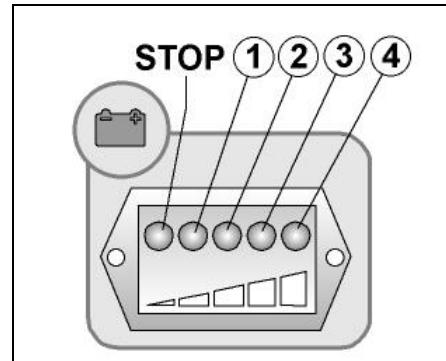

### 9. SQUEEGEE ASSEMBLY


The squeegee is supplied separately, dismantled from the machine, for packing reasons. It must be installed as illustrated, threading the retaining pin into the squeegee column. Put the aspiration tube into its sleeve.

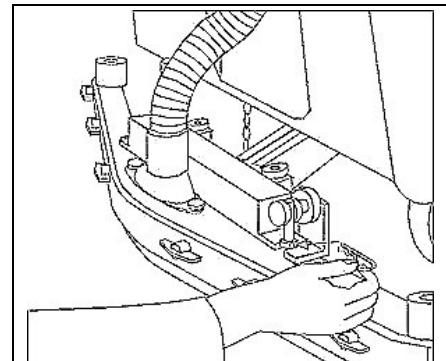

### 10. ADJUSTMENT SQUEEGEE HEIGHT

The squeegee has to be regulated depending on the wearing of the rubbers. To adjust this, rotate the knob (2) counterclockwise to lift the squeegee and clockwise to lower it.

**Note:** The right and left wheels must be adjusted at the same amount so that the squeegee works in parallel to the floor.

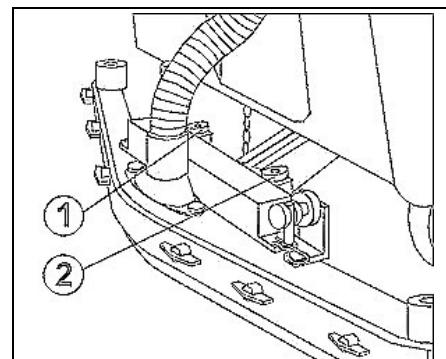




## MACHINE PREPARATION

### 11. ADJUSTMENT SQUEEGEE INCLINATION

During working operation, the rear rubber has to work slightly tilted backwards and this equally in its whole length for about 5mm. Should it be necessary to increase the rubber bending in the central part, then tilt the squeegee body backwards and turn the adjuster (1) counterclockwise. If the rubber bending is to be noticeable at the sides of the squeegee, turn the adjuster clockwise. At the end of the adjustment, block the adjuster nut.

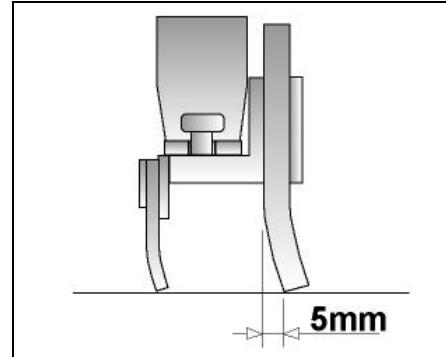


### 12. MANUAL BRUSHES ASSEMBLY

1. Use lever (1) to lift the base (lever downwards).
2. Turn key (2) to OFF and remove it from the control panel.




**ATTENTION!** installing the brushes with power on may cause injury to the hands

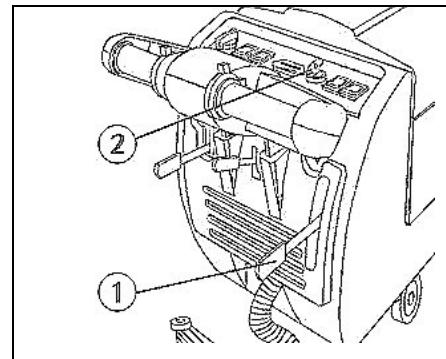

1. With the base raised thread the brushes into the seat on the plate below the base, turning them until the three buttons enter the holes on the plate. Turn them abruptly to push the button towards the retaining spring so that the brush locks in place.


The photo shows the direction of rotation for installing the right brush. Rotate the opposite direction to install the left brush.

For the single brush models the procedure is the same and the rotation direction for the brush coupling is the opposite of what indicated on the picture.

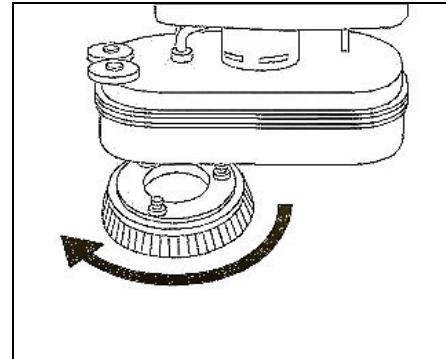

- (Only for double brush machines)

We recommend inverting right and left brushes every day and vice versa. If brushes are not new and have distorted bristles then it is best to install them always in the same position (the right brush on the right side and the left brush on the left side) to prevent bristles with a different slope from overloading the brush motor and causing excess vibrations.

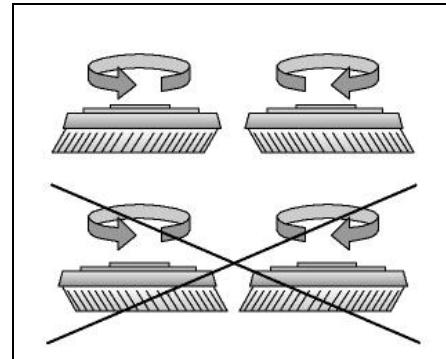




## MACHINE PREPARATION

### 13. ASSEMBLY CYLINDRICAL BRUSHES


1. Brake the machine acting upon the lever (1)
2. Lift the brush base acting upon the lever (2)
3. Turn the key (1) into position "0" and take it off
4. Remove the lateral right splash guard (see DISASSEMBLY AND CLEANING OF THE BRUSH UNIT)



**ATTENTION!** Use gloves for this operation in order to protect your hands

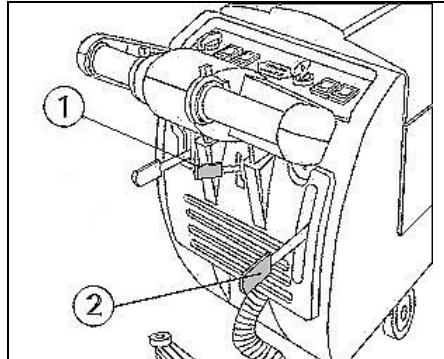

1. Insert the brush in the tunnel (Side with 5 teeth) until it is coupled with the traction hub
2. Insert the free hub (1) of the mobile support into the brush (side with 6 teeth)
3. Repeat the operation for the second brush
4. Assemble the lateral splash guards (2)

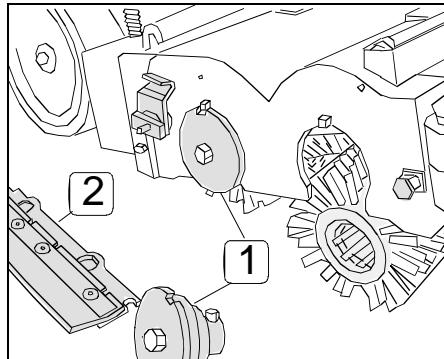


### 14. RECOVERY TANK

Open hood (1).

Check:

1. that plug (2) is properly anchored (it must not pull out when it is lifted, otherwise turn it clockwise);
2. that aspiration tube (3) is inserted in its seat.

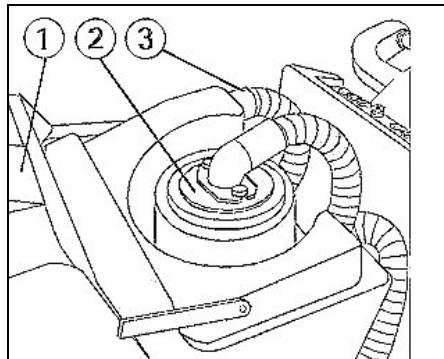


### 15. SOLUTION TANK

Fill the solution tank with clean water at a temperature not in excess of 50°C. Add liquid detergent in the amounts and using the procedures recommended by the detergent manufacturer. Use only a minimal percentage of detergent to prevent formation of an excess quantity of foam since too much foam may damage the aspiration motor.



**ATTENTION!** Always use low-foam detergent. Introduce a small amount of anti-foam detergent in the recovery tank before starting to work to be sure to prevent foam from being generated.  
Never use pure acids.

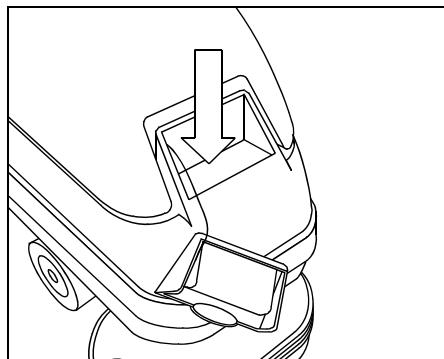





## PERFORMANCE

### 1. SETTING FOR WORK


1. Set the machine up for operation.
2. Check that the parking brake is released (1).
3. Connect the connector to the batteries (2).
4. Turn the main switch key (3) a quarter turn clockwise. The battey led display immediately comes on.

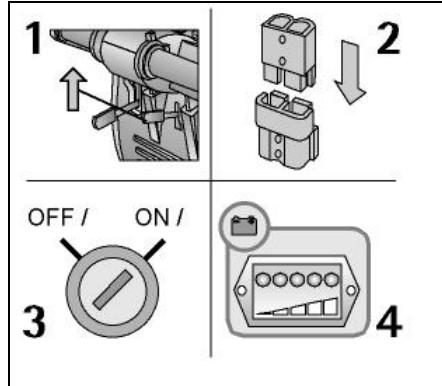

5. Press brush switch (1).
6. Press aspiration switch (2).
7. Use knob (3) to adjust water flow.

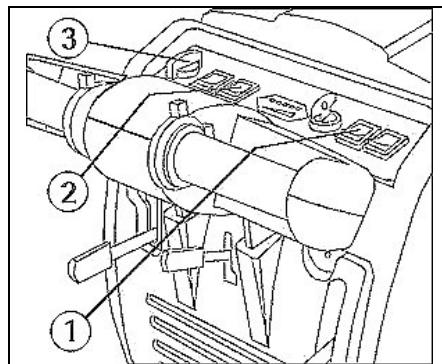


8. Push the lever (1) to lower the base.
9. Pushing the lever, lower the squeegee assembly (2).

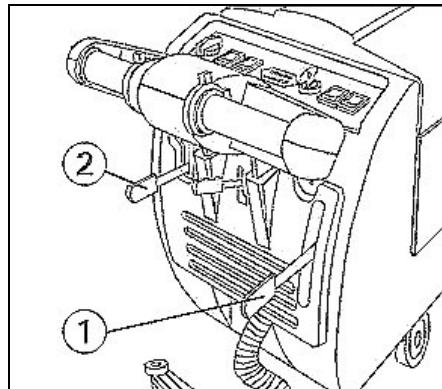

### 9. (Only machines with traction motor)

The machine will start to move when deadman lever (1) is pushed forward. Check, during the first few meters of wash, that brush pressure is adequate (see "BRUSH PRESSURE" below), that the amount of water is sufficient and that the squeegee dries the floor perfectly.

The machine will now start to work at full efficiency until the solution water is finished. Immediately apply emergency brake (2) on the left side of the machine whenever problems arise during operation. This control stops forward movement by the machine. To start to work again, after solving the problem, just raise level (2) and push deadman lever (1) forward.

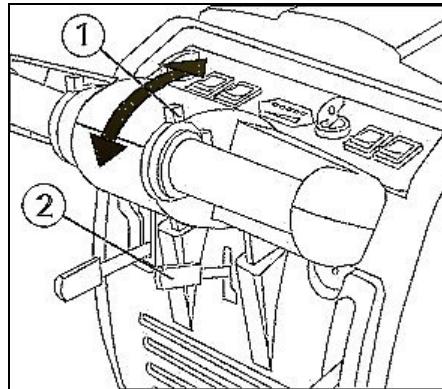



## PERFORMANCE

### 2. OVERFLOW DEVICE


The machine is equipped with a float, which intervenes when the recovery tank is full causing the closure of the suction hose. In this case, it is necessary to proceed with the emptying of the recovery tank taking off the plug of the exhaust pipe.



**ATTENTION!** This operation has to be carried out using gloves to protect from contact with dangerous solutions.

### 3. BRUSH PRESSURE

Use lever (1) to adjust brush pressure. There are three preset positions. The greatest pressure is when the lever is in its highest position. Pressure should be selected depending on the type of floor and the amount of dirt. Too much pressure causes increased brush wear and greater energy consumption.

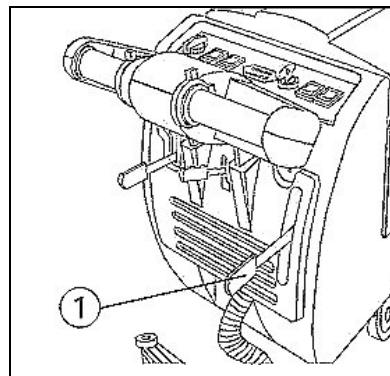

### 4. MOVEMENT (machines with traction)


These machines are equipped with electronically commanded traction, with two speeds forwards and one backwards.

To move the machine, it is necessary to act upon the key (1), wait for three seconds and then rotate forward (forward movement) or backward (rear movement) the lever (2) on the handle bar. Pushing forward the lever a few millimetres, the first speed is available, pushing the lever forward completely, the second speed is obtained.

In reverse motion, the speed movement is reduced.




**WARNING!** When carrying out even short backward movements, make sure that the squeegee is lifted.

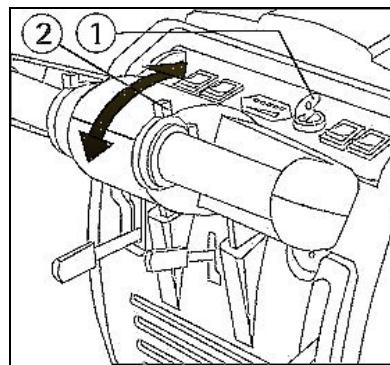

### 5. BRAKES (machines with traction)

The machine has two braking systems: a working electronic brake integrated in the drive system (1) and an emergency brake which works by pushing downwards the lever (2), which works also as parking brake when it is fixed in the proper hooking down on the right.

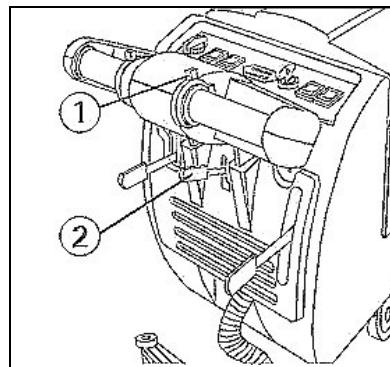





## ON COMPLETION OF THE WORK

At the end of the work day, before performing any type of maintenance:

1. Close cock (3).
2. Raise base (1).
3. Raise squeegee (2)

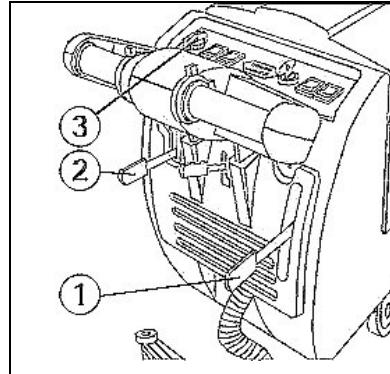


4. Turn off brush switch 1).
5. Turn off aspiration motor switch (2).
6. Move the machine to the water disposal point.
7. Turn key (3) to turn the machine off.

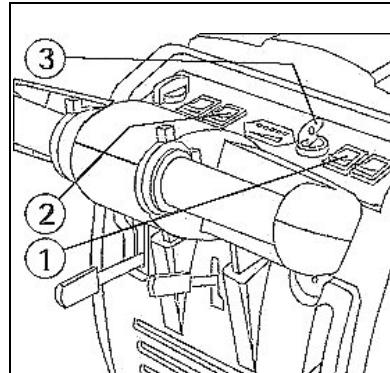

8. Lift hood (1). This frees recovery tank drain tube (2).
9. Remove the drain tube from its seat, unscrew the drain plug and empty the recovery tank (Lift the left side of the tank a few centimeters to accelerate final emptying phases). These operations must be performed wearing rubber gloves to protect against contact with dangerous solutions.
10. The squeegee should be raised when the machine is not in use to prevent permanent distortion of the rubber strips.
11. Remove the brushes and clean them with a jet of water (see "BRUSH REMOVAL" below).




**ATTENTION!** This operation has to be carried out using gloves to protect from contact with dangerous solutions.

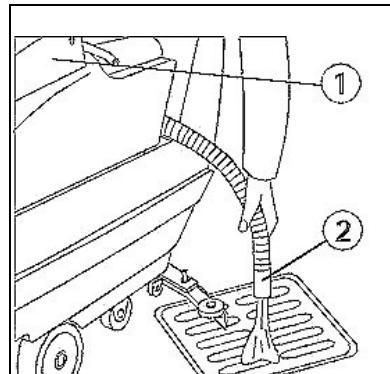

12. Push the knob (1) toward the rearpart of the machine and unhook the splash guard.
13. Extract the hopper and clean it thoroughly.



**ATTENTION!** This operation has to be carried out using gloves to protect from contact with dangerous solutions.

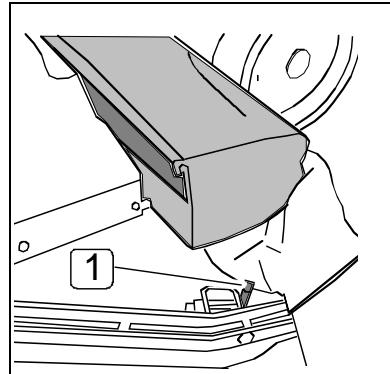

14. Lift the sweeping group on completion of the work to avoid brushes deformation.




## DAILY MAINTENANCE

### 1. CLEANING RECOVERY TANK

1. Open the hood (1).
2. Remove the drain tube (2) from its seat.
3. Empty the tank through the drain tube by turning the knob a few turns and then pulling out the plug.




**ATTENTION!** This operation has to be carried out using gloves to protect from contact with dangerous solutions.

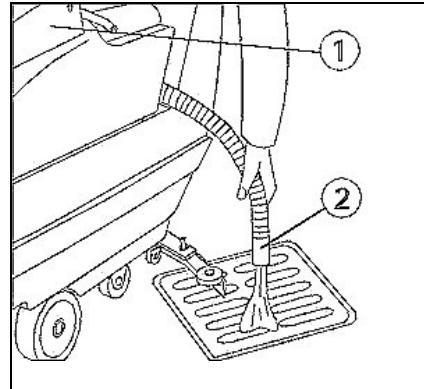

1. Remove plug (1) from the recovery tank..
2. Pull out the filter with its foam-protection unit.
3. Rinse the inside of the tank thoroughly with a jet of water. Slightly lift the tank, using its handle, to improve dirt removal.
4. Put the tank back in the machine and put the plug back on the drain tube.




**ATTENTION!** This operation has to be carried out using gloves to protect from contact with dangerous solutions.

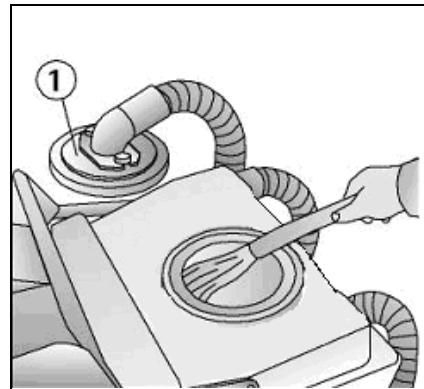

### 2. CLEANING THE SUCTION FILTER


1. Remove the suction unit from the tank.
2. Remove the black guard by making a circular movement (1).
3. Detach filter (2) and clean it carefully with a jet of water.
4. Reinstall everything by performing these procedures in reverse order

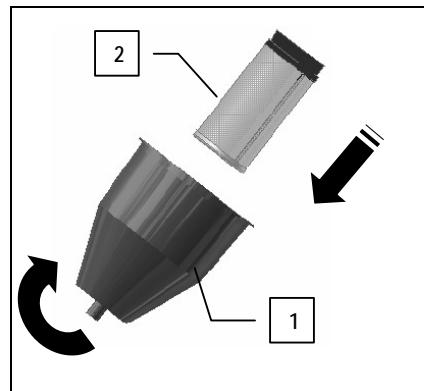

### 3. CLEANING THE SQUEEGEE

The squeegee must be in perfect working condition to achieve a good drying process: it must be clean and its rubbers must be in good condition. Proceed as follows to clean the squeegee:

1. Remove it from the machine by pulling pin (1) out from column (2). Clean the interior with a jet of water.
2. Loosen knobs (3), remove block (4) and check that there is no dirt inside.
3. Check the condition of the rubbers and replace them as necessary.
4. Replace everything on the machine.

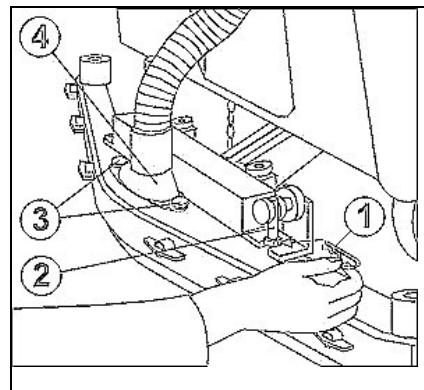




## DAILY MAINTENANCE

### 4. REPLACEMENT OF THE SQUEEGEE RUBBERS

Check the squeegee rubber wear and if necessary, change them. To replace them:

1. Take off the suction hose from its coupling.
2. Take off the pin from the stud bolt.
3. Remove the squeegee from its support.
4. Remove the wing nuts which block the rubber blades and take them off.
5. Replace the rubbers.
6. To reassemble the squeegee repeat the abovementioned operations.

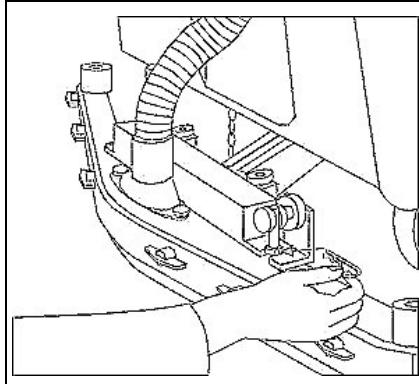


### 5. MANUAL BRUSHES REMOVAL

7. Push lever (1) down to raise the base.
8. Turn key (2) to OFF and remove it from the control panel (removing the brushes with power on may cause injury to the hands).




**ATTENTION!** During this operation make sure that, there are not any objects or persons close to the brush.

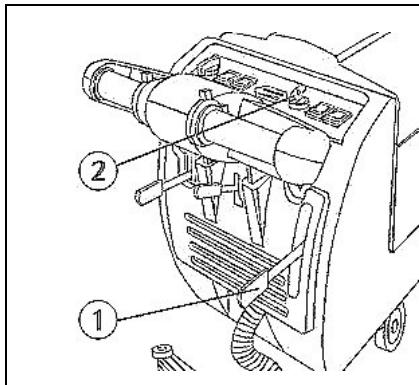

1. Rotate the brush, with the base raised, until it exits from the brush-bearing plate as illustrated. The picture shows the direction of rotation for releasing the right brush. Rotate in the opposite direction for the left brush.
2. For single brush versions the procedure is the same and the rotation direction for brush release is the opposite of what indicated on the picture.




**ATTENTION!** During this operation make sure that, there are not any objects or persons close to the brush.

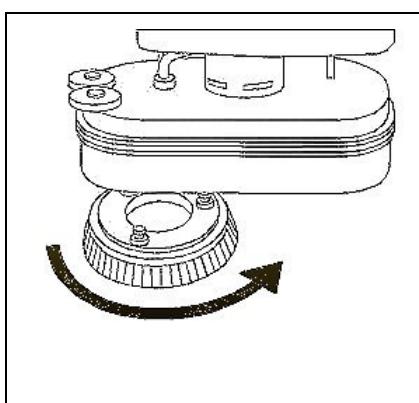

### 6. DISASSEMBLY OF BRUSHES (Only scrubbing-sweeping models)

To take off the brooms:


1. Lift the brush base acting upon the lever (2)
2. Brake the machine acting upon the lever (1)

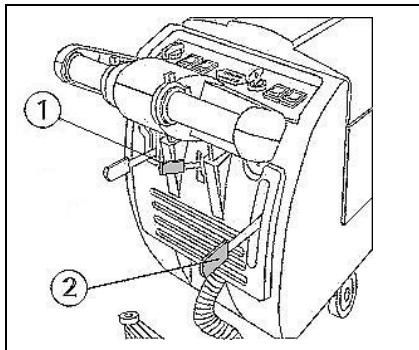



## DAILY MAINTENANCE


3. Clean the hopper as under item 13, paragraph "ON COMPLETION OF THE WORK"
4. Make sure that, at the brushes ends nothing is coiled up like wires, plastic or anything else which does not allow the free brushes rotation. Otherwise:
  1. Unscrew the wing nut (1)
  2. Take off the plate (2)
  3. Remove the splash guard (3)

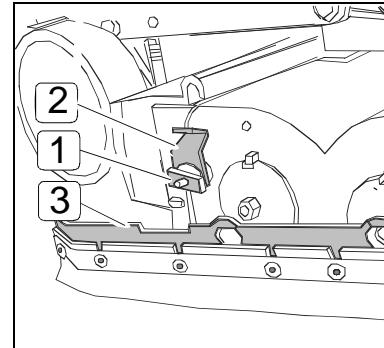

4. Take off the plugs (1)
5. Extract and clean the brushes .




**ATTENTION!** Make sure that, during this operation the general key is turned into position "0"

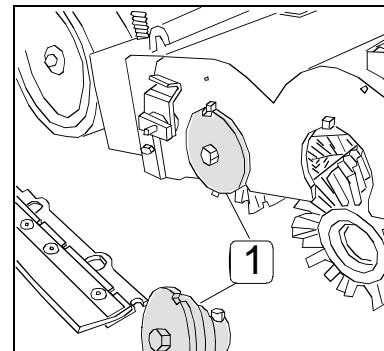

### 7. BRUSH REMOVAL WITH AUTOMATIC COUPLING-RELEASE (Optional)

Turn the brushes switch off and press the brushes/brush release button until the brushes release.

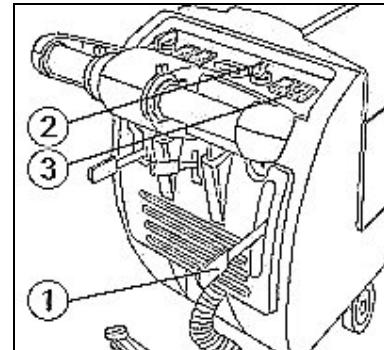



## WEEKLY MAINTENANCE


### 1. CLEANING OF THE SQUEEGEE HOSE

Weekly or whenever suction seems to be unsatisfactory check that the squeegee hose is not obstructed. Eventually, clean it proceeding as follows:

5. Take off the hose from its coupling on the squeegee
6. Take off the other end from the recovery tank.
7. Wash the inner part of the hose with a water jet introduced from the side where it is being connected to the tank.
8. To reassemble the hose repeat the above-mentioned operations inversely.



**ATTENTION!** Do not wash the hose, which goes from the suction motor to the suction plug.

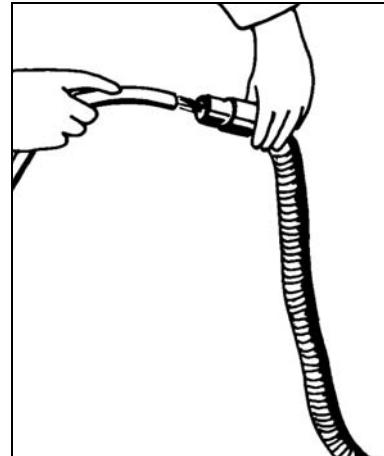


### 2. CLEANING SOLUTION TANK

1. Unscrew the plug on the solution tank
2. Rinse with a water jet
3. Unscrew the exhaust plug (1) and empty the tank



**ATTENTION!** This operation has to be carried out using gloves to protect from contact with dangerous solutions.

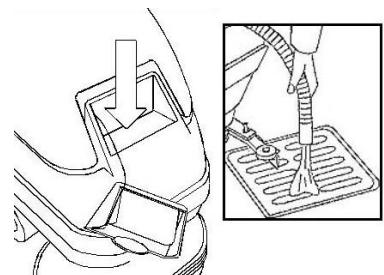




## TROUBLE SHOOTING GUIDE


### 1. INSUFFICIENT WATER ON TO THE BRUSH

4. Check that the cock is open (signal lamp on).
5. Check that there is water in the solution tank.

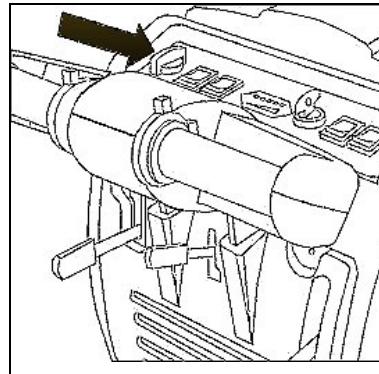

### 2. MACHINE DOES NOT CLEAN WELL

6. Check the condition of the brushes and replace if necessary (brushes must be replaced when bristles are 15 mm. high).
7. Check that brush pressure is sufficient. Increase as necessary using lever (1).
8. Use another type of brush rather than the standard brush. We recommend, to clean floors with exceptionally difficult dirt, the use of special brushes that are supplied on request and according to your specific needs (see "BRUSH SELECTION AND USE" below).

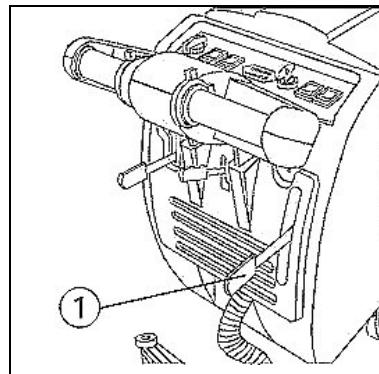


### 3. SQUEEGEE DOES NOT DRY PERFECTLY

1. Check that the squeegee is clean.
2. Check all adjustments (see "PREPARING THE MACHINE").
3. Clean the entire aspiration unit (see "DAILY MAINTENANCE")..
4. Replace worn rubbers.

### 4. SUCTION MOTOR DOES NOT WORK

1. Check if the suction motor switch (1) is ON. Check if the main key switch is ON.
2. Check if the recovery tank is full.

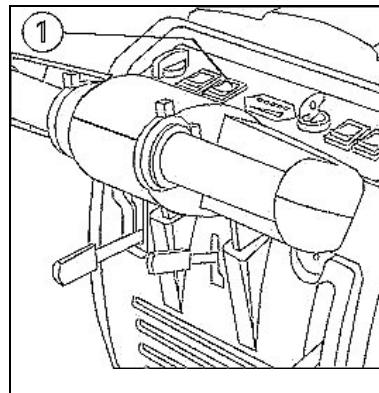

### 5. TOO MUCH FOAM FORMATION

1. Check that low-foam detergent is used. Add, if necessary, a small quantity of anti-foam liquid to the recovery tank.

Remember that more foam is generated when the floor to be cleaned is not very dirty. In this case use a more diluted detergent solution



## SMALTIMENTO



ATTENZIONE: Il prodotto, giunto a fine vita, deve essere conferito ai punti di raccolta differenziata messi a disposizione dell'utente finale.





## CHOICE AND USE OF BRUSHES

### POLYPROPYLENE BRUSH (PPL)

It is used on all types of floors which are hot water resistant (not more than 60°C). The Polypropylene brush is nonhygroscopic and therefore conserves its characteristics even if working in the wet conditions.

### NYLON BRUSH

It is used on all types of floors with excellent wear and hot water resistance (more than 60°C). The nylon is hygroscopic and so, over time, loses its characteristics working on the wet.

### ABRASIVE BRUSH

The brush bristles are charged with very aggressive abrasives. It is used to clean very dirty floors. To avoid floor damages, work strictly only with the necessary pressure.

### STEEL BRUSH

The bristles are made of steel wires; it is used to descale floors which are anyhow resistant to the abrasion, very uneven or with wide joints.

### THICKNESS OF THE BRISTLES

The thicker the bristles are, the more rigid they will be. These ones are therefore used on smooth floors or with small joints. On uneven floors with deep joints it is recommended that, softer bristles, which enter more easily in depth, are used.

Please bear in mind that, when the bristles are worn out and get too short, they will get rigid and cannot penetrate anymore. As well as for thick bristles, the brush will begin to jump.

### PAD HOLDER

The pad holder is recommended to clean glossy areas.

There are two types of pad holders:

1. The traditional pad holder is equipped with anchor points, which allow the abrasive pad to be held and dragged during the work process.
2. The pad holder is of the CENTER LOCK type, apart from the anchor points, is equipped with a central blocking release system made in plastic. This allows a perfect match with the abrasive pad and to hold it without the risk of falling down. This type of pad holder is recommended especially for machines with more brushes, where the centering of the pads is difficult.

### LIST FOR THE CHOICE OF THE BRUSHES

Machine	Q.ty	Code	Bristles type	Thick Ø	Brush	Notes
MAXIMA 450	1	404645	PPL	0.4	455	Pad blocking
		404644	PPL	0.6	455	
		404643	PPL	0.8	455	
		404646	ABRASIVE	1	455	
		405523	Pad holder Center Lock	-	455	
MAXIMA 500	1	414266	PPL	0.4	500	Pad blocking
		414267	PPL	0.6	500	
		414268	PPL	0.8	500	
		414269	ABRASIVE	1	500	
		405527	Pad holder Center Lock	-	500	
MAXIMA 452	2	405578	PPL	0.3	210	
		405579	PPL	0.6	210	
		405580	PPL	0.8	210	
		414274	ABRASIVE	1	210	
		405510	Pad holder	-	210	
MAXIMA 502	2	405601	PPL	0.3	255	
		405604	PPL	0.6	255	
		405602	PPL	0.8	255	
		405603	ABRASIVE	1	255	
		405513	Pad holder	-	255	
MAXIMA 650	2	422189	PPL	0.3	340	Pad blocking
		422971	PPL	0.6	340	
		422972	PPL	0.9	340	
		422981	ABRASIVE	1	340	
		422973	Pad holder	-	330	
MAXIMA 50BS-BTS	1	405639	PPL WHITE	0.5	110x500	Front brush more rigid
	1	405640	PPL LIGHT BLUE	0.3	110x500	Rear brush
	1	405641	ABRASIVE GREY	0.6	110x500	Front brush



CE STATEMENT OF COMPLIANCE model Maxima 450/500/452/502/650/50

The undersigned company:

FIMAP S.p.A.

Via Invalidi del Lavoro n.1

37050 Santa Maria di Zevio (VR)

states under its own exclusive responsibility that the product

FLOOR SCRUBBING MACHINE model Maxima 450/500/452/502/650/50

complies with the provisions of Directives:

- 98/37/EEC: Machine directive.
- 89/336/EEC: Electromagnetic compatibility directive and following modifications 91/263/EEC, 92/31/EEC and 93/68/EEC.

Inoltre è conforme alle seguenti norme:


- EN 60335-1: Safety of electric home appliances and the like – Safety. Part 1: General regulations.
- EN 60335-2-72: Safety of electric home appliances and the like. Part 2: Special regulations for automatic machines for processing industrial and community-use floors.
- EN 12100-1: Machine safety – Basic concepts, general design principles – Part 1: Base terminology and methodology.
- EN 12100-2: Machine safety – Basic concepts, general design principles – Part 2: Technical principles.
- EN 61000-6-3: Electromagnetic compatibility (EMC) - Part 6-3: General standards – Emission for residential, commercial and light industrial environments.
- EN 61000-6-1: Electromagnetic compatibility (EMC) - Part 6-1: General standards – Immunity for residential, commercial and light industrial environments.
- EN 50366: Appliances for home use and the like – Electromagnetic fields – Evaluation and measurement methods.

Santa Maria di Zevio, 05/02/2007

FIMAP S.p.A.  
Legal Representative


Giancarlo Ruffo

**GRUPPO BASAMENTO SPAZZOLE MAXIMA 650BT**  
**BRUSHES BASE ASSEMBLY**  
**GROUPE PLATEAU DES BROSSES**  
**GRUPPE BUERSTENGESTELL**  
**GRUPO BANCADA CEPILLOS**

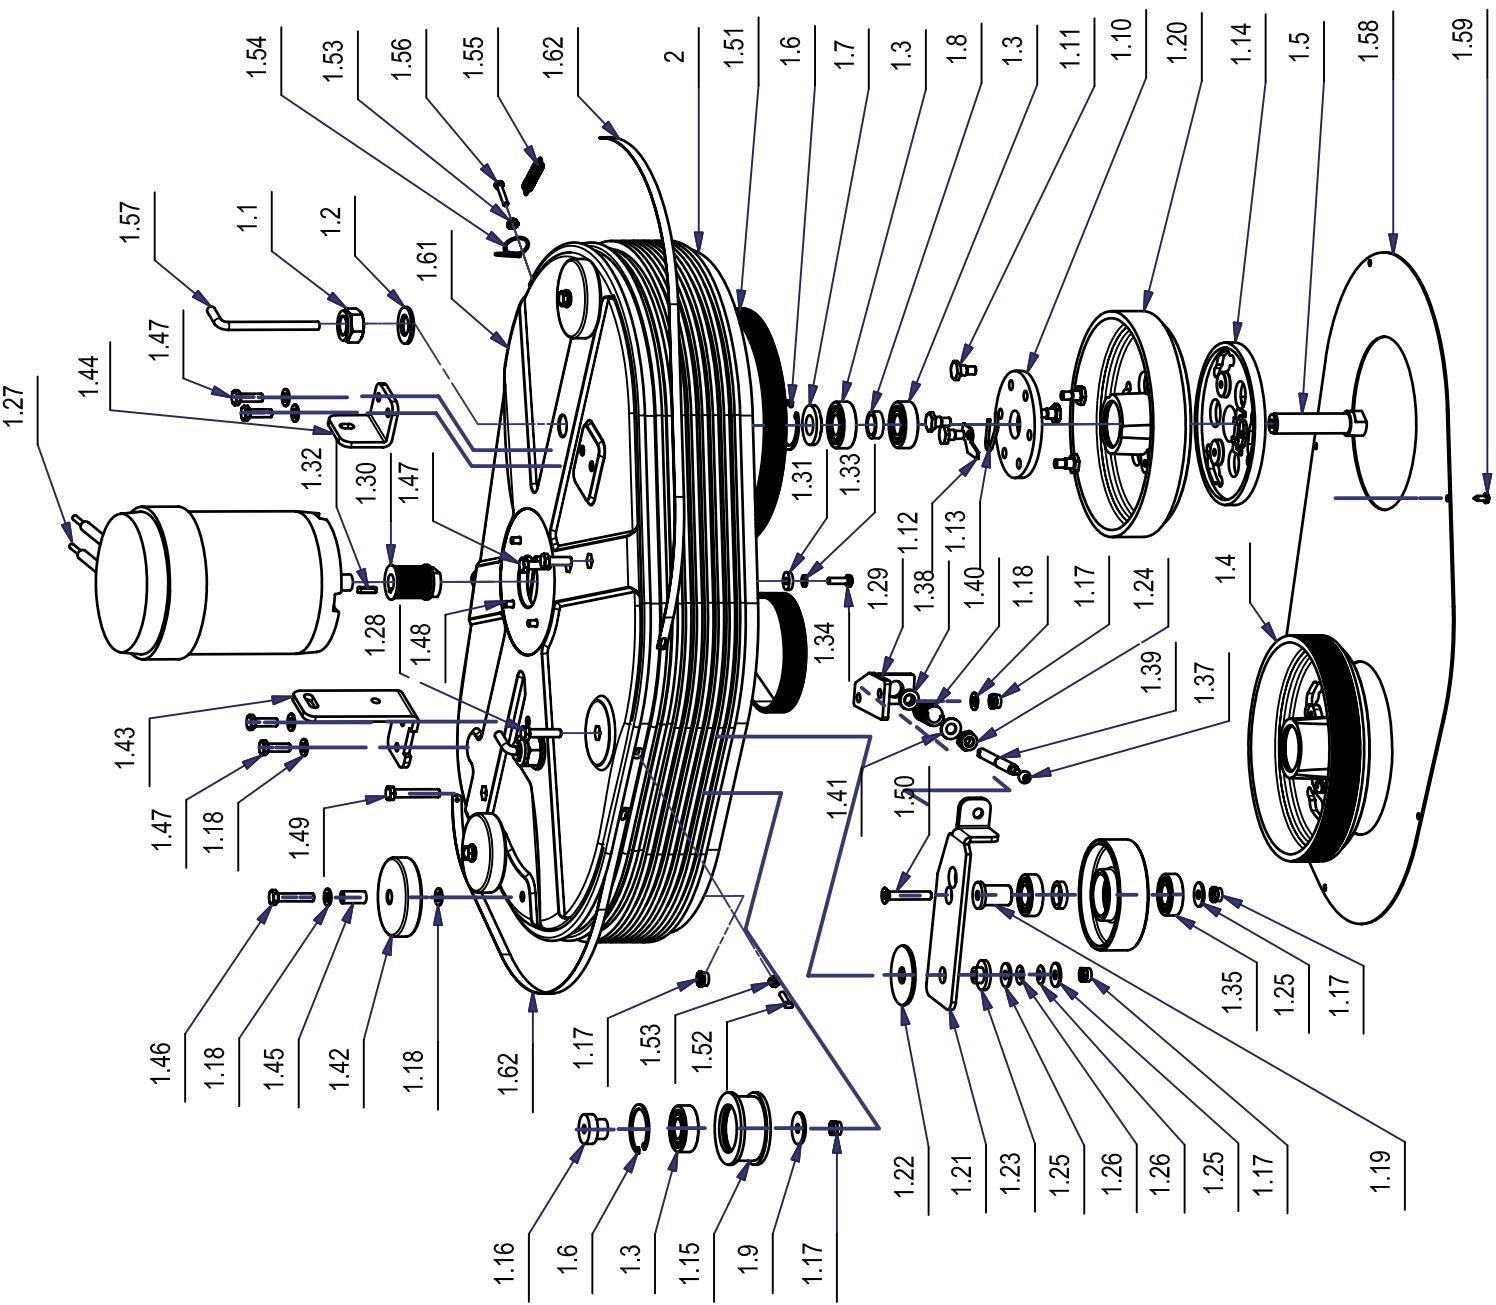

TAV.01D	rev.00	GRUPPO BASAMENTO SPAZZOLE MAXIMA 650	Denominazione	Description	Benennung	Descripción
Pos.	Mod.	Codice	Q.tà	Denominazione		
1	1	213390	PREM. BASAMENTO MAXIMA 650	BRUSH BASE	BÜRSTENGESTELL	BANCADA CEPILLO
1.1	2	409099	DADO M20x17x1,5 AUTOB. UNI	NUT	MUTTER	TUERCA
1.2	2	409230	ROSETTA 21x37x3 UNI 6592 ZINC	WASHER	UNTERLAGSCHEIBE	ARANDELA
1.3	5	408435	CUSCINETTO SF.6204-	BEARING	LAGER	COJINETE
1.4	1	210260	PULEGGIA UNI 9366-12 PJ D=228	PULLEY	RIEMENSCHIEBE	PULEA
1.5	2	400318	ALBERO PORTASPAZZOLE D=20	SHAFT	WELLE	EJE
1.6	3	408335	SEEGER I4/7 UNI 7437	SEEGER RING	SEEGERRING	ANILLO SEEGER
1.7	2	210096	DISTANZIALE D=40-27 d=20 S=8	SPACER	DISTANZHÜLSE	DISTANCIADOR
1.8	2	210071	DISTANZIALE D=27 d=20 S=8 AVP	SPACER	ENTRETOISE	DISTANCIADOR
1.9	1	409180	ROSETTA 9x32x2,5 UNI 6593 ZINC	WASHER	UNTERLAGSCHEIBE	ARANDELA
1.10	2	400634	GIUNTO ELASTICO D=108 H=8	FLEXIBLE COUPLING	GUMMIKUPPLUNG	ACOPLAMIENTO
1.11	12	203269	COLONNETTA PER GIUNTO	STUD BOLT	GEWINDEBOLZEN	PRISIONERO
1.12	2	203268	PIASTRINA DI SICUREZZA	PLAQUE	BEFESTIGUNGSAUFL	PLAQUETA
1.13	2	408128	MOLLA BLOCCAGGIO SPAZZOLA	SPRING	FEDER	RESORT
1.14	2	400413	PIATTO PORTASPAZZOLA D=164	BRUSH PLATE	PLATO	PLATO
1.15	1	202519	PULEGGIA TENDICINGHIA D=164	PULLEY	BÜRSTENTRÄGER	PULEA
1.16	1	204372	PERNO TENDICINGHIA MOBILE	AXE TENDEUR	SPANNER BOLZEN	PERNO TENDEDOR
1.17	12	409085	DADO M8x8,5 AUTOBL. UNI 7474	ECROU	SICHERUNGSMUTTE	TUERCA
1.18	12	409175	ROSETTA 8x17x1,6 UNI 6592	RONDELLE	UNTERLAGSCHEIBE	ARANDELA
1.19	1	213380	PERNO TENDICINGHIA MOBILE	AXE	BOLZEN	PERNO
1.20	1	210285	PULEGGIA LISCA D=228 S=45	POULE	RIEMENSCHIEBE	PULEA
1.21	1	203254	TENDICINGHIA MOBILE	TENDEUR	SPANNER	TENDEDOR
1.22	1	400320	RONDELLA D=60 d=6,1 S=3	RONDELLE	UNTERLAGSCHEIBE	ARANDELA
1.23	1	408031	BOCCOLA D=30-15,8 d=8 S=12	BAGUE	BUCHSE	BUCHSE
1.24	1	409090	DADO M10x10 AUTOBL. UNI 7474	ECROU	SICHERUNGSMUTTE	TUERCA
1.25	3	409179	ROSETTA 9x24x2,5 UNI 6593 ZINC	RONDELLE	UNTERLAGSCHEIBE	ARANDELA
1.26	2	409178	MOLLA A TAZZA 8x18x1	RONDELLE CONCAVE	TELLERFEDER	ARANDELA CONCAVA
1.27	1	407711	MOTORE 24V 560W 1400RPM	MOTOR	MOTOR	MOTOR
1.28	1	408678	VITE M8x35 TE UNI 5739 ZINC	SCREW	SCHRAUBE	TORNILLO
1.29	1	203234	SUPPORTO TENDICINGHIA	SUPPORT	HALTERUNG	SOPORTE
1.30	1	202502	PULEGGIA UNI 9366-14 PJ D=32	MOTOR PULLEY	RIEMENSCHIEBE	POLEA DE MOTOR
1.31	1	205112	DISTANZIALE D=18 d=6,5 S=4	WASHER	UNTERLAGSCHEIBE	ARANDELA
1.32	1	408402	CHIAVETTA 5X5X20 UNI 6604/69	KEY	KEIL	CLAVIJA
1.33	5	409164	ROSETTA GROVER 6x2,5x1,8	LOCK WASHER	ZAHNSCHEIBE	ARANDELLA
1.34	1	407666	VITE M6x20 TE UNI 5739 ZINC	SCREW	SCHRAUBE	TORNILLO
1.35	2	408434	CUSCINETTO SF.6004-2RS	BEARING	LAGER	COJINETE
1.36	1	209860	DISTANZIALE D=27 d=20 S=6,2	SPACER	DISTANZHÜLSE	DISTANCIADOR
1.37	1	204364	BOCCOLA SFERICA R=6 AVP	BUSHING	BUCHSE	CASQUILLO
1.38	1	408032	BOCCOLA D=20-16,9 d=10,2 S=8	BUSHING	BUCHSE	CASQUILLO
1.39	1	204368	REGISTRO TENDICINGHIA M10	ADJUSTER	DRUCKREGULIERUN	REGULADOR
1.40	1	408091	MOLLA COMPR. 20x3,5x32	SPRING	RESSORT	RESORTE

**GRUPPO BASAMENTO SPAZZOLE MAXIMA 650BT**  
**BRUSHES BASE ASSEMBLY**  
**GROUPE PLATEAU DES BROSSES**  
**GRUPPE BUERSTENGESTELL**  
**GRUPO BANCADA CEPILLOS**

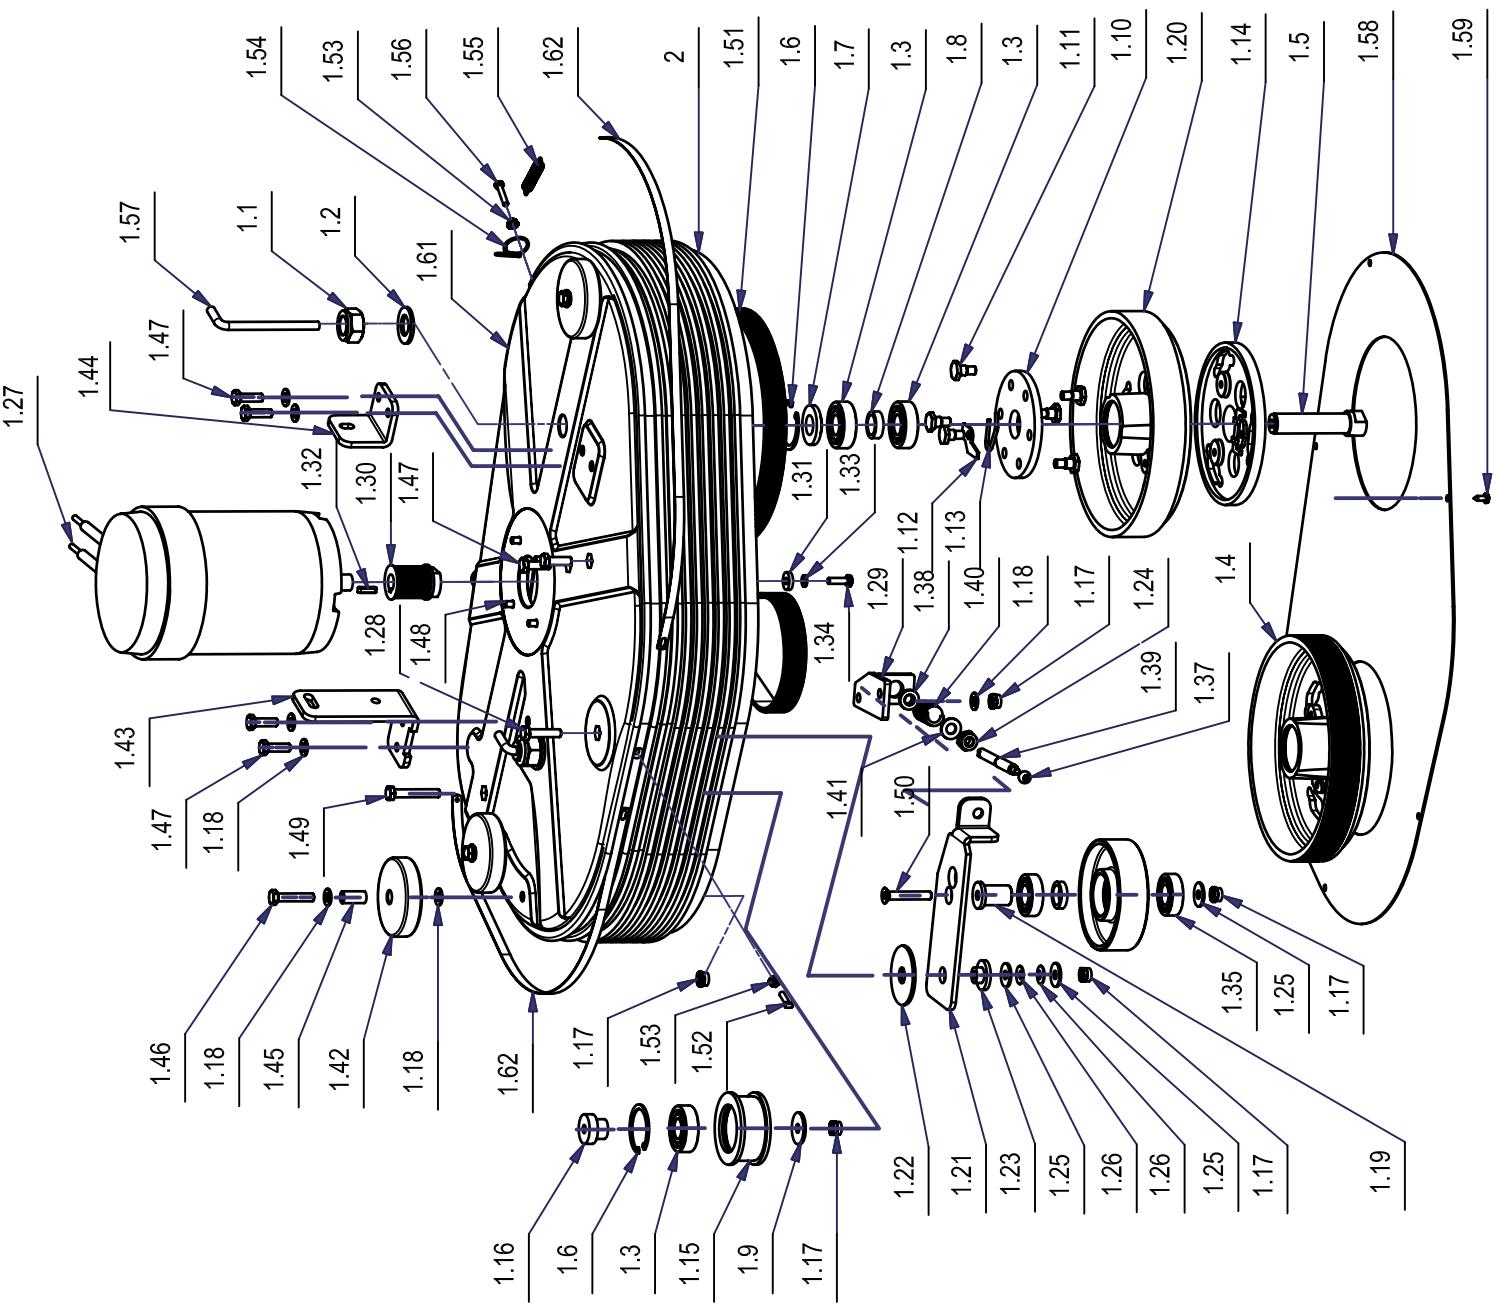


**TAV.01D rev.00 GRUPPO BASAMENTO SPAZZOLE MAXIMA 650**

Pos.	Mod.	Codice	Q.tà	Denominazione	Denomination	Description	Benennung	Descripcion
1.41	1	409191		ROSETTA 10X21X2 UNI 6592	WASHER	RONDELLE	UNTERLAGSCHEIBE	ARANDELA
1.42	3	405708		RUOTA PARACOLPI D=80 L=23	WHEEL	ROUE	RAD	RUEDA
1.43	1	213374		STAFFA DX SUPPORTO	SUPPORT	SUPPORT	HALTERUNG	SOPORTE
1.44	1	213375		STAFFA SX SUPPORTO	SUPPORT	ATTIQUE	HALTERUNG	SOPORTE FIJADOR
1.45	3	408021		BOCCOLA D=12 d=9 S=24 OT58	BUSHING	BAGUE	BUCHSE	CASQUILLO
1.46	3	408679		VITE M8x40 TE UNI 5739 ZINC	SCREW	VIS	SCHRAUBE	TORNILLO
1.47	6	408674		VITE M8x25 TE UNI 5739 ZINC	SCREW	VIS	SCHRAUBE	TORNILLO
1.48	4	407663		VITE M6x16 TE UNI 5739 ZINC	SCREW	VIS	SCHRAUBE	TORNILLO
1.49	1	408692		VITE M8X50 TE UNI 5739 ZINC	SCREW	VIS	SCHRAUBE	TORNILLO
1.50	1	415831		VITE M8X50 TPSEI UNI 5933 ZINC	SCREW	VIS	SCHRAUBE	TORNILLO
1.51	1	421250		CINGHIA POLY V J10 L=1992	BELT	COURROIE	CORREA	RIEMEN
1.52	1	204949		VITE M5x20 A2 SPECIALE	SCREW	VIS	SCHRAUBE	TORNILLO
1.53	6	409124		DADO M5 SERPRESS	NUT	ECROU	MUTTER	TUERCA
1.54	2	400415		ANELLO AGGANCIO MOLLA	RING	ANNEAU	RING	ANILLO
1.55	2	408113		MOLLA 10x1.1x55	SPRING	RESSORT	RESORTE	TORNILLO
1.56	2	407651		VITE M5x25 TE UNI 5739 DIN 933	SCREW	VIS	SCHRAUBE	ROHR
1.57	2	400875		TUBO D=8 S=1 L=137 RAME	PIPE	TUBE	ABDECKUNG	CARTER
1.58	1	213941		CARTER COPRI PULEGGIE	COVER	CARTER	SCHRAUBE	TORNILLO
1.59	6	408883		VITE D.4,8x13 TCTC AUTOF. NICH	SCREW	VIS	RIEMENSCHEIBE	BURSTENGESTELL
1.60	1	213620		PULEGGIA TENDICINGHIA	PULLEY	POULIE	LISTON	LISTON
1.61	1	213376		BASAMENTO MAXIMA 650 BT	BRUSHES BASE	EMBASE DES	PARASPRUZZI	BANCADA CEPILLOS
1.62	2	400358		LISTELLO PARASPRUZZI L=640	BLADE	PLAQUETTE	SPRITZGUMMI	PARASALPICADURAS
	2	202247		PARASPRUZZI BASAMENTO	SPLASH GUARD	BAVETTE DE		

03

REV. 01

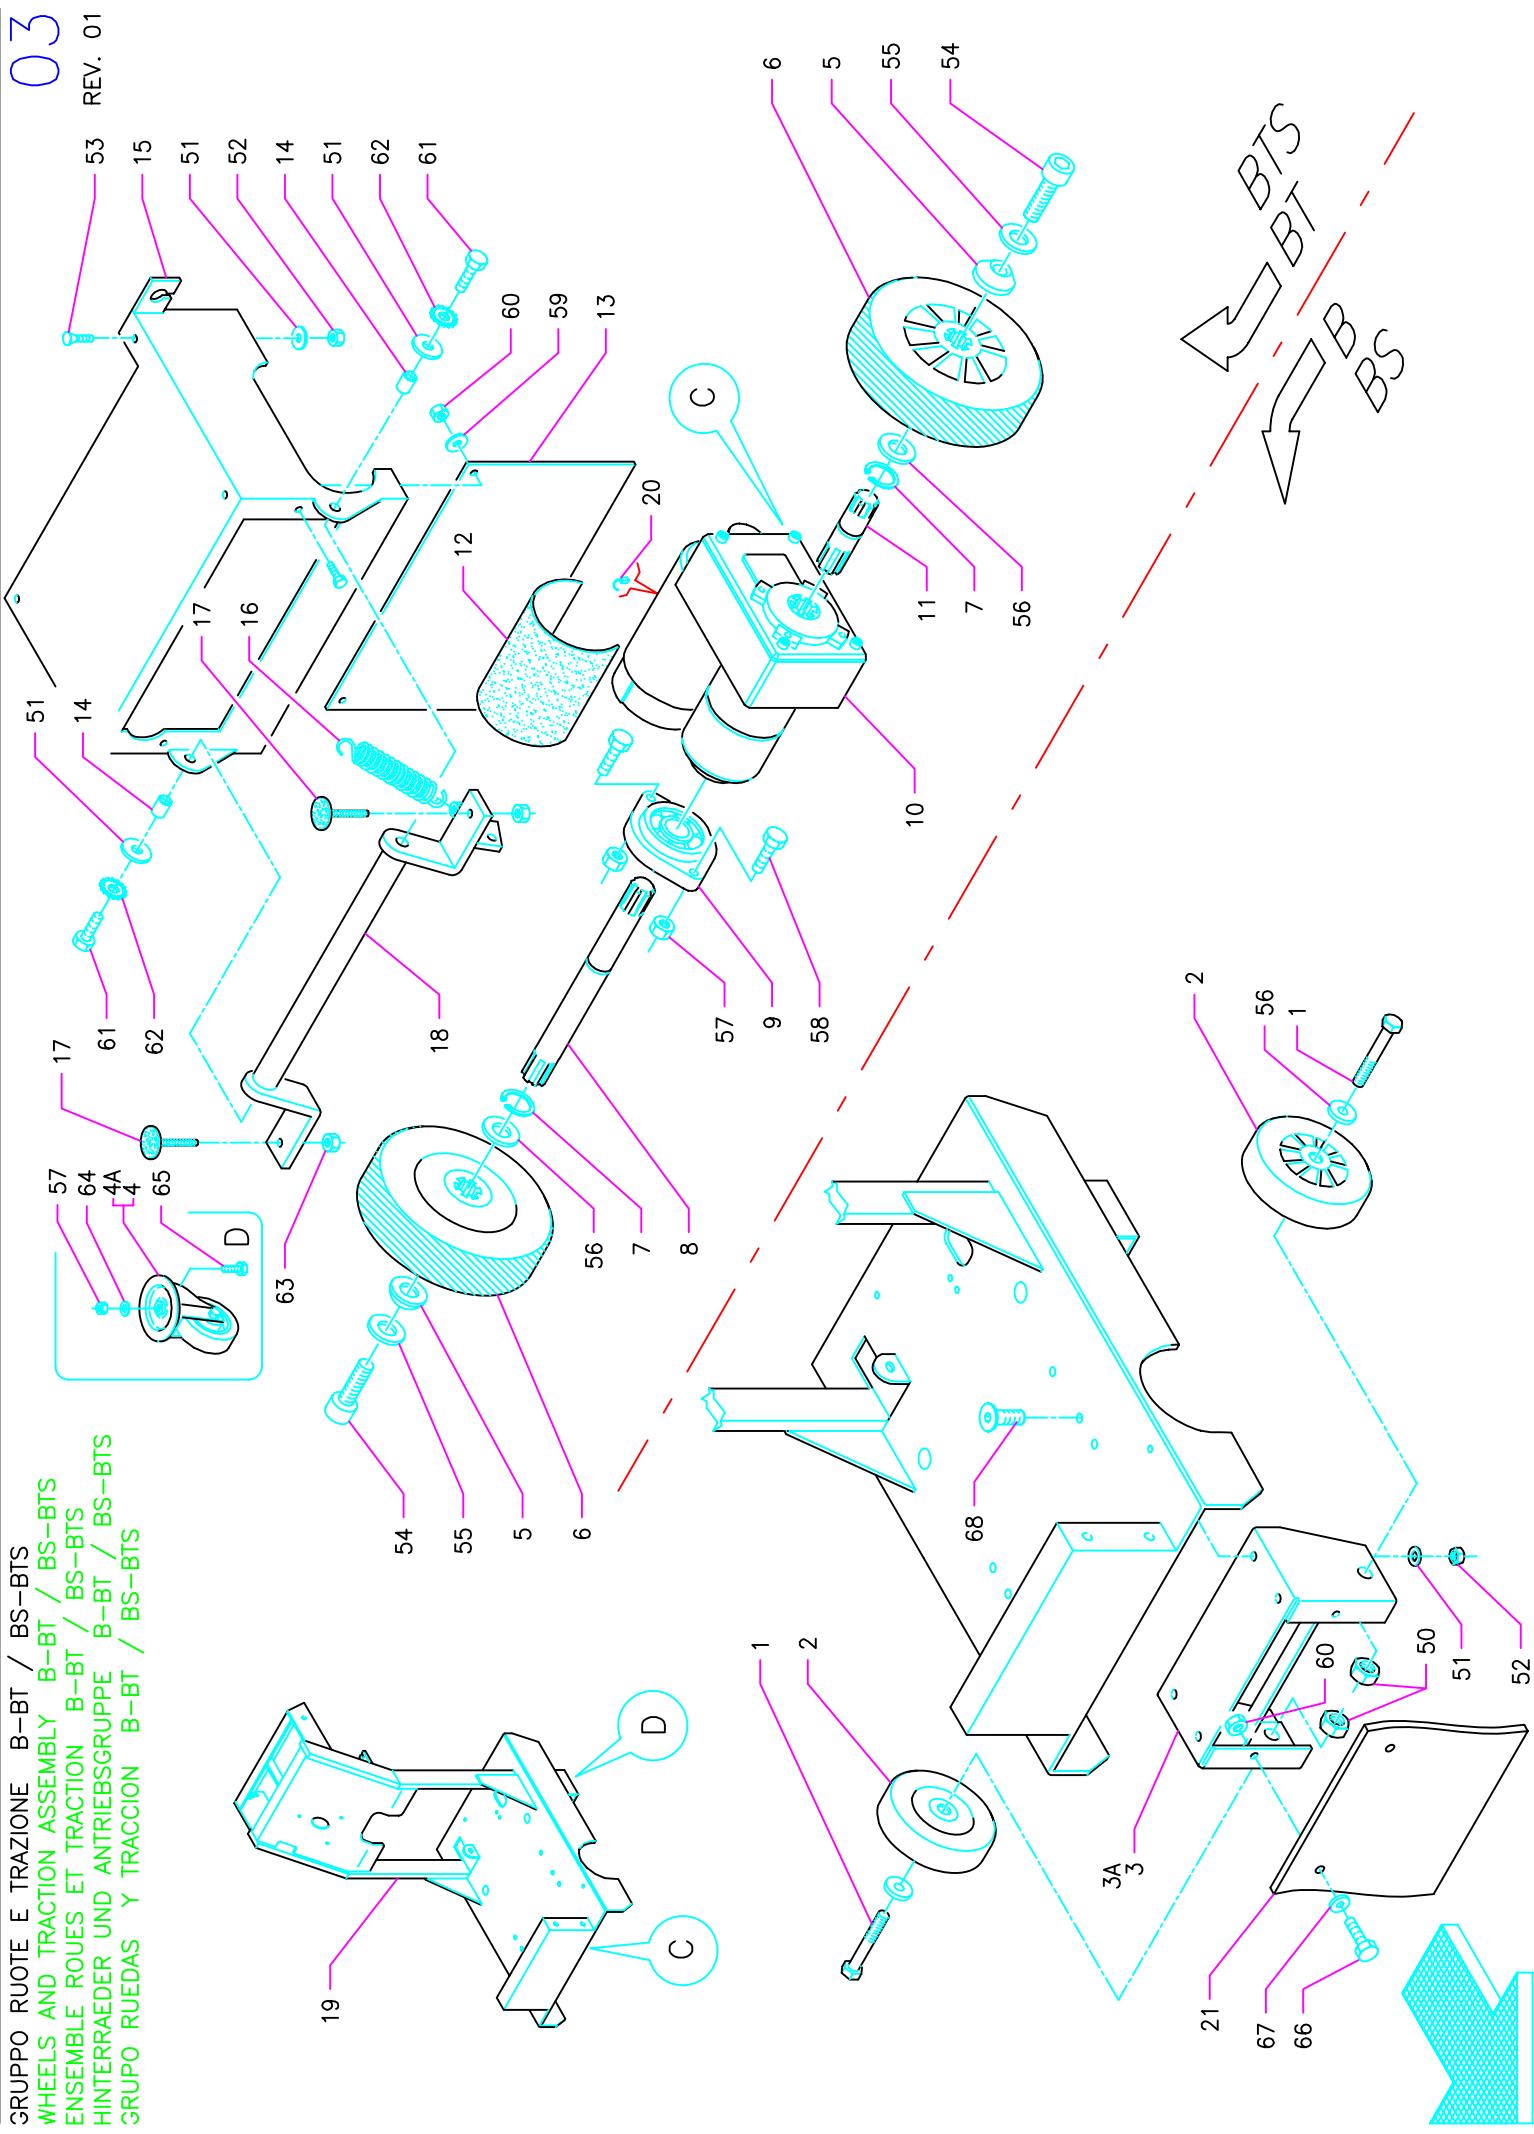


**TAV.03 rev.01**
**GRUPPO RUOTE E TRAZIONE BS-BTS / B-BT**

Po	Mod.	Codice	Q.tà	Denominazione	Denomination	Description	Bennnung	Descripcion
1	B-BS	203502	2	ASSE RUOTE	CENTRE LINE	AXE	ACHSE	EJE
2	B-BS	414314	2	RUOTA NON TRAZIONE	WHEEL	ROUE	RUEDA	RUEDA
3	B	203501	1	SUPPORTO RUOTE	SUPPORT	SUPPORT	SOPORTE	SOPORTE
3A	BS	203541	1	SUPPORTO RUOTE	SUPPORT	ROUE	LAGER	LAGER
4		405746	2	RUOTA PIVOTTANTE	WHEEL	ROUE	RAD	RAD
4A	45 BS-BTS	414332	2	RUOTA PIVOTTANTE	WHEEL	ROUE	RAD	RAD
5	BT-BTS	203292	2	RONDELLA RUOTA	WASHER	WASHER	SCHEIBE	ARANDELA
6	BT-BTS	405729	2	RUOTA TRAZIONE	WHEEL	ROUE	RAD	RUEDA
7	BT-BTS	408360	2	ANELLO SEEGER E20	SEEGER RING	SEEGERRING	ANILLO SEEGER	ANILLO SEEGER
8	BT-BTS	415135	1	SEMIASSE DX	AXLE-SHAFT	ACHSWELLE	SIMI-EJE	SIMI-EJE
9	BT-BTS	415675	1	SUPPORTO	SUPPORT	LAGER	SOPORTE	SOPORTE
10	BT-BTS	414603	1	MOTORIDUTTORE	GEARMOTOR	REDUZIERGETRIEBE	MOTORIDUCTOR	MOTORIDUCTOR
11	BT-BTS	415136	1	SEMIASSE SX	AXLE-SHAFT	ACHSWELLE	SIMI-EJE	SIMI-EJE
12	BT-BTS	405998	1	CUFFIA MOTORE	SHROUD	SAUGMOTORABDECKUNG	ANILLO DEL MOTOR	ANILLO DEL MOTOR
13	BT-BTS	405975	1	PARASPRUZZI CANTRALE	SPLASH GUARD	SPRITZGUMMI	PARASALPICADURAS	PARASALPICADURAS
14	BT-BTS	200325	2	BOCCOLA	BLUSHING	BUCHSE	CASQUILLO	CASQUILLO
15	BT-BTS	203500	1	SUPPORTO RUOTE	SUPPORT	LAGER	SOPORTE	SOPORTE
16	BT-BTS	202478	1	MOLLA	SPRING	FEDER	RESORTE	RESORTE
17	BT-BTS	204371	2	TAMPONE FRENO	PAD	SCHEIBE	ZAPATA	ZAPATA
18	BT-BTS	203504	1	ALBERO FRENO	SHAFT	WELLE	EJE	EJE
19		202566	1	TELAI	FRAME	FAHRGESTELL	BASTIDOR	BASTIDOR
20		415982	2	SPAZZOLA MOTORE 7X14X19 GM4E01	CARBON BRUSH MOTOR	KOHLEBURSTEN	ESCOBILLA MOTOR	ESCOBILLA MOTOR
21		405975	1	PARAFLUTTI	SPLASH GUARD	SPRITZGUMMI	PARASALPICADURAS	PARASALPICADURAS
50	-	-	-	DADO M16x1,5 AUTOBL UNI 7474	NUT	MUTTER	WERKZEUG	WERKZEUG
51	-	-	-	RONDELLA M8 UNI 6592	WASHER	SCHEIBE	ARANDELA	ARANDELA
52	-	-	-	DADO M8 AUTOBL. UNI 7474	NUT	MUTTER	WERKZEUG	WERKZEUG
53	-	-	-	VITE M8x16 UNI 5933	SCREW	SCHRAUBE	ARANDELA	ARANDELA
54	-	-	-	VITE M8x18 UNI 5931	SCREW	SCHRAUBE	ARANDELA	ARANDELA
55	-	-	-	RONDELLA M8 SCHNORR	WASHER	SCHEIBE	ARANDELA	ARANDELA
56	-	-	-	RONDELLA M20 UNI 6592	WASHER	SCHEIBE	ARANDELA	ARANDELA
57	-	-	-	DADO M10 AUTOBL. UNI 7474	NUT	MUTTER	WERKZEUG	WERKZEUG
58	-	-	-	VITE M10x20 UNI 5739	SCREW	SCHRAUBE	ARANDELA	ARANDELA
59	-	-	-	RONDELLA M6 UNI 6592	WASHER	SCHEIBE	ARANDELA	ARANDELA
60	-	-	-	DADO M6 AUTOBL. UNI 7474	NUT	MUTTER	WERKZEUG	WERKZEUG
61	-	-	-	VITE M8x20 UNI 5739	SCREW	SCHRAUBE	ARANDELA	ARANDELA
62	-	-	-	RONDELLA M8 DIN 6798/A	WASHER	SCHEIBE	ARANDELA	ARANDELA
63	-	-	-	DADO M8 AUTOBL. UNI 7474	NUT	MUTTER	WERKZEUG	WERKZEUG
64	-	-	-	RONDELLA M10 UNI 6592	WASHER	SCHEIBE	ARANDELA	ARANDELA
65	-	-	-	VITE M10x35 UNI 5739	SCREW	SCHRAUBE	ARANDELA	ARANDELA
66	-	-	-	VITE M6X16 UNI 5739	SCREW	SCHRAUBE	ARANDELA	ARANDELA
67	-	-	-	ROSETTA M6 D.18 UNI 6593	WASHER	SCHEIBE	ARANDELA	ARANDELA
68	-	-	-	VITE M8X22 UNI 5933	SCREW	SCHRAUBE	TORNILLO	TORNILLO

GRUPPO TERGIPIAVIMENTO MAXIMA 650BT  
SQUEEGEE ASSEMBLY  
GRUPO LIMPIAPIAVIMENTOS  
ENSEMBLE DE SUCEUR  
SAUGFUSSGRUPPE

04A

REV. 00

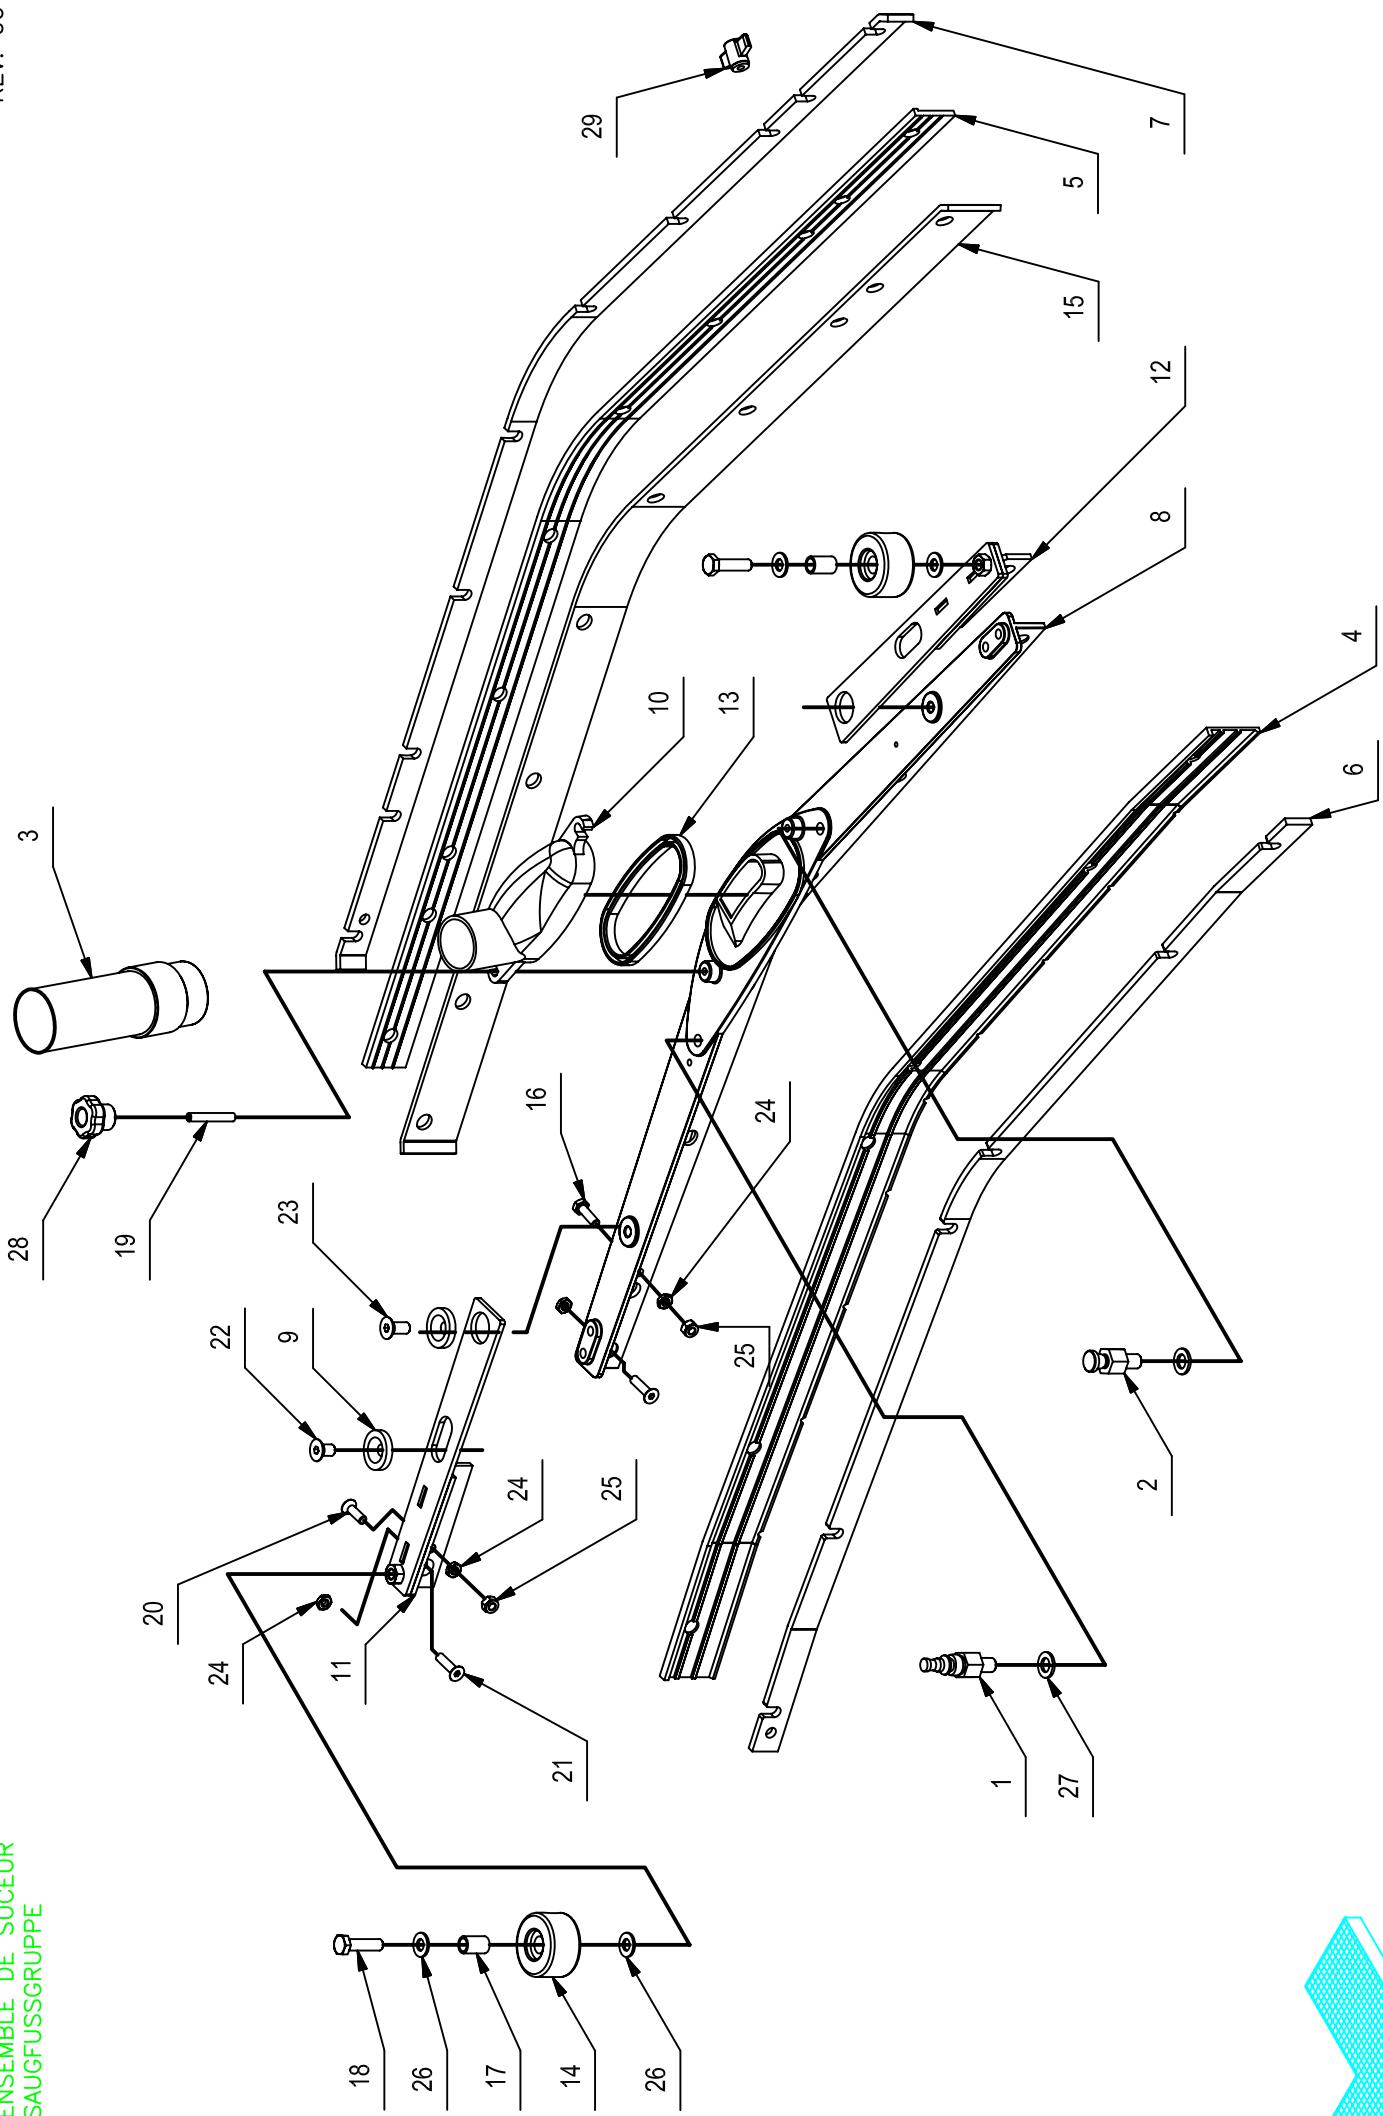


**TAV.04A rev.00**
**GRUPPO TERGIPAVIMENTO MAXIMA 650**

Pos.	Mod.	Codice	Q.tà	Denominazione	Denomination	Description	Benennung	Descripcion
1	206805	1	1	COLONNETTA AGGANCIO M10	STUD BOLT	TIGE	GEWINDEBOLZEN	PRISIONERO
2	206806	1	1	COLONNETTA AGGANCIO TERGI	STUD BOLT	TIGE	GEWINDEBOLZEN	PRISIONERO
3	209529	1	1	TUBO DIAM.38X1050 ASP.CON	SUCTION HOSE	FLEXIBLE	SAUGSCHLAUCH	TUBO DE
4	209707	1	1	GOMMA ANTERIORE PU	FRONT RUBBER	VORDERER	HINTERER	GOMA DELANTERA
5	209708	1	1	GOMMA POSTERIORE PU	REAR RUBBER	HINTERER	LEISTE	GOMA TRASERA
6	210048	1	1	LAMA PREMIGOMMA ANTERIORE	BLADE	PLAQUETTE	LEISTE	LISTON
7	210049	1	1	LAMA PREMIGOMMA	BLADE	PLAQUETTE	LEISTE	LISTON
8	210349	1	1	CORPO TERGIPAVIMENTO	CORPS DE SUCEUR	CORPS DE SUCEUR	SAUFUSSKÖRPER	CUERPO
9	210511	4	4	RONDELLA SVASATA 8x28x5	WASHER	RONDELLE	UNTERLAGSCHEIBE	ARANDELA
10	400722	1	1	BOCCHETTA TERGIPAVIMENTO	OPENING	BUSE	ÖFFNUNG	BOQUILLA
11	400836	1	1	PROLUNGA DX TERGI	EXTENSION TUBE	TUBE D'EXTENSION	VERLÄNGERUNGSST	TUBO DE EXTENSION
12	400837	1	1	PROLUNGA SX TERGI	EXTENSION TUBE	TUBE D'EXTENSION	VERLÄNGERUNGSST	TUBO DE EXTENSION
13	405471	1	1	GUARNIZIONE BOCCHETTA	GASKET OPENING	JOINT BUSE	DICHTUNG OFFNUNG	JUNTA BOQUILLA
14	405707	2	2	RUOTA PARACOLPI D=45 S=25	WHEEL	ROUE	RAD	RUEDA
15	406183	1	1	GOMMA CENT. TERGIP. PARA 33	CENTRAL RUBBER	BAVETTE CENTRALE	ZENTRALSAUGGUMM	GOMA CENTRAL
16	407667	4	4	VITE M6x20 TE UNI 5739 A2	SCREW	VIS	SCHRAUBE	TORNILLO
17	408033	2	2	BOCCOLA D=12 d=9 S=18,5 OT63	BUSHING	BAGUE	BUCHSE	CASQUILLO
18	408676	2	2	VITE M8x30 TE UNI 5739 ZINC	SCREW	VIS	SCHRAUBE	TORNILLO
19	408905	2	2	GRANO M6x40 EI UNI5923 A2	DOWEL	VIS CYLINDRIQUE	MADENSCHRAUBE	TORNILLO
20	408967	2	2	VITE M6x20 TPSEI UNI 5933 A2	SCREW	VIS	SCHRAUBE	TORNILLO
21	408972	10	10	VITE M6x25 TPSEI UNI 5933 A2	SCREW	VIS	SCHRAUBE	TORNILLO
22	408980	2	2	VITE M8x14 TPSEI UNI 5933 ZINC	SCREW	VIS	SCHRAUBE	TORNILLO
23	408988	2	2	VITE M8x18 TPSEI UNI 5933 ZINC	SCREW	VIS	SCHRAUBE	TORNILLO
24	409045	16	16	DADO M6x3 UNI 5590 A2	NUT	ECROU	MUTTER	TUERCA
25	409083	6	6	DADO M6x6 AUTUBL. UNI 7474 A2	NUT	ECROU	MUTTER	TUERCA
26	409175	4	4	ROSETTA 8x17x1,6 UNI 6592	WASHER	RONDELLE	UNTERLAGSCHEIBE	ARANDELA
27	409196	2	2	ROSETTA GROWER 10x18x2,2	LOCK WASHER	RONDELLE FREIN	ZAHNSCHEIBE	ARANDELLA
28	410230	2	2	POMELLO VB30 M6	KNOB	POMMEAU	RENDELSCHRAUBE	POMO
29	410231	10	10	GALLETTO M6x13	WING NUT	PAPILLON	FLÜGELSCHRAUBE	POMO

06

REV. 03

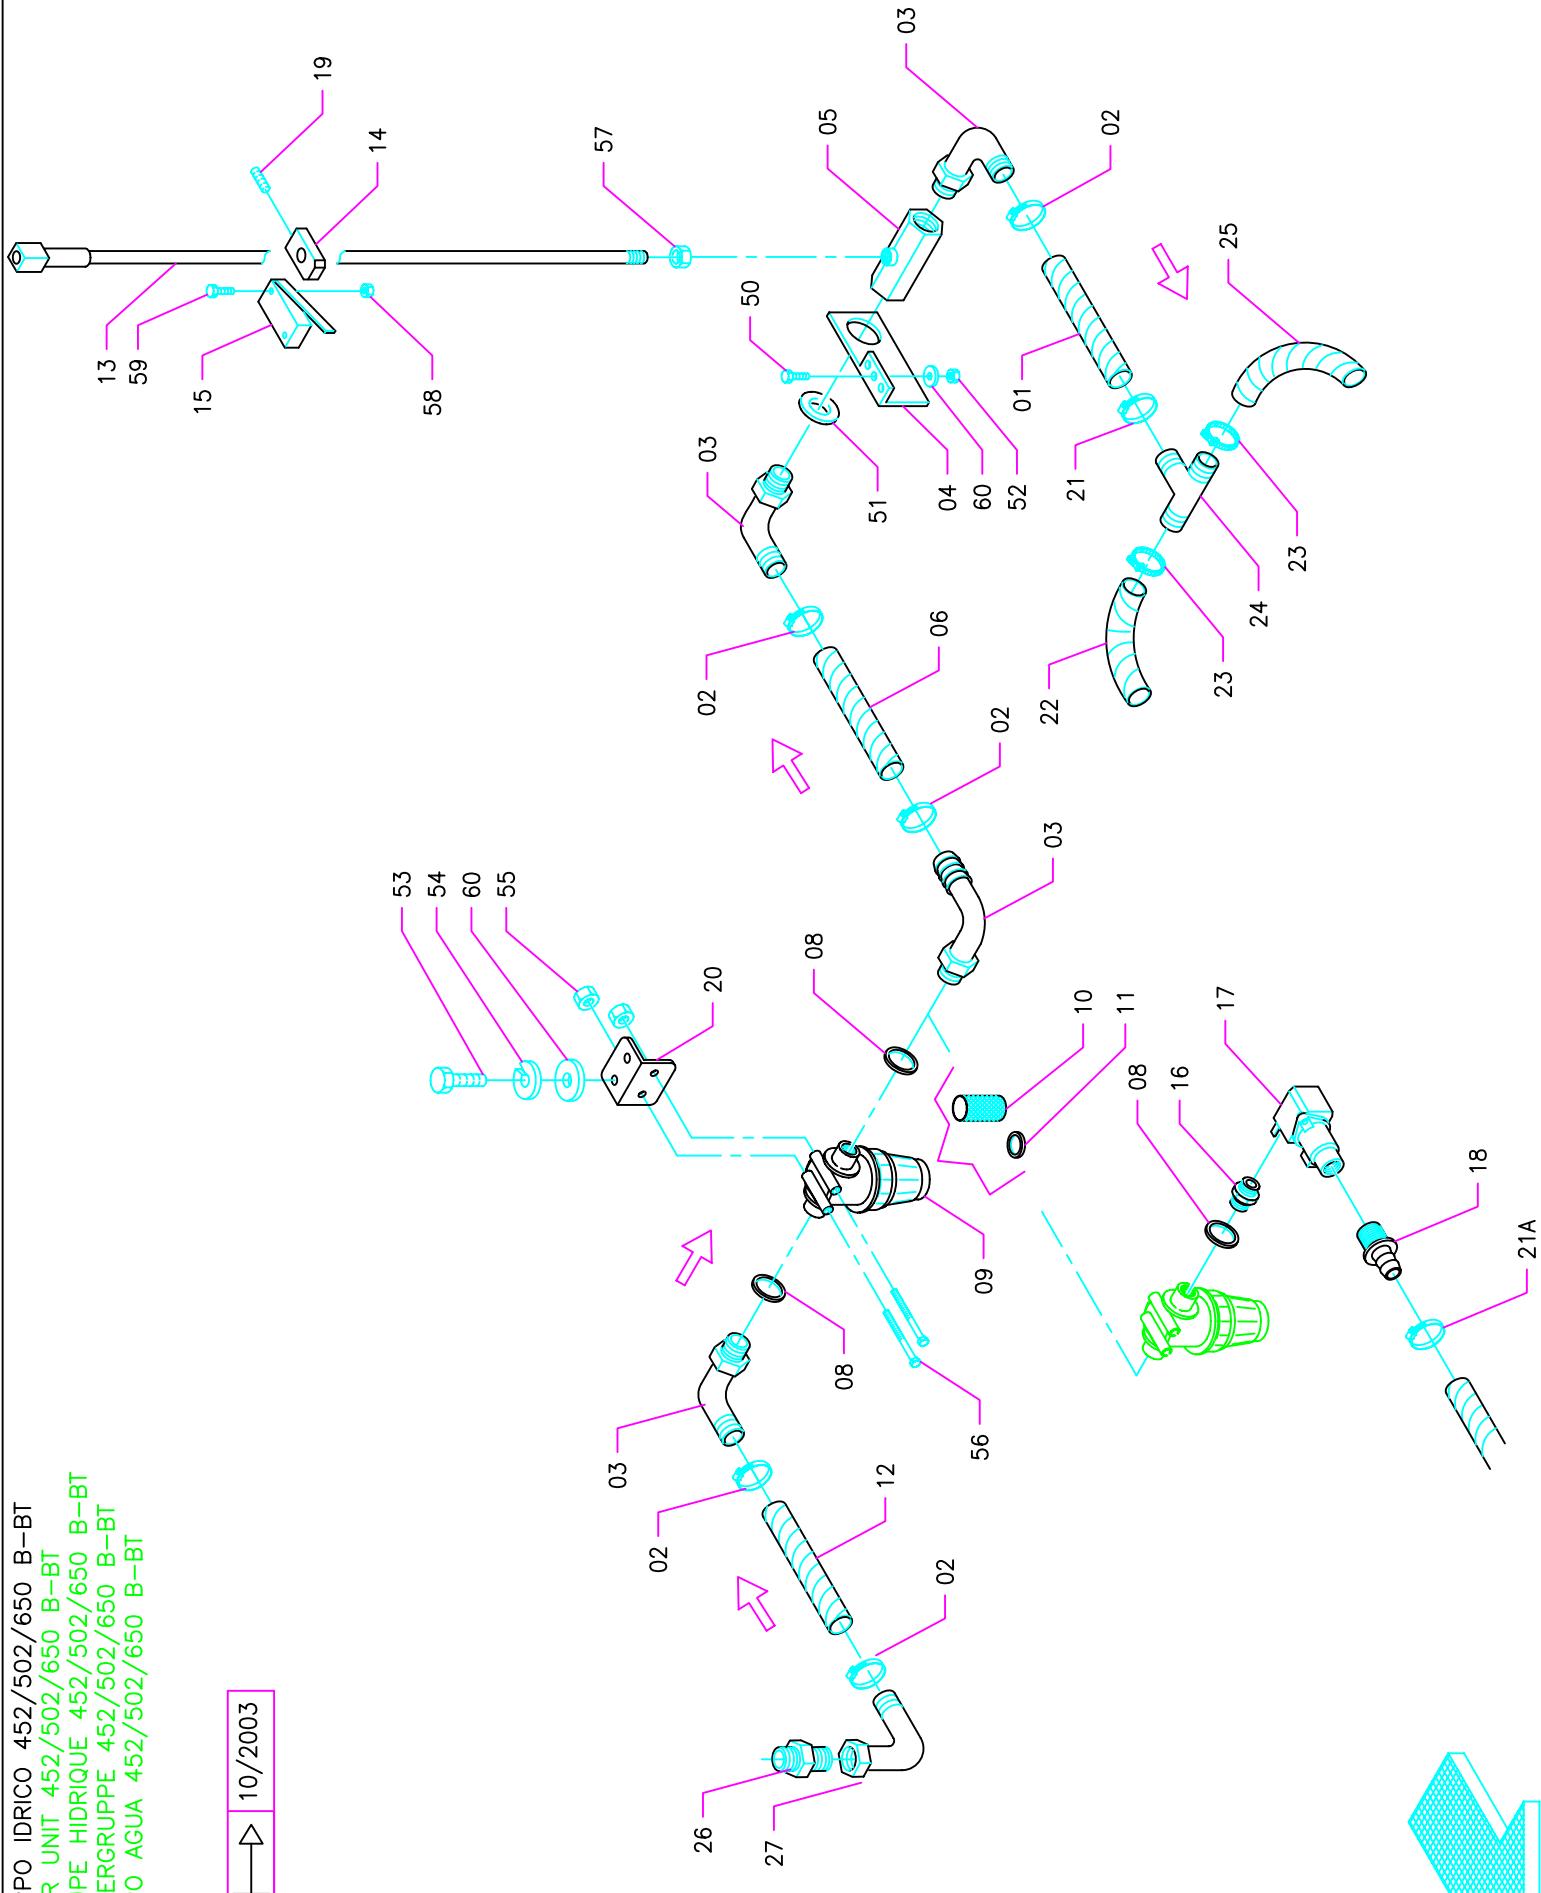

GRUPPO IDRICO 452/502/650 B-BT  
WATER UNIT 452/502/650 B-BT  
GROUPE HIDRIQUE 452/502/650 B-BT  
WASSERGRUPPE 452/502/650 B-BT  
GRUPO AGUA 452/502/650 B-BT

**TAV.06 rev.03**


GRUPPO IDRICO 452/502B-BT / 650BT

Pos.	Mod.	Codice	Q.tà	Denominazione	Denomination	Description	Benennung	Descripcion
1		202176	1	TUBO D.14X720 SPIRALATO	TUBE	TUYAU	ROHR	TUBO
2		416172	6	FASCETTA A VITE 16-22	CLAMP	COLLIER	BRIDE	ABRAZADERA
3		410339	3	PORTAGOMMA A GOMITO 1/2x16 M.	CONNECTOR HOSE	RACCORD DE TUYAU	VERBINDUNG-SCHLAUCH	UNION DE TUBO DE GOMA
4		203391	1	STAFFA RUBINETTO	SUPPORT	SUPPORT	HALTERUNG	SOPORTE FIJADOR
5		415110	1	RUBINETTO 1/2	COCK	ROBINET	WASSERHÄHN	GRIFO
6		202188	1	TUBO D.14x125 SPIRALATO	TUBE	TUYAU	ROHR	TUBO
7		410371	1	PORTAGOMMA DIRITTO 1/2x16	CONNECTOR	RACCORD	SCHLAUCHANSCHLUSS	EMPALME TUBO DE GOMA
8		408501	2	GUARNIZIONE OR 3068	GASKET	JOINT	ABDICHTUNG	JUNTA
9		405409	1	FILTRO 1/2 F.F. 32 MESH	FILTER	FILTRE	FILTER	FILTRO
10		405410	1	CARTUCCIA	FILTER CARTRIDGE	CARTOUCHE DE FILTRE	CARTUCHO FILTRO	CARTUCHO FILTRO
11		405959	1	GUARNIZIONE	GASKET	JOINT	ABDICHTUNG	JUNTA
12		202172	1	TUBO D.14x480 SPIRALATO	TUBE	TUYAU	ROHR	TUBO
13		203521	1	ASTA RUBINETTO	ROD	TIGE	STANGE	VARILLA
14		203486	1	MORSETTO PER MICROINT.	CLAMP	BORNE	KLEMME	BORNE
15		409498	1	MICROINTERRUTTORE	MICROSWITCH	MICROINTERRUPTEUR	MIKROSCHALTER	MICROINTERRUPTOR
16	*	416234	1	NIPPLA MM 38-1/2 OTTONE	NIPPLE	RACCORD	NIPPEL	BOQUILLA ROSCADA
17	*	414646	1	ELETROVALVOLA COMPLETA 24V	SOLENOID VALVE	ELECTROVANNE ASSY	MAGNETVENTIL COMPLETE	ELECTROVALVULA COMPLETA
18	*	420741	1	PORTAGOMMA DIRITTO 3/8 x13	CONNECTOR	RACCORD	SCHLAUCHANSCHLUSS	EMPALME TUBO DE GOMA
19		415808	1	GRANO M4X8	DOWEL	VIS	MADENSCHRAUBE	TORNILLO
20		203520	1	SUPPORTO FILTRO	SUPPORT	SUPPORT	HALTERUNG	SOPORTE
21		410292	1	FASCETTA A VITE 11-17	CLAMP	COLLIER	BRIDE	ABRAZADERA
21A	*	410292	1	FASCETTA A VITE 11-17	CLAMP	COLLIER	BRIDE	ABRAZADERA
22		202210	1	TUBO VITREO D.8x200	TUBE	TUYAU	ROHR	TUBO
23		410277	2	FASCETTA PLASTICA	CLAMP	COLLIER	BRIDE	ABRAZADERA
24		400658	1	RACCORDO TUBI ACQUA	FITTING	RACCORD	VERSCHRAUBUNG	RACORT
25		202209	1	TUBO D.8X300 VITREO	TUBE	TUYAU	ROHR	TUBO
26		410427	1	NIPPLA RIDOTTO	NIPPLE	RACCORD	NIPPEL	BOQUILLA ROSCADA
27		416198	1	PORTAGOMMA A GOMITO	CONNECTOR HOSE	RACCORD DE TUYAU	VERBINDUNG-SCHLAUCH	UNION DE TUBO DE GOMA
50	-	-	-	VITE M6X16 UNI 5933	SCREW	VIS	SCHRAUBE	TORNILLO
51	-	-	-	ROSETTA M20 UNI 6592	WASHER	RONDELLE	SCHEIBE	ARANDELA
52	-	-	-	DADO M6 UNI 5588	NUT	ECROU	MUTTER	TUERCA
53	-	-	-	VITE M6X20 UNI 5739	SCREW	VIS	SCHRAUBE	TORNILLO
54	-	-	-	ROSETTA M6 UNI 1751	LOCK WASHER	RONDELLE	ZAHNSCHEIBE	ARANDELA DENTADA
55	-	-	-	DADO M8 AUTOBL. UNI 7474	LOCK NUT	ECROU AUTOBLOQUANT	STOPMUTTER	TUERCA AUTOBLOCANTE
56	-	-	-	VITE M8X70 UNI 5737	SCREW	VIS	SCHRAUBE	TORNILLO
57	-	-	-	DADO M5 UNI 5588	NUT	ECROU	MUTTER	TUERCA
58	-	-	-	DADO M3 AUTOBL. UNI 7474	LOCK NUT	ECROU AUTOBLOQUANT	STOPMUTTER	TUERCA AUTOBLOCANTE
59	-	-	-	VITE M3X20 UNI 5739 A2	SCREW	VIS	SCHRAUBE	TORNILLO
60	-	-	-	ROSETTA M6 UNI 6592	WASHER	RONDELLE	SCHEIBE	ARANDELA

\* = PROFY LINE


REV. 01

GRUPPO COMANDO SPAZZOLE B-BT / BS-BTS  
 BRUSHES CONTROL ASSEMBLY B-BT / BS-BTS  
 GROUPE COMMANDE DES BROSSES B-BT / BS-BTS  
 GRUPPE BÜRSTENBETÄTIGUNG B-BT / BS-BTS  
 GRUPO MANDO CEPILLOS B-BT / BS-BTS

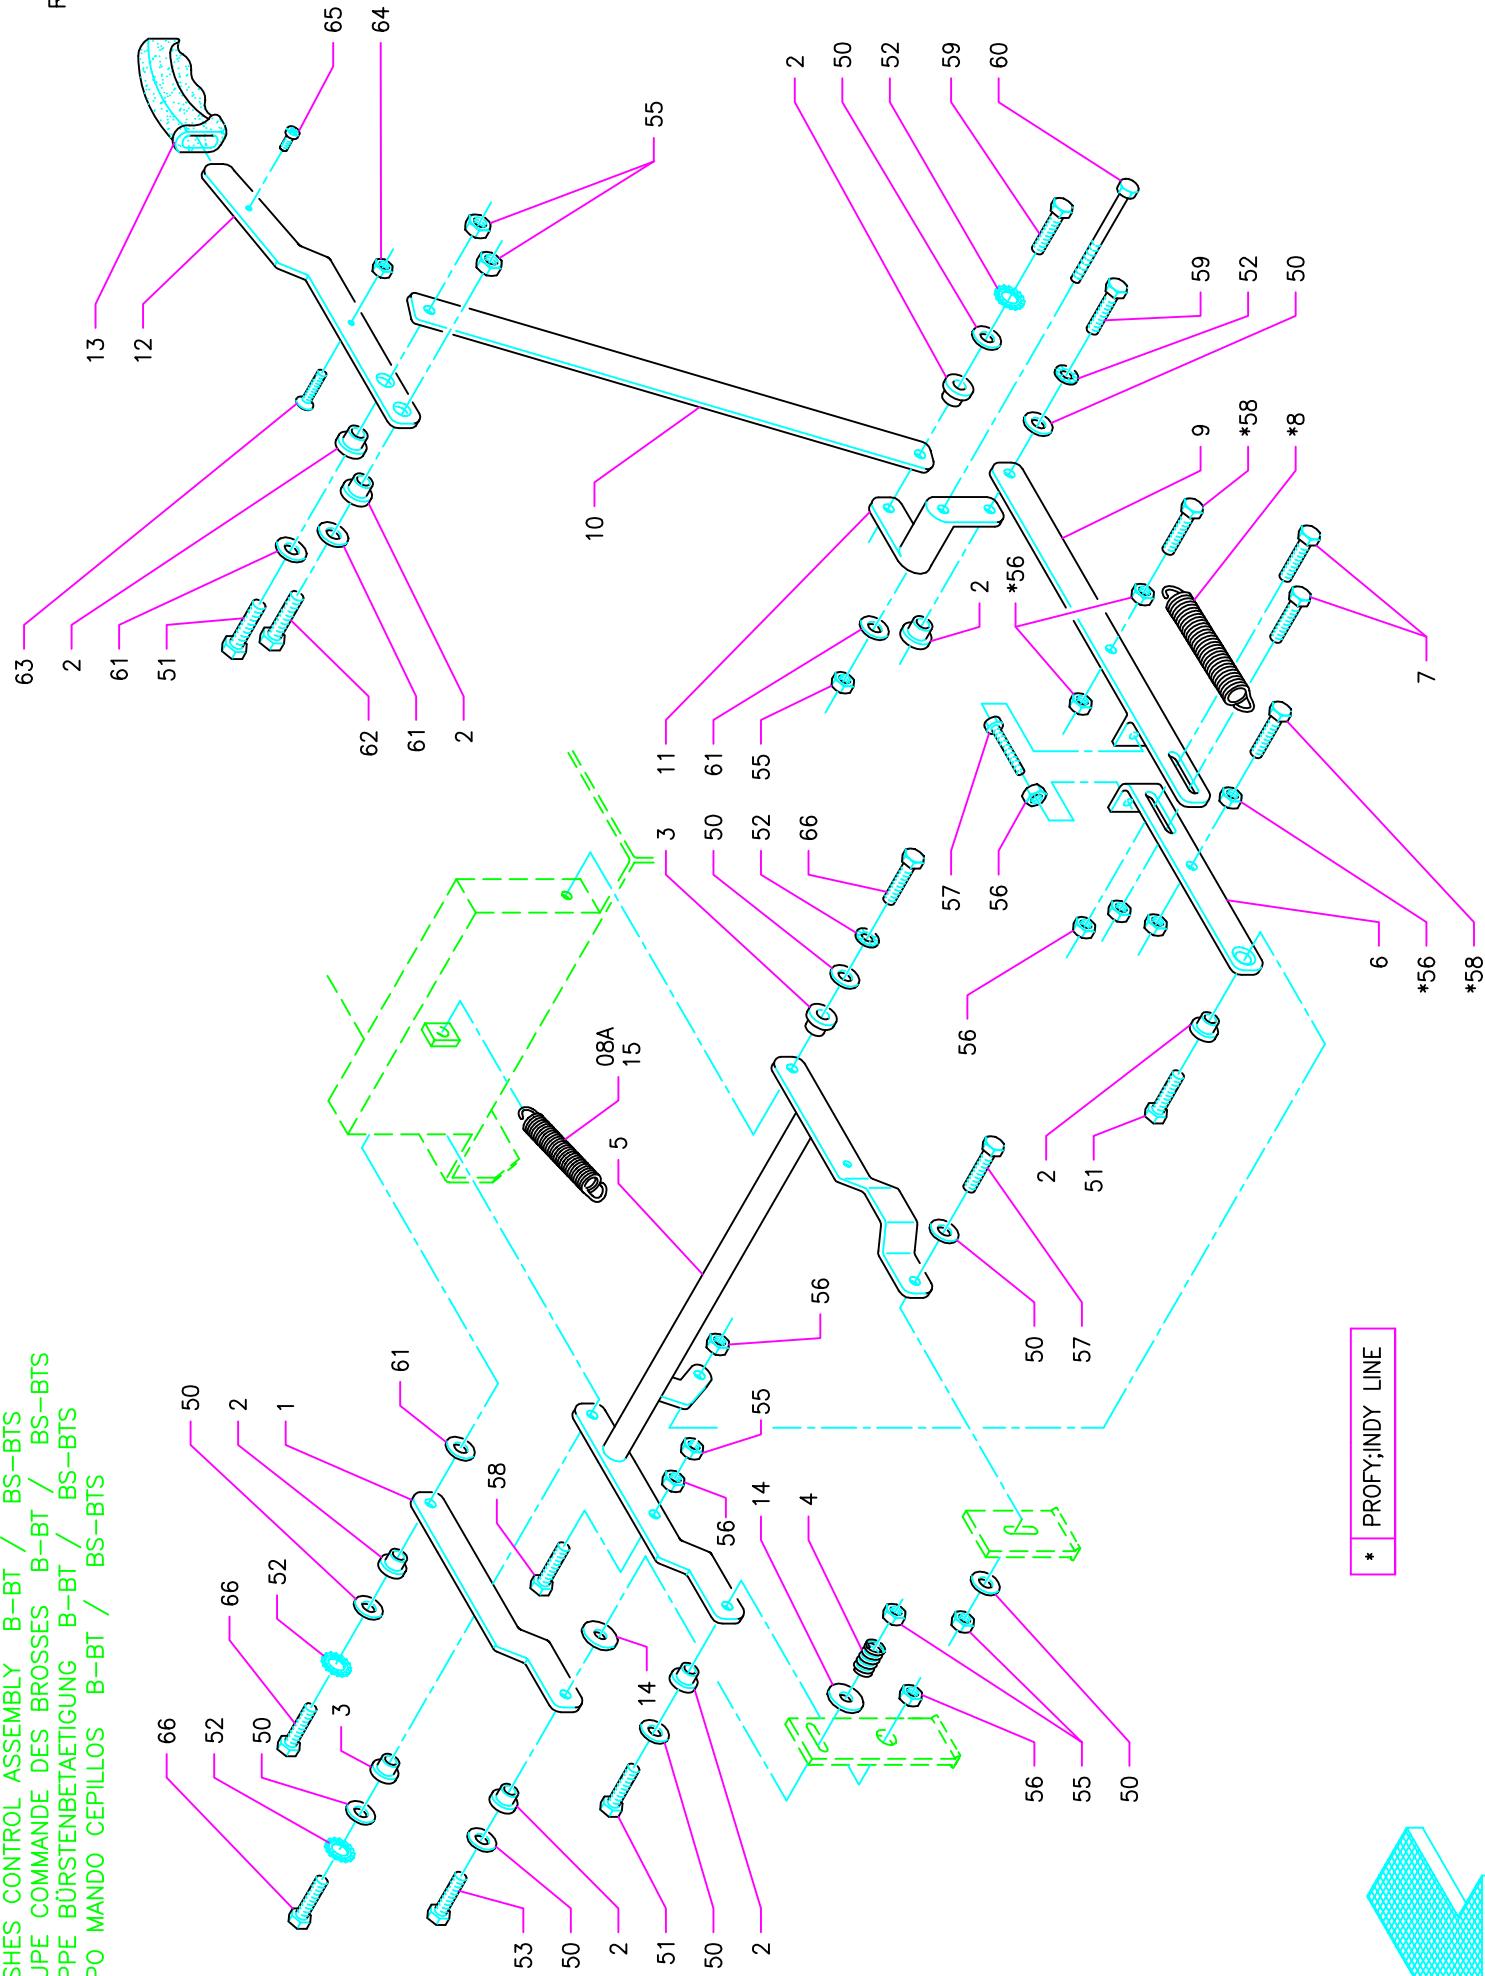

TAV.08	rev.01	GRUPPO COMANDO SPAZZOLE B-BT / BS-BTS	Po	Mod.	Codice	Q.tà	Denominazione	Denomination	Description	Bennnung	Descripcion
1		203491	1		BRACCIO	ARM	BRAS	ARM	BRAZO	ARM	BRAZO
2		408018	9		BOCCOLA	BUSHING	DOUILLE	BUCHSE	CASQUILLO	BUCHSE	CASQUILLO
3		408020	2		BOCCOLA	BUSHING	DOUILLE	BUCHSE	CASQUILLO	BUCHSE	CASQUILLO
4	452/502	408094	1		MOLLA	SPRING	RESSORT	FEDER	RESORTE	FEDER	RESORTE
5		412449	1		BRACCIO	ARM	BRAS	ARM	BRAZO	ARM	BRAZO
6		203496	1		LAMA ANTERIORE	KNIFE	LAME	KLINGE	HOJA	KLINGE	HOJA
7		203495	2		COLONETTA	STUD BOLT	TIGE	GEWINDEBOLZEN	PRISIONERO	GEWINDEBOLZEN	PRISIONERO
8		202482	1		MOLLA	SPRING	RESSORT	FEDER	RESORTE	FEDER	RESORTE
8A	BS-BTS	202482	1		MOLLA	SPRING	RESSORT	FEDER	RESORTE	FEDER	RESORTE
9		203494	1		LAMA	KNIFE	LAME	KLINGE	HOJA	KLINGE	HOJA
10		203493	1		TIRANTE	TIE ROD	TIRANT	STANGE	VARILLA	STANGE	VARILLA
11		412450	1		RINVIO	RETURN	RENOVI	VERWEISEN	APLAZAMIENTO	VERWEISEN	APLAZAMIENTO
12		203492	1		MANETTA	HANDLE	MENOTTES	HANDSCHELLE	MANETA	HANDLE	HANDSCHELLE
13		410253	1		MANOPOLA	HANDLE	POGNEE	GRIFF	MANGO	HANDLE	GRIFF
14	452/502	409182	2		RONDELLA Ø 8X30X3 NYLON	WASHER	RONDELLE	SCHÉIBE	ARANDELA	WASHER	SCHÉIBE
15	B-BT	202476	1		MOLLA	SPRING	RESSORT	FEDER	ARANDELA	SPRING	FEDER
50		-	-		RONDELLA M8 D.24 UNI 6593	WASHER	RONDELLE	SCHEIBE	ARANDELA	WASHER	SCHEIBE
51		-	-		VITE M8X25 UNI 5739	SCREW	VIS	SCHRAUBE	TORNILLO	SCREW	SCHRAUBE
52		-	-		RONDELLA M8 DIN 6798/A	WASHER	RONDELLE	SCHEIBE	ARANDELA	WASHER	SCHEIBE
53		-	-		VITE M8X40 UNI 5739	SCREW	VIS	SCHRAUBE	TORNILLO	SCREW	SCHRAUBE
55		-	-		DADO M8 AUTOBL. UNI 7474	NUT	ECROU	MUTTER	TUERCA	NUT	MUTTER
56		-	-		DADO M8 UNI 5588	NUT	ECROU	MUTTER	TUERCA	NUT	MUTTER
57		-	-		VITE M8X30 UNI 5739	SCREW	VIS	SCHRAUBE	TORNILLO	SCREW	SCHRAUBE
58		-	-		VITE M8X45 UNI 5739	SCREW	VIS	SCHRAUBE	TORNILLO	SCREW	SCHRAUBE
59		-	-		VITE M8X20 UNI 5739	SCREW	VIS	SCHRAUBE	TORNILLO	SCREW	SCHRAUBE
60		-	-		VITE M8X90 UNI 5737	SCREW	VIS	SCHRAUBE	TORNILLO	SCREW	SCHRAUBE
61		-	-		RONDELLA M8 UNI 6592	WASHER	RONDELLE	SCHEIBE	ARANDELA	WASHER	SCHEIBE
62		-	-		VITE M8X25 UNI 5933	SCREW	VIS	SCHRAUBE	TORNILLO	SCREW	SCHRAUBE
63		-	-		VITE M6X20 UNI 5933	SCREW	VIS	SCHRAUBE	TORNILLO	SCREW	SCHRAUBE
64		-	-		DADO M6 UNI 5588	NUT	ECROU	MUTER	TUERCA	NUT	MUTER
65		-	-		VITE Ø 4,8X13 AUTOFIL. UNI 6954	SCREW	VIS	SCHRAUBE	TORNILLO	SCREW	SCHRAUBE
66		-	-		VITE M8X35 UNI 5739	SCREW	VIS	SCHRAUBE	TORNILLO	SCREW	SCHRAUBE


09

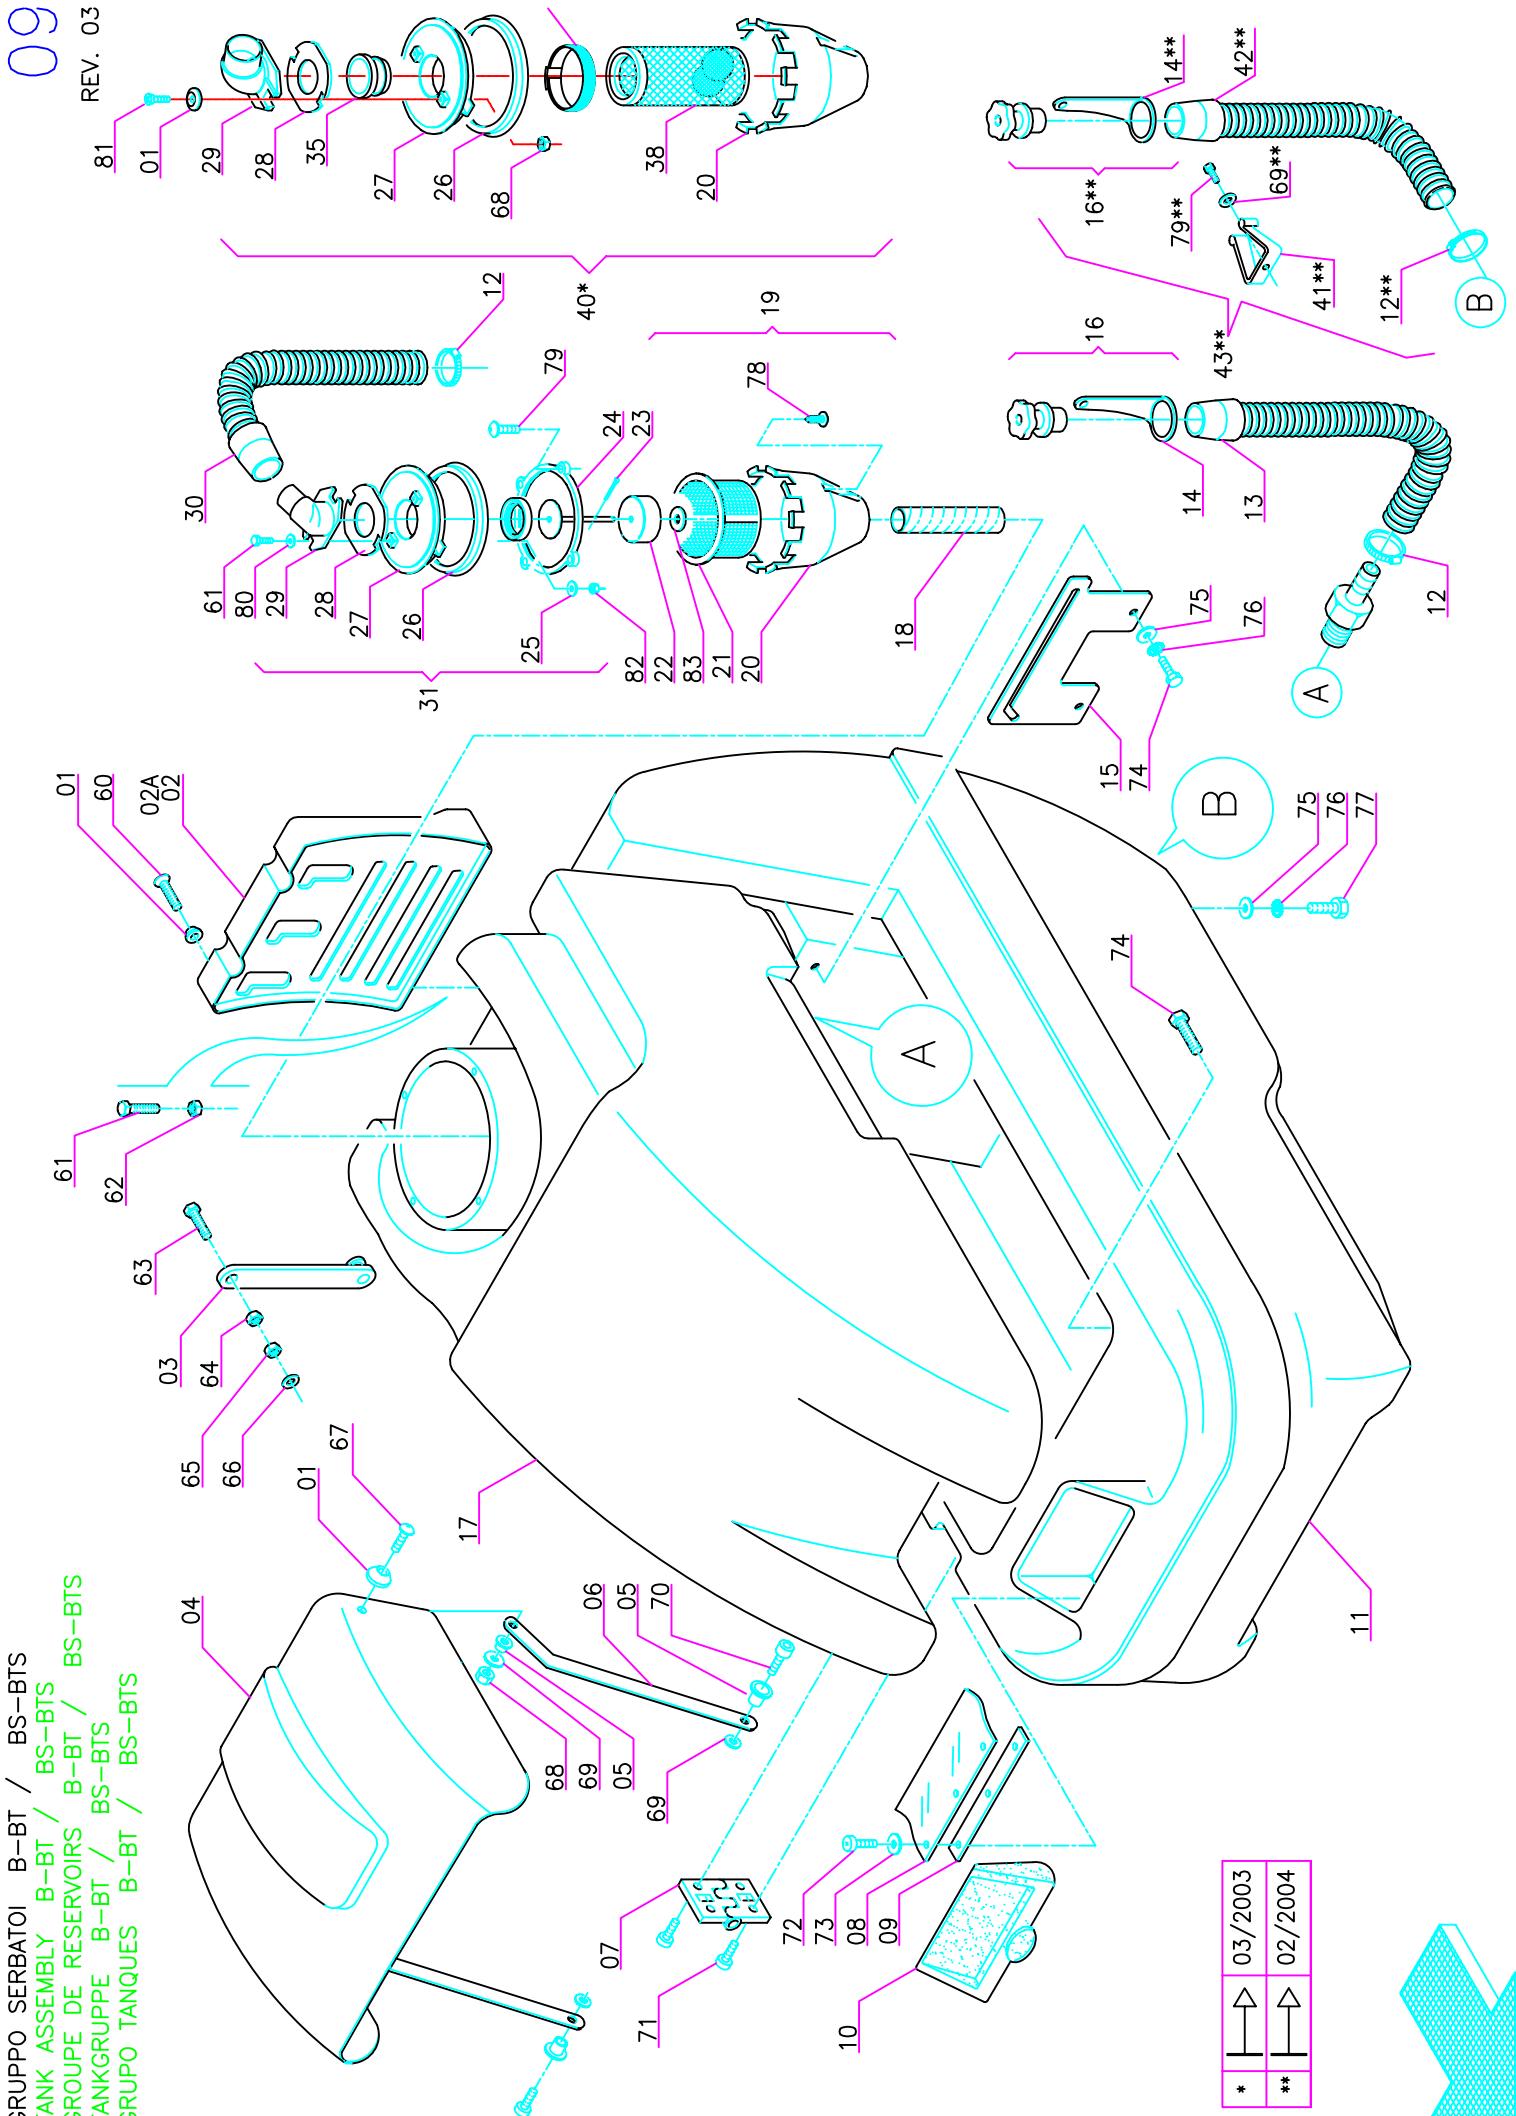

**TAV.09 rev.03**

Po	Mod.	Codice	Q.tà	Denominazione	Denomination	Description	Benennung	Descripcion
1		400250	6	RONDELLA SOTTOVITE	WASHER	RONDELLE	SCHEIBE	ARANDELA
2	B-BS	415147	1	CARTER POSTERIORE	COVER	CARTER	ABDECKUNG	TAPE
2A	BT-BTS	415148	1	CARTER POSTERIORE	COVER	CARTER	ABDECKUNG	TAPE
3		415144	1	PUNTELLO SERBATOI	PANEL	PANNEAU	PLATTE	PANEL
4		415146	1	COFANO SERB. RECUPERO	BONNET	CAPOT	ABDECKHAUBE	CAPOTA
5		411762	4	BOCCOLA	BUSHING	BAGUE	CASQUILLO	CASQUILLO
6		203515	2	STAFFA COFANO	BRACKET	BRIDE	SOPORTE	SOPORTE
7		412002	2	CERNIERA COFANO	HINGE	CHARNIERE	BISAGRA	BISAGRA
8		415095	1	PARAFLUTTI SERBATOIO	SPLASH GUARD	BAVETTE	PARASALPICADURAS	PARASALPICADURAS
9		415096	1	LISTELLO	BLADE	LAME	LISTON	LISTON
10		415094	1	COFERCHIO SERBATOIO	COVER	COUVERCLE	TAPA	TAPA
11		414817	1	SERBATOIO SOLUZIONE	TANKS	RESERVOIRS	TANQUES	TANQUES
12		420512	2	FASSETTA A VITE	CLAMP	COLLIER	ABRAZADERA	ABRAZADERA
13		202168	1	TUBO SPIRALATO	PIPE	TUBE	TUBO	TUBO
14		420678	1	FASSETTA	CLAMP	COLLIER	ABRAZADERA	ABRAZADERA
15		203517	1	STAFFA FISSA PER PUNTELLO	BRACKET	BRIDE	SOPORTE	SOPORTE
16		203127	1	KIT TAPPO SCARICO COMPLETO	OUTLET PLUG COMPLETE	KIT BOUCHON DE DECHAR.	TAPON	TAPON
17		414818	1	SERBATOIO RECUPERO	TANKS	RESERVOIRS	TANQUES	TANQUES
18		202133	1	TUBO SPIRALATO	PIPE	TUBE	TUBO	TUBO
19		203163	1	PROTEZIONE + FILTRO ASP.	ASSEMBLY PROTEC./FILTER	GRUPE SCHUTZ + FILTER	GRUPO PROTECCION+FILTRO	GRUPO PROTECCION+FILTRO
20		400727	1	PROTEZIONE GALLEGGIANTE	PROTECTION	PROTECTION	PROTECCION	PROTECCION
21		405378	1	FILTRO	FILTER	FILTER	FILTRO	FILTRO
22		400540	1	GALLEGGIANTE	FLOAT	FLOTTEUR	FLOTADOR	FLOTADOR
23		409383	1	COPIGLIA	SPLIT PIN	GOUPILLE	PASADOR DE ALETAS	PASADOR DE ALETAS
24		400726	1	SEDE PER PORTAFILTRO	FILTER HOLDER	PORTE-FILTRE	PORTAFILTRO	PORTAFILTRO
25		409148	4	ROSETTA NYLON	WASHER	RONDELLE	ARANDELA	ARANDELA
26		405466	1	GUARNIZIONE FILTRO SERBATOI	GASKET	JOINT	JUNTA	JUNTA
27		400541	1	TAPPO PER SERBATOIO	PLUG	BOUCHON	PORTEZUELA	PORTEZUELA
28		405908	1	GUARNIZIONE ATTACCO TUBO	GASKET	JOINT	JUNTA	JUNTA
29		400127	1	ATTACCO PER BOCCHELLA	COUPLING	ATTIQUE	SOPORTE	SOPORTE
30		202167	1	TUBO SPIRALATO	PIPE	TUBE	TUBO	TUBO
31		203164	1	KIT TAPPO ASPIRAZIONE	ASSEMBLY SUCTION PLUG	GRUPE BOUCHON D'ASPIR.	GRUPO TAPON DE ASPIRACION	GRUPO TAPON DE ASPIRACION
32		411988	1	FASSETTA A SCATTO	CLAMP	COLLIER	ABRAZADERA	ABRAZADERA
35		411822	1	RACCORDO ATTACCO FILTRO	FITTING	RACCORD	RACORT	RACORT
38		411674	1	FILTRO ASPIRAZIONE AIR STOP	FILTER	FILTRE	FILTRO	FILTRO
40		200339	1	TAPPO ASPIRAZIONE COMPLETO	PLUG	BOUCHON	PORTEZUELA	PORTEZUELA
41		412123	1	AGGANCIO	COUPLER	ACCROCHAGE	ENGANCHE	ENGANCHE
42		202191	1	TUBO SPIRALATO TRASPARENTE	PIPE	TUBE	HALTERUNG	HALTERUNG
43		202887	-	KIT TUBO SCARICO/LIVELLO ACQUA	EXHAUST PIPE	ROHR	ROHR	ROHR
60		-	-	VITE M5X16 UNI 7688	ASSEMBLY/WATER LEVEL	KIT FLEXIBLE VIDANGE/NIVEAU EAU	KIT ABLASSSCHLAUCH / WASSERSTAND AGUA	KIT TUBO DESAGÜE/NIVEL AGUA
61		-	-	VITE M4X25 UNI 5739 A2	SCREW	SCHRAUBE	SCHRAUBE	TORNILLO
					SCREW	VIS	SCHRAUBE	TORNILLO


09

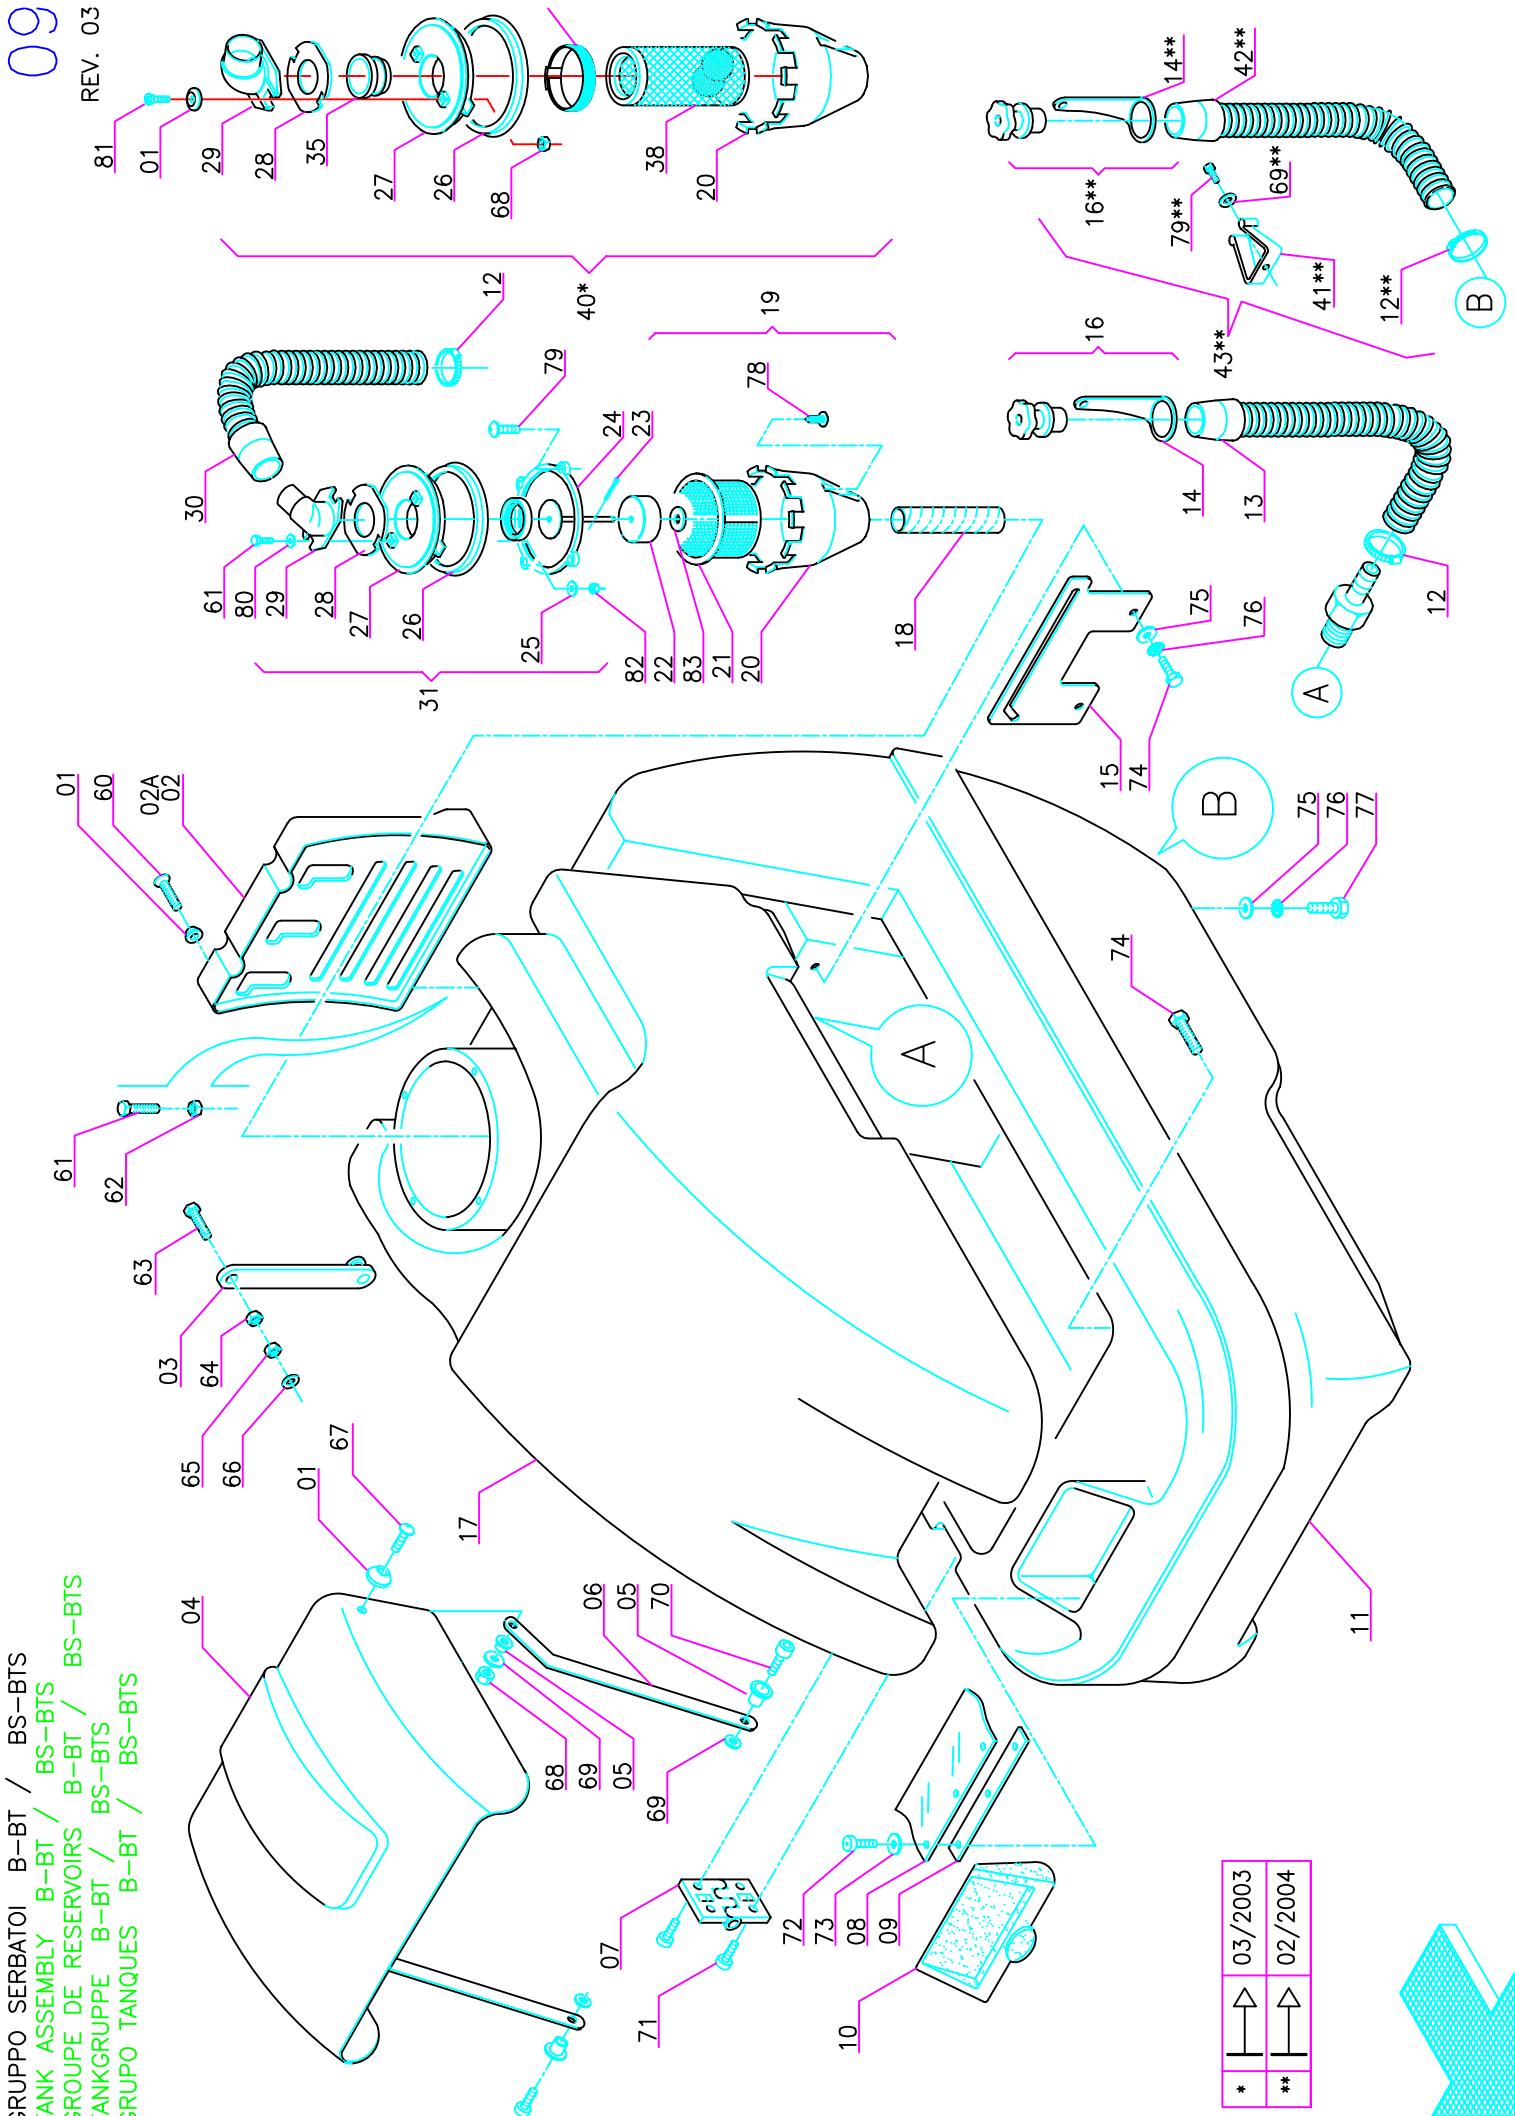

**TAV.09 rev.03**
**GRUPPO SERBATOI B-BT / BS-BTS**

<b>Po</b>	<b>Mod.</b>	<b>Codice</b>	<b>Q.tà</b>	<b>Denominazione</b>	<b>Denomination</b>	<b>Description</b>	<b>Benennung</b>	<b>Descripcion</b>
62	-	-	-	DADO M4 AUTOBL. UNI 7474	LOCK NUT	ECROU AUTOBLOQUANT	STOPMUTTER	TUERCA AUTOBLOCANTE
63	-	-	-	VITE M8X45 UNI 5739	SCREW	VIS	SCHRAUBE	TORNILLO
64	-	-	-	DADO M8 AUTOBL. UNI 7474	LOCK NUT	ECROU AUTOBLOQUANT	STOPMUTTER	TUERCA AUTOBLOCANTE
65	-	-	-	DADO M8 UNI 5588	NUT	ECROU	MUTTER	TUERCA
66	-	-	-	ROSETTA M8 UNI 6592	WASHER	RONDELLE	SCHRAUBE	ARANDELA
67	-	-	-	VITE M5X20 UNI 7687	SCREW	VIS	SCHEIBE	TORNILLO
68	-	-	-	DADO M5 AUTOBL. UNI 7474	LOCK NUT	ECROU AUTOBLOQUANT	STOPMUTTER	TUERCA AUTOBLOCANTE
69	-	-	-	ROSETTA M5 D 15 UNI 6593	WASHER	RONDELLE	SCHRAUBE	ARANDELA
70	-	-	-	VITE M5X16 UNI 7380	SCREW	VIS	SCHRAUBE	TORNILLO
71	-	-	-	VITE M6X14 UNI 5931	SCREW	VIS	SCHRAUBE	TORNILLO
72	-	-	-	VITE M5X20 UNI 7687 A2	SCREW	VIS	SCHRAUBE	TORNILLO
73	-	-	-	ROSETTA M5 UNI 6592 A2	WASHER	RONDELLE	SCHRAUBE	ARANDELA
74	-	-	-	VITE M6X16 UNI 5739	SCREW	VIS	SCHRAUBE	TORNILLO
75	-	-	-	ROSETTA M6 D 18 UNI 6593	WASHER	RONDELLE	SCHRAUBE	ARANDELA
76	-	-	-	ROSETTA DIN 6798/A	LOCK WASHER	RONDELLE	ZAHNSCHEIBE	ARANDELA DENTADA
77	-	-	-	VITE M6X35 UNI 5933	SCREW	VIS	SCHRAUBE	TORNILLO
78	-	-	-	VITE Ø 3.9X13 AUTOFIL. UNI 6954	SCREW	VIS	SCHRAUBE	TORNILLO
79	-	-	-	VITE Ø 4.2X16 AUTOFIL. UNI 6954	SCREW	VIS	SCHRAUBE	TORNILLO
80	-	-	-	ROSETTA M5 D 20 UNI 6593	WASHER	RONDELLE	SCHRAUBE	ARANDELA
81	-	-	-	VITE M5X25 UNI 7688	SCREW	VIS	SCHRAUBE	TORNILLO
82	-	-	-	DADO M4 UNI5588 INOX	NUT	ECROU	MUTTER	TUERCA
83	-	-	-	ROSETTA M6 D 24 UNI6593 INOX	WASHER	RONDELLE	SCHEIBE	ARANDELA


GRUPPO MANUBRIO B / BS  
 HANDLE BAR ASSEMBLY B / BS  
 GROUPE DE TIMON B / BS  
 FÜHRUNGSHOLMGRUPPE B / BS  
 GRUPO MANILLAR B / BS

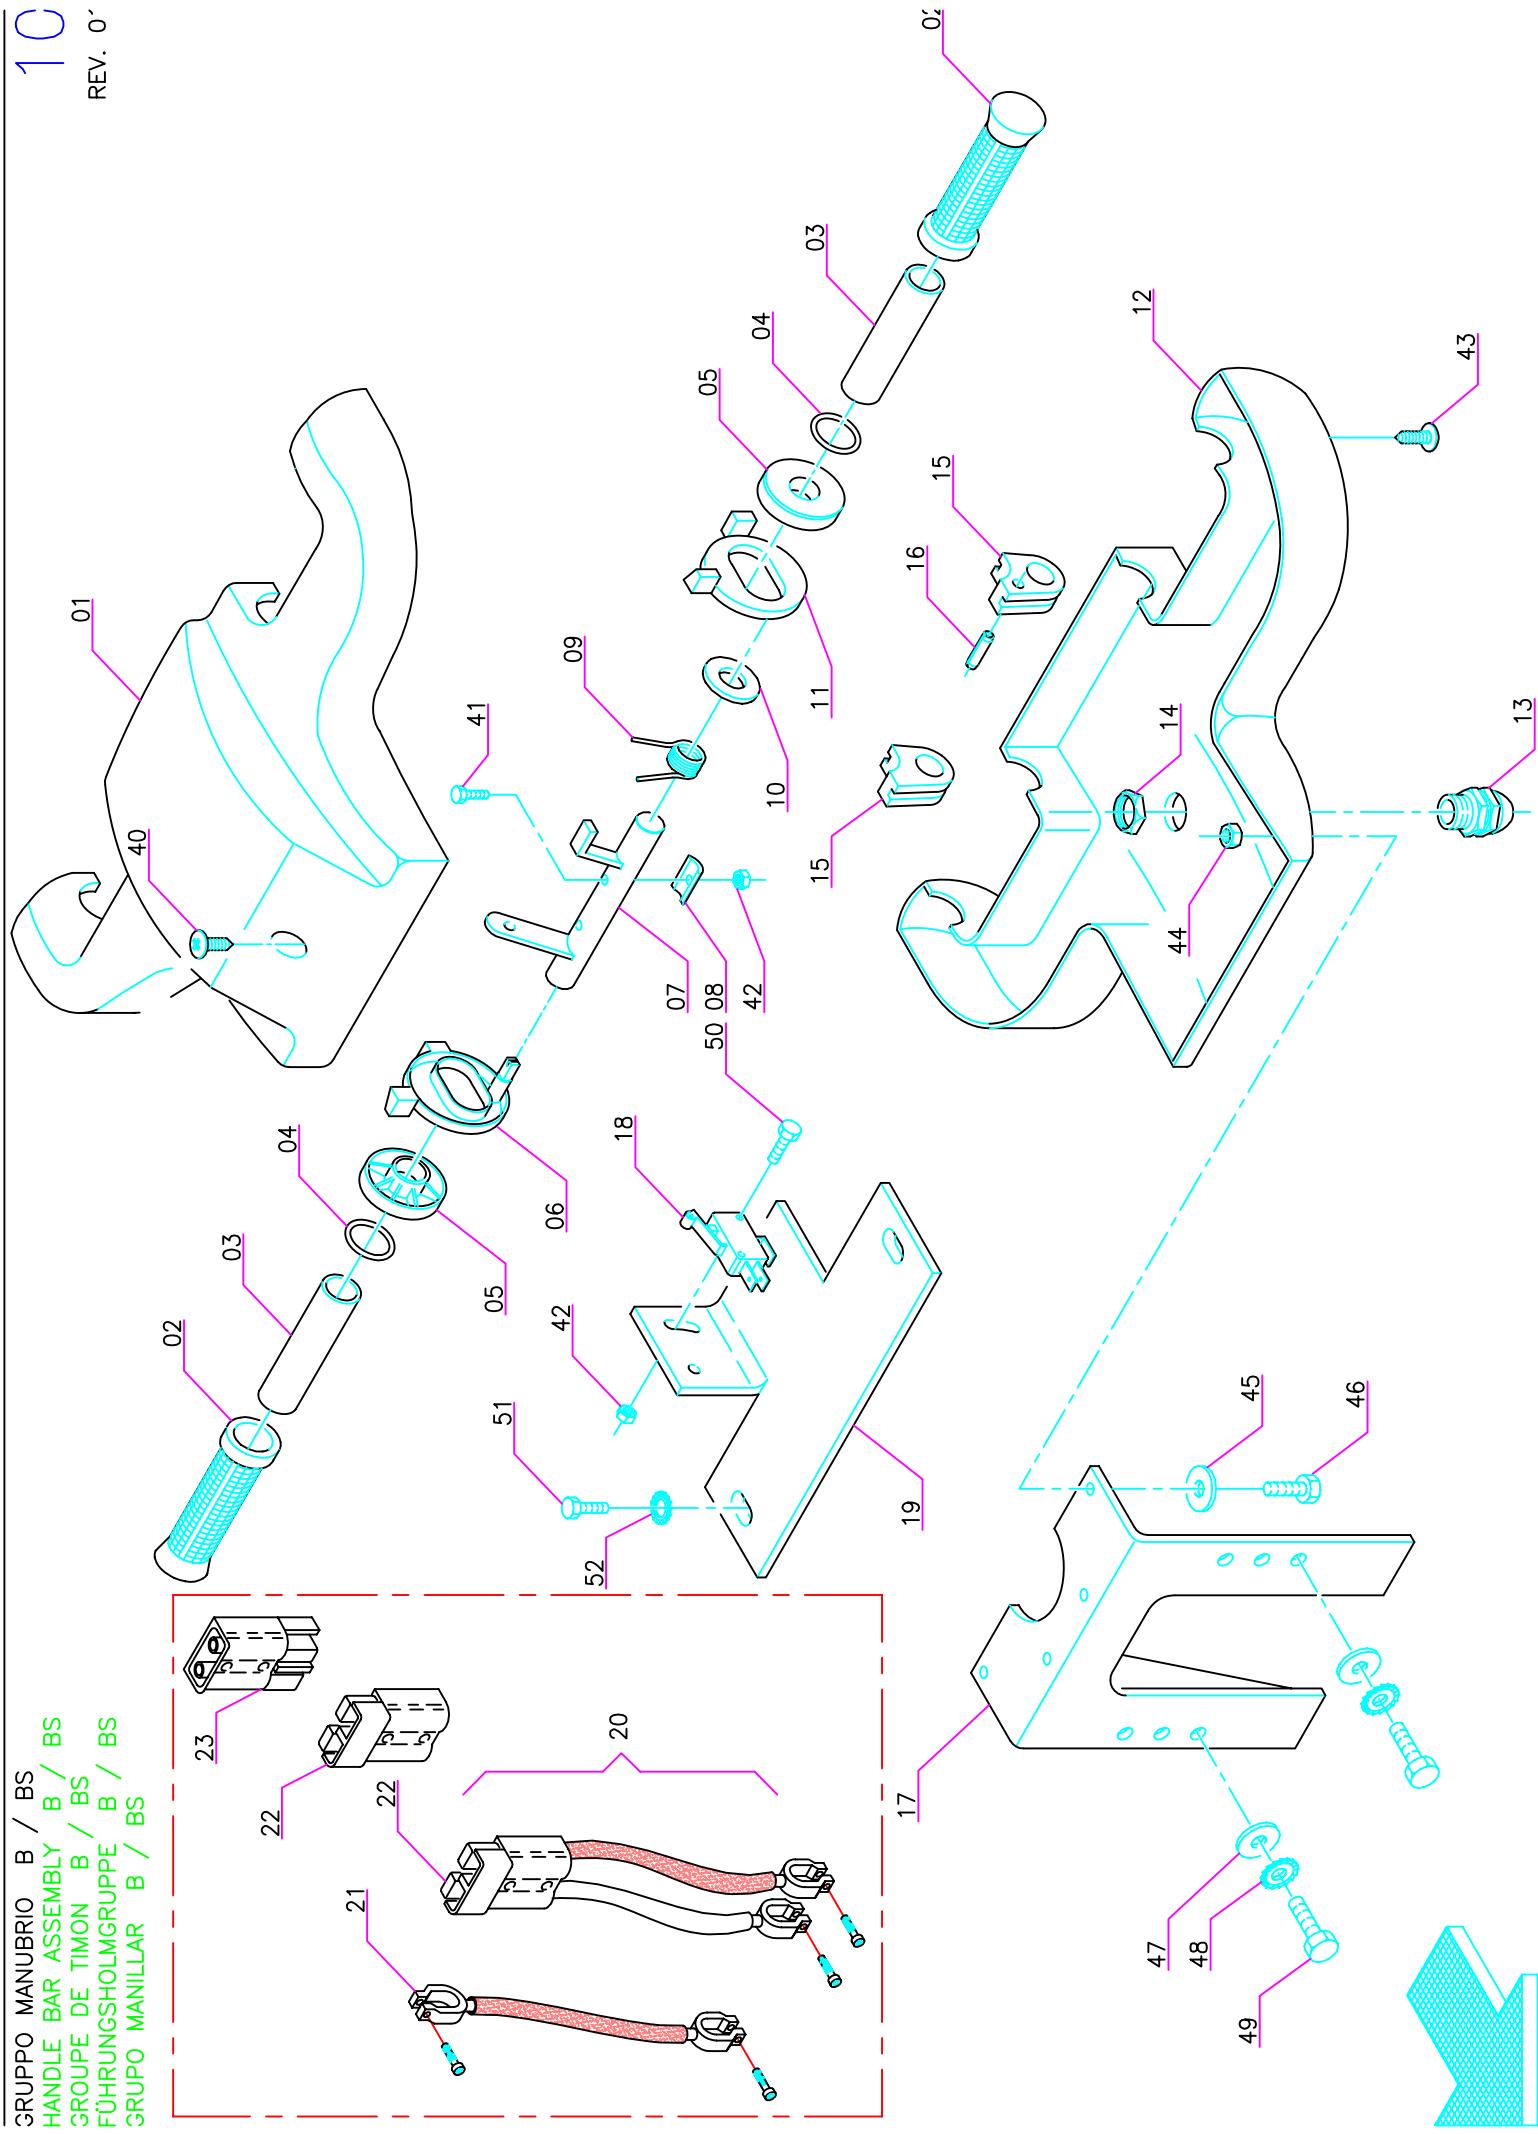

**TAV.10 rev.01**
**GRUPPO MANUBRIO B / BS**

<b>Pos.</b>	<b>Mod.</b>	<b>Codice</b>	<b>Q.tà</b>	<b>Denominazione</b>	<b>Denomination</b>	<b>Description</b>	<b>Benennung</b>	<b>Descripcion</b>
1	203511	1	1	COPERCHIO MANUBRIO	COVER	COUVERCLE	DECKEL	TAPA
2	410250	2	2	MANOPOLA IN GOMMA FORO D.25	KNOB	POIGNEE	HANDGRIFF	EMPUÑADURA
3	415140	2	2	TUBO MANUBRIO	PIPE	TUBE	ROHR	TUBO
4	415686	2	2	GUARNIZIONE OR	O-RING	JONT	O-RING	JUNTA ANULAR
5	400664	2	2	RONDELLA MANUBRIO	WASHER	RONDELLE	SCHEIBE	ARANDELA
6	400646	1	1	LEVA	LEVER	LEVIER	HABEL	PALANCA
7	415141	1	1	ALBERO	SHAFT	ABRE	LENKWESEL	EJE
8	400648	2	2	PIASTRINA DI COMPENSO	SUPPORT PLATE	PLAQUETTE	STÜTZPLATTE	OREJA DE APOYO
9	408131	1	1	MOLLA COMANDO MARCIA G42	SPRING	RESSORT	FEDER	RESORTE
10	203513	1	1	RONDELLA MANUBRIO	WASHER	RONDELLE	SCHEIBE	ARANDELA
11	400647	1	1	LEVA	LEVER	LEVIER	HABEL	PALANCA
12	203510	1	1	CORPO MANUBRIO	HANDLE BAR BODY	CORPS DE TIMON	FÜHRUNGSHOLMKÖRPER	CUERPO MANILLAR
13	409752	1	1	PRESSACAVO	FAIR-LEAD	PRESSE-ETOUIPE	KABELFÜHRUNG	BRIDA CABLE
14	409754	1	1	DADO 1/2 GRIGIO x PRESSACAVO	NUT	ECROU	MUTTER	TUERCA
15	415142	2	2	PIASTRINA	SUPPORT PLATE	PLAQUETTE	STÜTZPLATTE	OREJA DE APOYO
16	409368	1	1	SPINA ELASTICA 4X28	ELASTIC PIN	CHEVILLE ELASTIQUE	SPANNSTIFT	ESPINA ELASTICA
17	203508	1	1	STAFFA MANUBRIO	BRACKET	ATAQUE	BÜGEL	SOPORTE FIJADOR
18	411973	1	1	MICROINTERRUTTORE	MICROSWITCH	MICROINTERRUPTEUR	BÜGEL	MICROSCHALTER
19	203514	1	1	STAFFA INTERNA MANUBRIO	BRACKET	ATTAKUE	BÜGEL	SOPORTE FIJADOR
20	414545	1	1	CAVO BATTERIA	CABLE	CABLE	KABEL	CUERDA
21	406398	1	1	CAVO PONTE BATTERIE	CABLE	CABLE	KABEL	CUERDA
22	204355	1	1	CONNETTORE FEMMINA	CONNECTOR FEMALE	CONNECTEUR FEMELLE	STECKER OHNE ZAPFEN	CONNECTADOR
23	204354	1	1	CONNETTORE MASCHIO	CONNECTOR MALE	CONNECTEUR MALE	LADESTECKER MIT ZAPFEN	CONNECTADOR
40	-	-	-	VITE Ø 4.8X32 AUTOFIL. UNI 6954	SCREW	VIS	SCHRAUBE	TORNILLO
41	-	-	-	VITE M3X20 UNI 5739 A2	SCREW	VIS	SCHRAUBE	TORNILLO
42	-	-	-	DADO M3 AUTOBL. UNI 7474	LOCK NUT	VIS	STOPMUTTER	TUERCA AUTOBLOCANTE
43	-	-	-	VITE Ø 4.8X25 AUTOFIL. UNI 6954	SCREW	VIS	SCHRAUBE	TORNILLO
44	-	-	-	DADO M6 AUTOBL. UNI 7474	LOCK NUT	VIS	SCHEIBE	ARANDELA
45	-	-	-	ROSETTA M6 UNI 6592	WASHER	VIS	SCHRAUBE	ZAHNSCHEIBE
46	-	-	-	VITE M6X20 UNI 5739	SCREW	VIS	SCHRAUBE	TORNILLO
47	-	-	-	ROSETTA M8 UNI 6592	WASHER	RONDELLE	SCHEIBE	ARANDELA DENTADA
48	-	-	-	ROSETTA M8 DIN 6798/A	LOCK WASHER	RONDELLE	SCHRAUBE	TORNILLO
49	-	-	-	VITE M8X20 UNI 5739	SCREW	VIS	SCHRAUBE	TORNILLO
50	-	-	-	VITE M3X20 UNI 5739	SCREW	VIS	SCHRAUBE	TORNILLO
51	-	-	-	VITE Ø 4.8X13 AUTOFIL. UNI 6954	SCREW	VIS	SCHRAUBE	TORNILLO
52	-	-	-	ROSETTA M5 DIN 6798/A	LOCK WASHER	RONDELLE	SCHRAUBE	ZAHNSCHEIBE

GRUPPO MANUBRIO BT /  
HANDLE BAR ASSEMBLY BT /  
GROUPE DE TIMON BT /  
FÜHRUNGSHOLMGRUPPE BT /  
GRUPO MANILLAR BT /

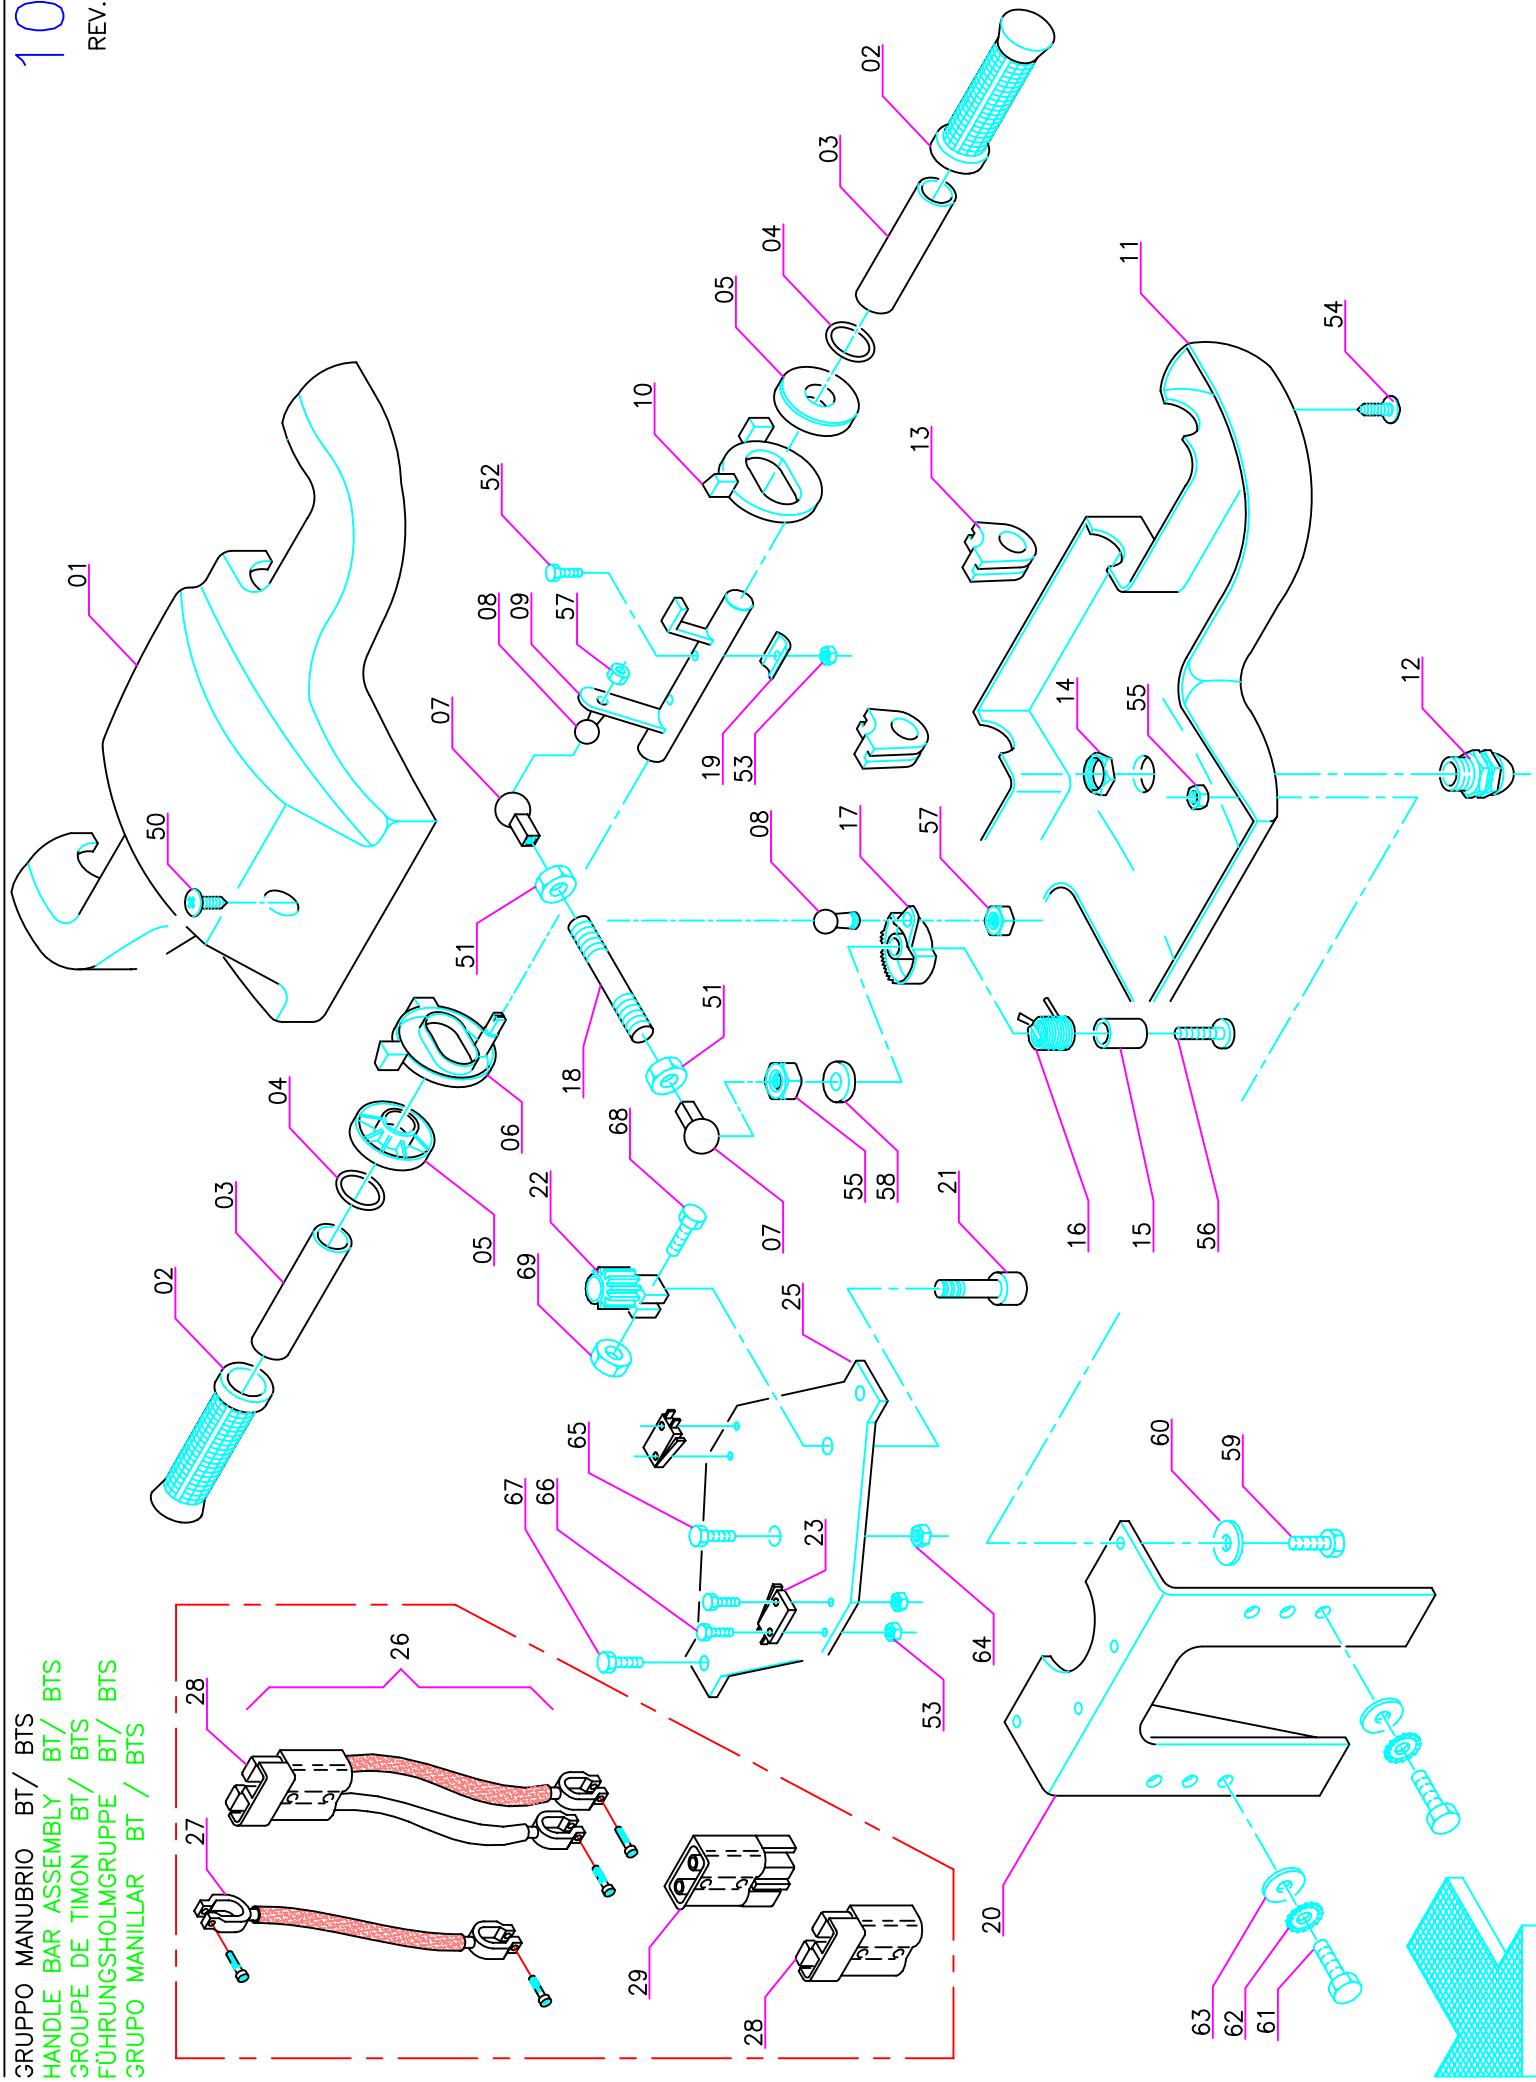


**TAV.10A rev.0A**

Pos.	Mod.	Codice	Q.tà	Denominazione	Denomination	Description	Benennung	Descripcion
1	203511	1	1	COPERCHIO MANUBRIO	COVER	DECKEL	TAPA	
2	410250	2	2	MANOPOLA IN GOMMA	KNOB	HANDBRIGG	EMPUÑADURA	
3	415140	2	2	TUBO MANUBRIO	PIPE	ROHR	TUBO	
4	415686	2	2	GUARNIZIONE OR	O-RING	JOINT	JUNTA ANULAR	
5	400664	2	2	RONDELLA MANUBRIO	WASHER	RONDELLE	ARANDELA	
6	400646	1	1	LEVA	LEVER	LEVIER	PALANCA	
7	410316	2	2	TESTINA REGISTRABILE	ADJUSTABLE HEAD	TETE REGLABLE	CABEZA AJUSTABLE	
8	203279	2	2	PERNETTO	PIN COUPLER	AXE A FIXATION	PASADOR	
9	415141	1	1	ALBERO	SHAFT	ARRE	EJE	
10	400647	1	1	LEVA	LEVER	LEVIER	PALANCA	
11	203510	1	1	CORPO MANUBRIO	HANDLE BAR BODY	CORPS DE TIMON	CUERPO MANILLAR	
12	409752	1	1	PRESSACAVO	FAIR-LEAD	PRESSE-ETOUIPE	BRIDA CABLE	
13	415142	2	2	PIASTRINA	SUPPORT PLATE	PLAQUETTE	FÜHRUNGSHOLMKÖRPER	
14	409754	1	1	DADO 1/2 GRIGIO x PRESSACAVO	NUT	STÜTZPLATTE	KABELFÜHRUNG	
15	210183	1	1	BOCCOLA PER CAMMA PEDALE	BUSHING	MUTTER	OREJA DE APOYO	
16	407596	1	1	MOLLA POTENZIOMETRO	SPRING	BUCHSE	TIERCA	
17	400678	1	1	CORONA PER COMANDO MARCIA	CROWN GEAR	FEDER	CASQUILLO	
18	415810	1	1	GRANO M6X4,5	TIE ROD	RESSORT	RESORTE	
19	400648	2	2	PIASTRINA DI COMPENSO	SUPPORT PLATE	PLAQUETTE	ZAHNKRÄTTEL	
20	203508	1	1	STAFFA MANUBRIO	BRACKET	ATTAKUE	CORONA DENTADA	
21	409248	1	1	POTENZIOMETRO	POTENZIOMETRE	SPANNSTANGE	TIRANTE	
22	400679	1	1	PIGNONE PER COMANDO MARCIA	PINION	STÜTZPLATTE	OREJA DE APOYO	
23	411973	2	2	MICROINTERRUTTORE	MICROSWITCH	BÜGEL	SOPORTE FIJADOR	
25	203507	1	1	STAFFA INTERNA	BRACKET	KABEL	CUERDA	
26	414545	1	1	CAVO BATTERIA	CABLE	CABLE	POTENCIOMETRO	
27	406398	1	1	CAVO PONTE BATTERIE	CABLE	KABEL	PIÑON	
28	204355	1	1	CONNETTORE FEMMINA	CONNECTEUR FEMELLE	STECKER OHNE ZAPFEN	MIKROSCHALTER	
29	204354	1	1	CONNETTORE MASCHIO	CONNECTEUR MALE	LADESSTECKER MIT ZAPFEN	SOPORTE FIJADOR	
50	-	-	-	VITE Ø 4,8X32 AUTOFIL. UNI 6954	SCREW	SCHRAUBE	CUERDA	
51	-	-	-	DADO M5 UNI 5588	NUT	MUTTER	CONNECTADOR	
52	-	-	-	VITE M3X20 UNI 5739 A2	SCREW	SCHRAUBE	CONNECTADOR	
53	-	-	-	DADO M3 AUTOBL. UNI 7474	LOCK NUT	STOPMUTTER	TORNILLO	
54	-	-	-	VITE Ø 4,8X25 AUTOFIL. UNI 6954	SCREW	SCHRAUBE	STOPMUTTER	
55	-	-	-	DADO M6 AUTOBL. UNI 7474	LOCK NUT	SCHRAUBE	STOPMUTTER	
56	-	-	-	VITE M6X45 UNI 5739	SCREW	STOPMUTTER	STOPMUTTER	
57	-	-	-	DADO M5 AUTOBL. UNI 7474	LOCK NUT	SCHRAUBE	STOPMUTTER	
58	-	-	-	ROSETTA M6 D.18 UNI 6593	WASHER	SCHEIBE	SCHEIBE	
59	-	-	-	VITE M6X20 UNI 5739	SCREW	SCHRAUBE	SCHEIBE	
60	-	-	-	ROSETTA M6 UNI 6592	WASHER	SCHRAUBE	SCHEIBE	
61	-	-	-	VITE M8X20 UNI 5739	SCREW	SCHRAUBE	SCHEIBE	
62	-	-	-	ROSETTA M8 DIN 6798/A	LOCK WASHER	RODELLE	RODELLE	
63	-	-	-	WASHER	RONDELLE	RONDELLE	ARANDELA DENTADA	

10A


REV. 0'

GRUPPO MANUBRIO BT /  
 HANDLE BAR ASSEMBLY BT /  
 GROUPE DE TIMON BT /  
 FÜHRUNGSHOLMGRUPPE BT /  
 GRUPO MANILLAR BT /

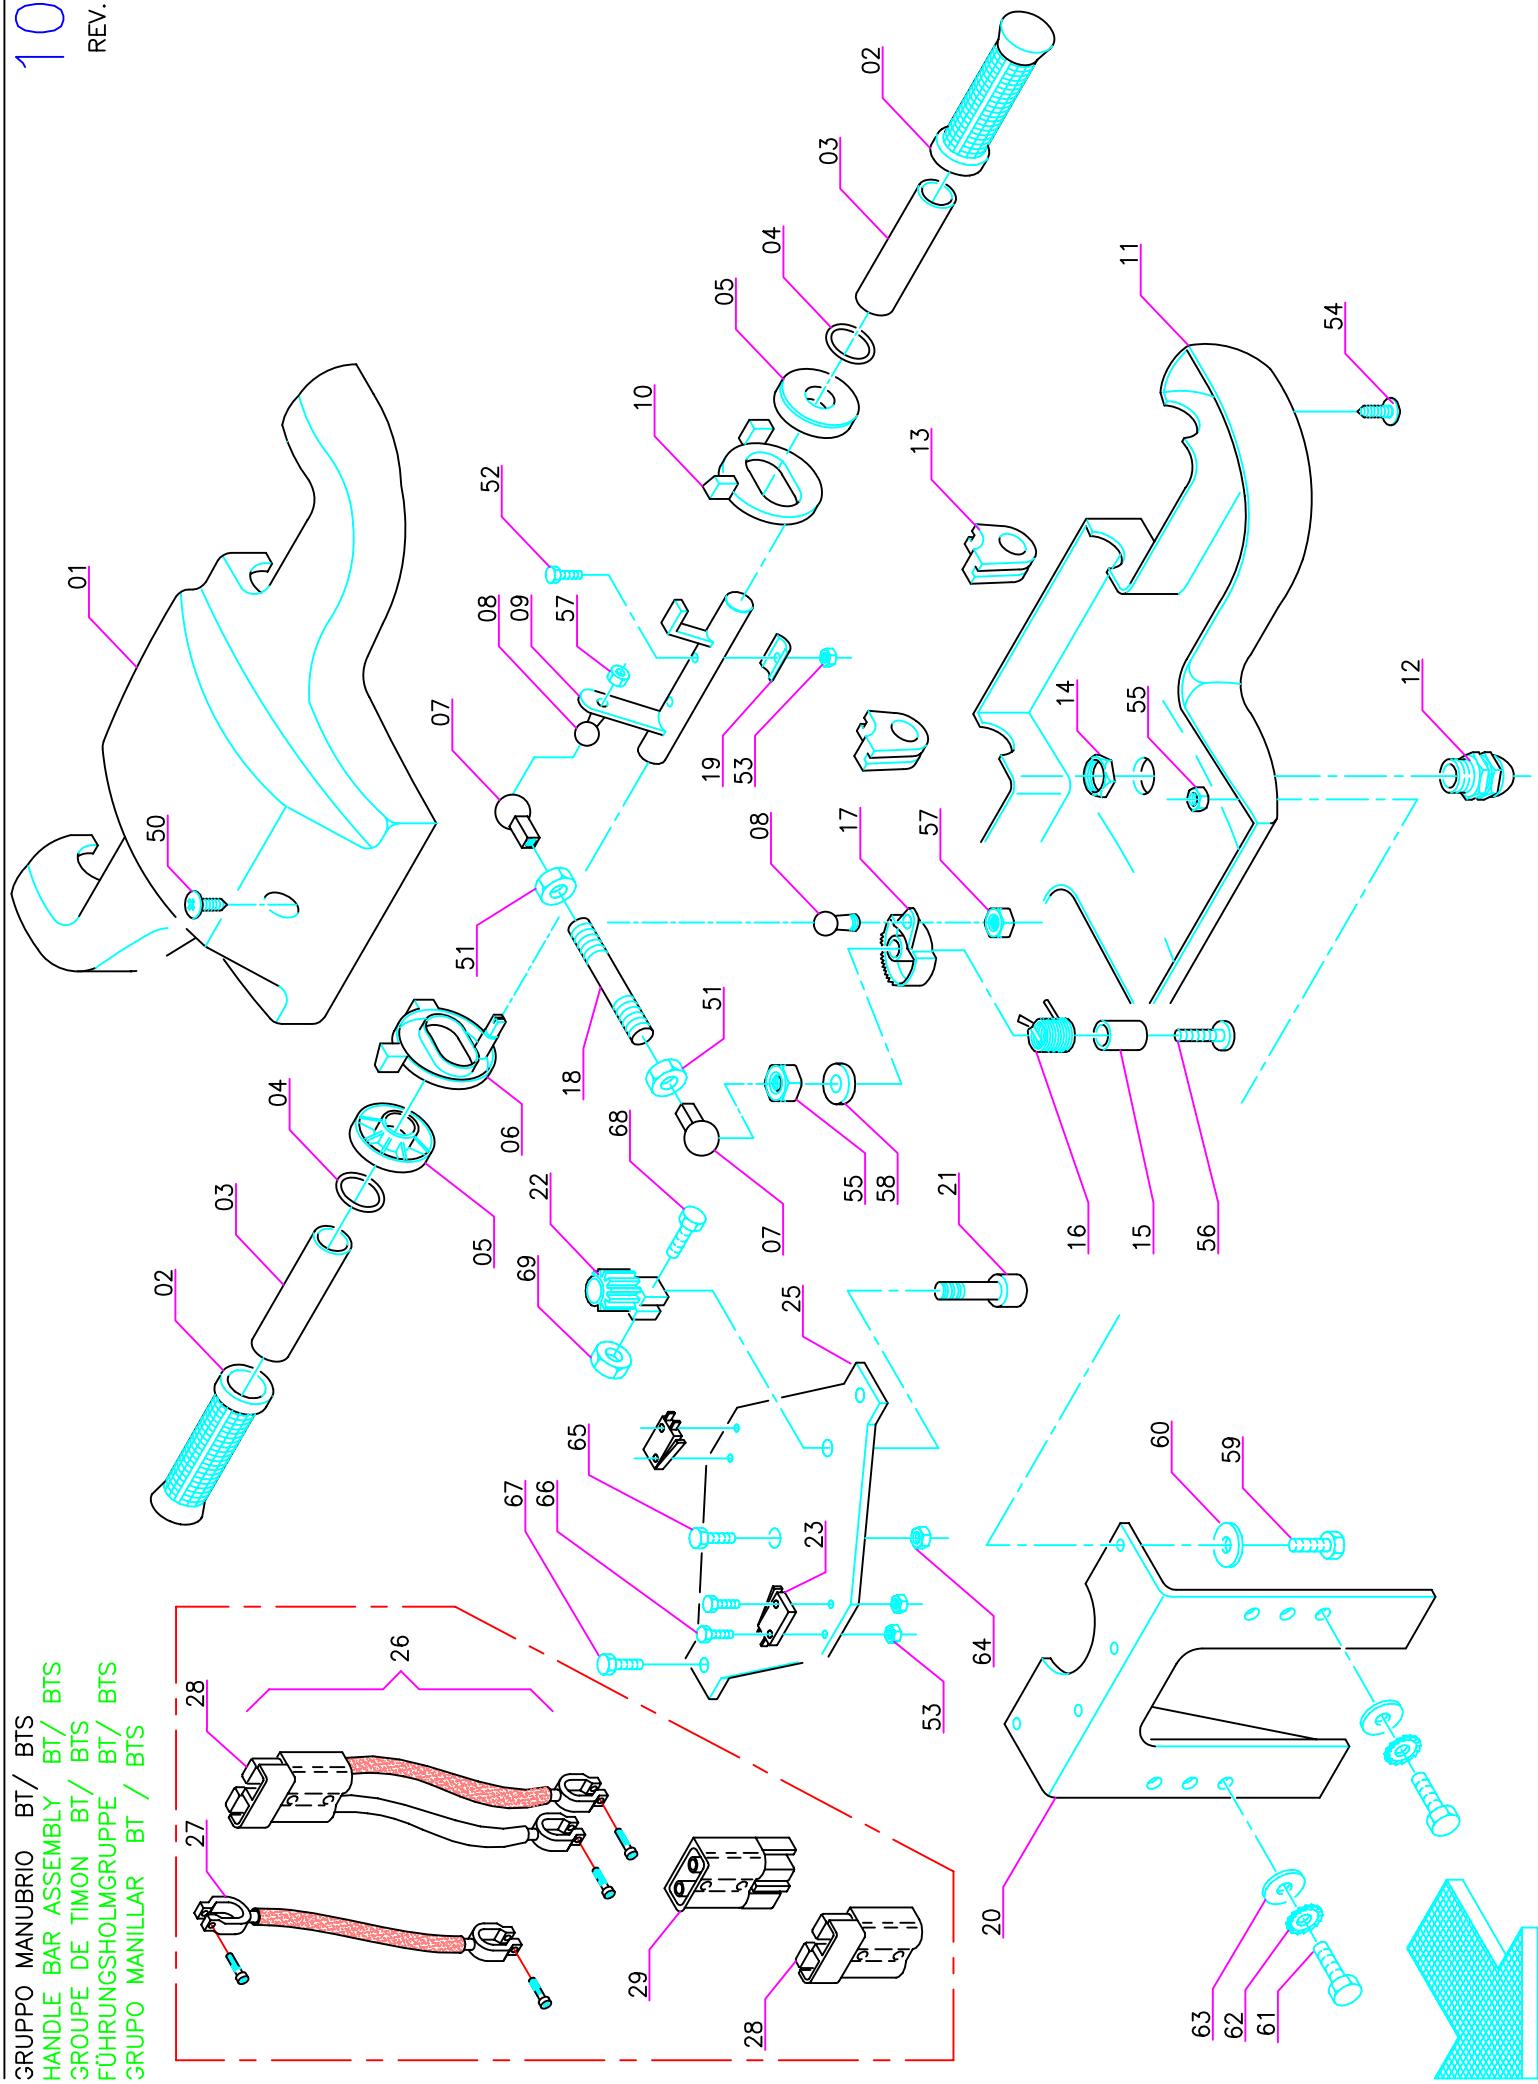

**TAV.10A rev.0A**


GRUPPO MANUBRIO BT / BTS				Denomination	Description	Benennung	Descripciom
Pos.	Mod.	Codice	Q.tà	Denominazione			
64	-	-	-	DADO M4 UNI 5588	NUT	MUTTER	TUERCA
65	-	-	-	VITE M4X16 UNI 5739	SCREW	SCHRAUBE	TORNILLO
66	-	-	-	VITE M3X16 UNI 7687	SCREW	SCHRAUBE	TORNILLO
67	-	-	-	VITE Ø 4,8X13 AUTOFIL. UNI 6954	SCREW	SCHRAUBE	TORNILLO
68	-	-	-	VITE M4X20 UNI 5739	SCREW	SCHRAUBE	TORNILLO
69	-	-	-	DADO M4 AUTOBL. UNI 7474	LOCK NUT	STOPMUTTER	TUERCA AUTOBLOCANTE

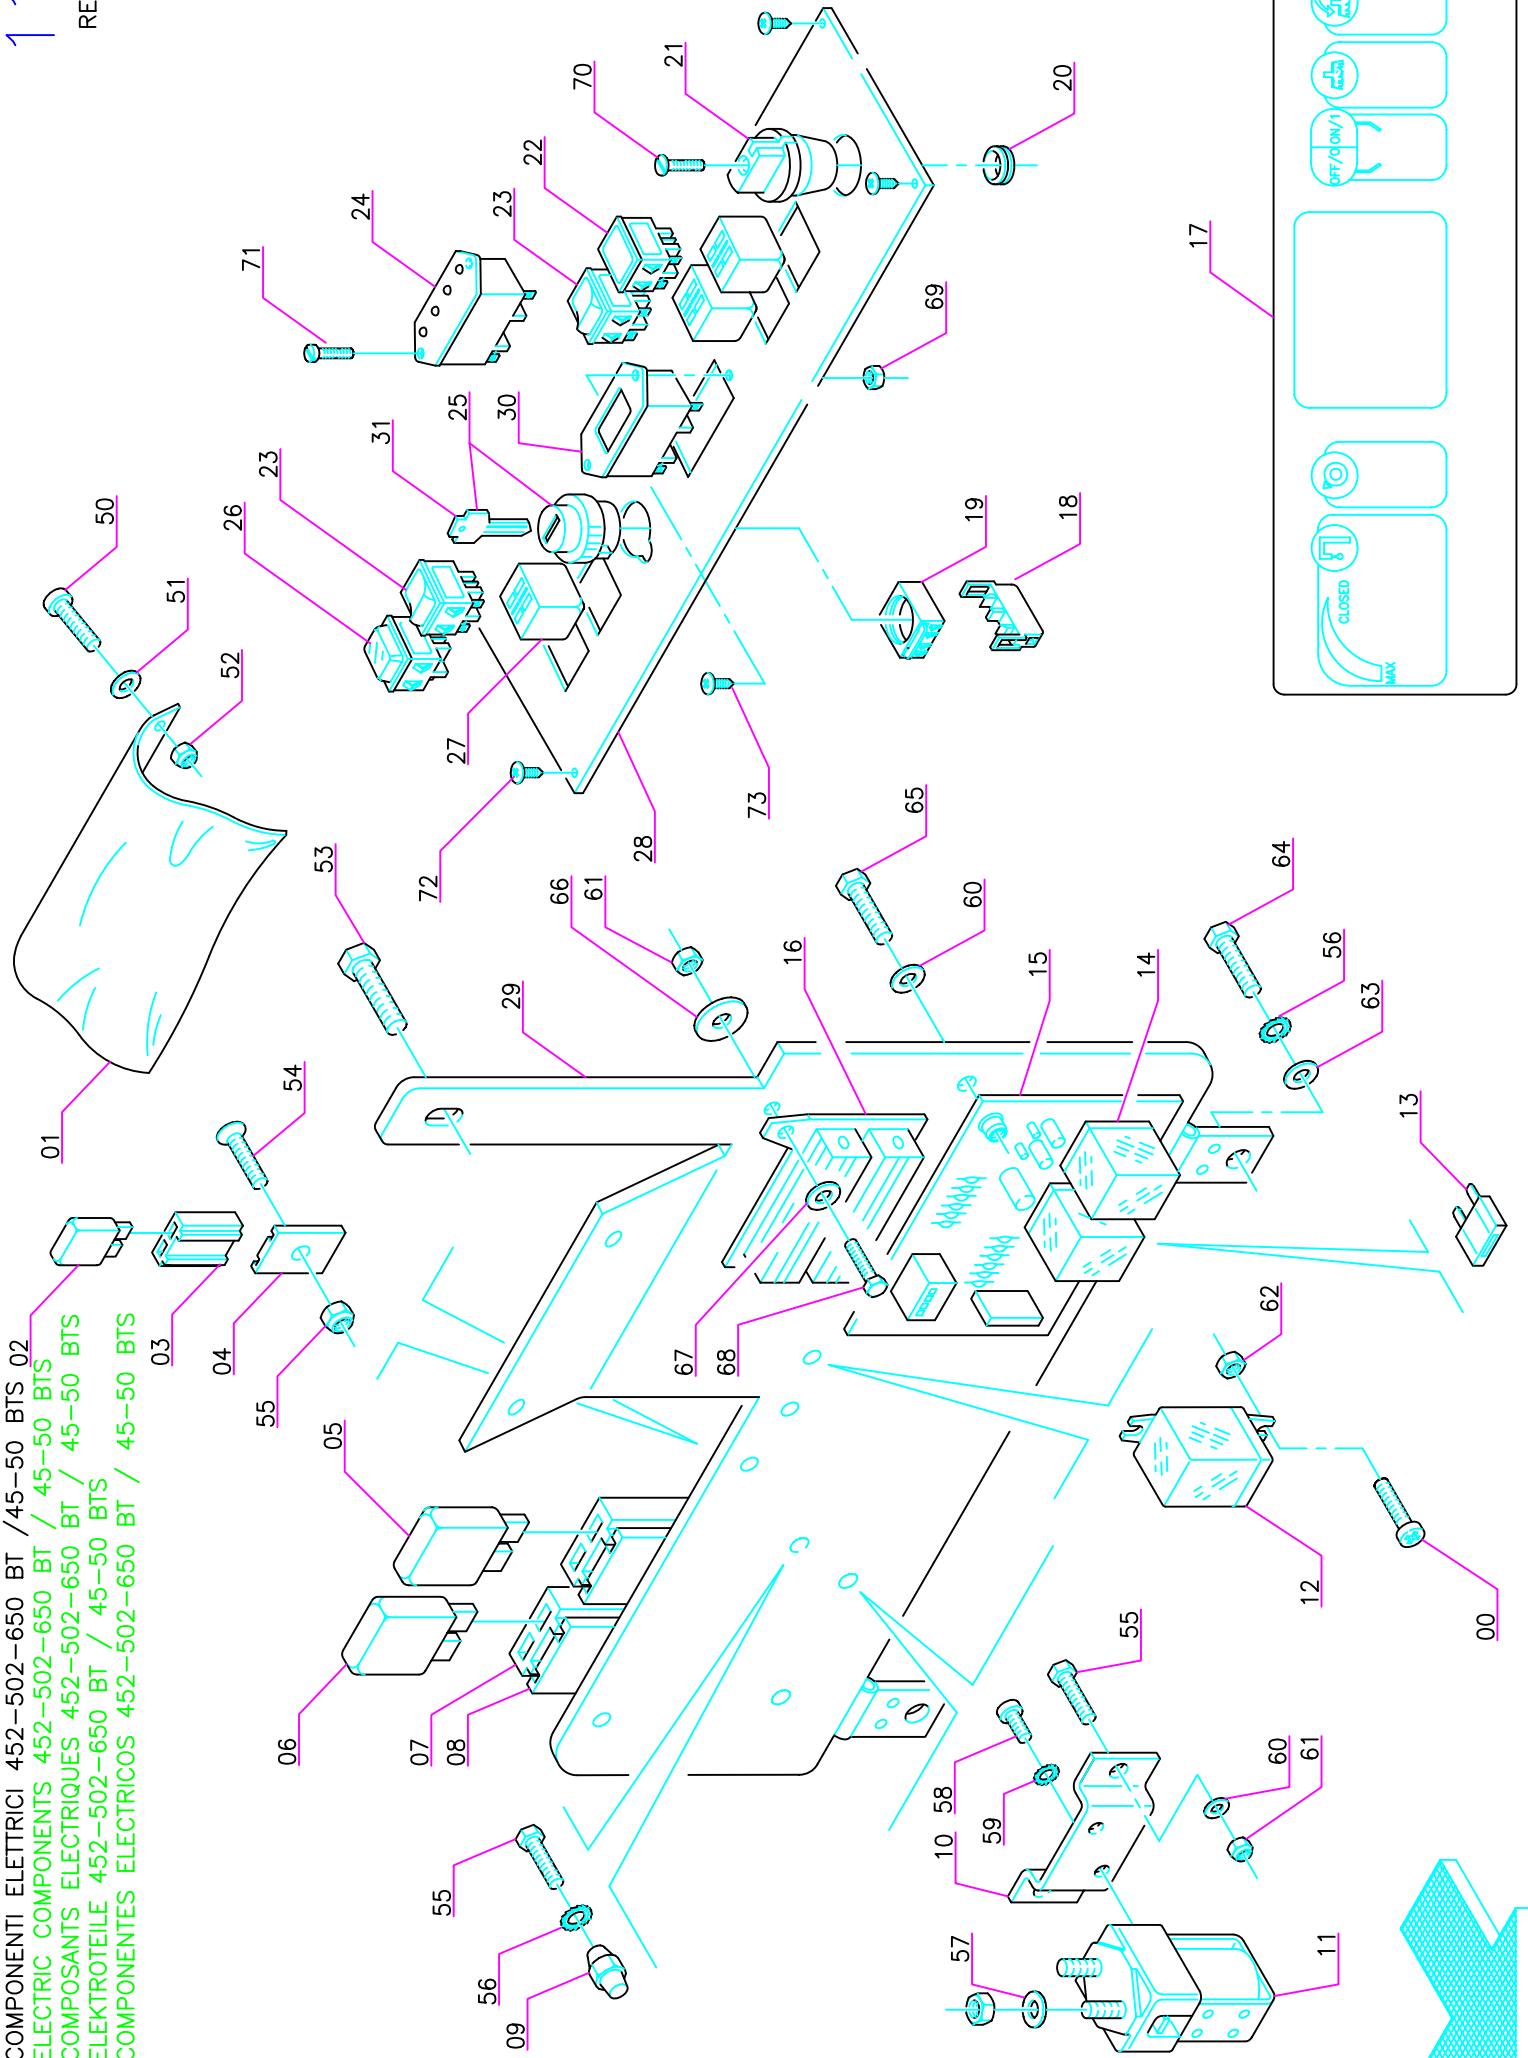

## TAV.11C rev.01

## GRUPPO COMPONENTI ELETTRICI 452-502 BT / 45-50 BTS / 650 BT

Pos.	Mod.	Codice	Q.tà	Denominazione	Denomination	Description	Benennung	Descripción
1		415152	2	PROTEZIONE	PROTECTION		SCHUTZ	PROTECCION
2		409592	1	FUSIBILE 3A	FUSE	FUSIBLE	SICHERUNG	FUSIBLE
3		409585	1	PORTAFUSIBILE	FUSE BOX	BOITE A FUSIBLES	SICHERUNGSDOSE	CAJA DE FUSIBLES
4		409869	1	PIASTRINA	PLATE	PLAQUE	TELLER	PLACA
5		409614	1	MAXIFUSIBILE 60A	MAXIFUSE	MAXIFUSIBLE	MAXISICHERUNG	MAXIFUSIBLE
6		409607	1	MAXIFUSIBILE 30A	MAXIFUSE	MAXIFUSIBLE	MAXISICHERUNG	MAXIFUSIBLE
7		409586	2	CORPO PORTAMAXIFUSIBILE	CORPO PORTAMAXIFUSIBILE	PORTE MAXIFUSIBLE	MAXISICHERUNGSSLAGER	PORTA MAXIFUSIBLE
8		409872	2	PIASTRINA PORTAFUSIBILE	PLATE	PLAQUE	TELLER	PLACA
9		409767	1	ISOLATORE	INSULATOR	ISOLATEUR	ISOLATOR	ISOLADOR
10		409270	1	STAFFA TELERUTTORE	SUPPORT	ATTACHE	HALTERUNG	SOPORTE FIJADOR
11		407576	1	TELERUTTORE	REMOTE CONTROL	TELERUPTEUR	FERNSTEUR	CONTROL REMOTO
12		407580	1	RELE'	RELAY	RELAIS	RELAIS	RELE
13		409605	1	FUSIBILE 30A	FUSE	FUSIBLE	SICHERUNG	FUSIBLE
14		407581	2	RELE'	RELAY	RELAIS	RELAIS	RELE
15		414527	1	SCHEDA CHOPPER	CHOPPER CARD	VARIATEUR ELECTRONIQUE	ELEKTRONIKKARTE	FICHA-CHOPPER
16		416025	2	RESISTENZE	RESISTANCE	WINDERSTAND	WINDERSTAND	RESISTENCIA
17		413967	1	ETICHETTA	LABEL	SCHILD	KONTAKT	ETIQUETA
18		409246	1	CONTATTO	CONTACT	CONTACT	CONTACT	CONTACTO
19		409262	1	FLANGIA PER CONTATTO	FLANGE	FLANSCH	FLANSCH	BRIDA
20		409810	1	PASSACAVO	FAIRLEAD	KABELMUFFE	GRIFF	GUIACABLE
21		400332	1	MANOPOLA RUBINETTO	HANDLE	POIGNEE	GRUNER ANZEIGER	MANGO
22		409539	1	SEGNALE VERDE 24V	GREEN INDICATOR	INDICATEUR VERT	GRUNER SCHALTER	SEIGNAL VERDE
23		409483	2	INTERRUTTORE VERDE 24V	GREEN SWITCH	INTERRUPTEUR VERT	KARTE	INTERRUPTOR VERDE
24		411729	1	SCHEDA LIVELLO BATTERIA 24V	CARD	FICHE	SCHALTER MIT SCHLUSSER	FICHA
25		409261	1	INTERRUTTORE CON CHIAVE	SWITCH WITH KEY	INTERRUPTEUR AVEC CLE	DECKEL	INTERRUPTOR CON LLAVE
26		409566	1	CORPIFORO	PLUG	BOUCHON	SOCKEL	TAPON
27		409296	3	ZOCCOLO POLARIZZATO	BASE	SOUFASSEMENT	BLECH	CHANCLIO
28		203524	1	LAMIERA CRUSCOTTO	SHEET	TOLE	TAFEL	CHAPA
29		203526	1	PANNELLO IMPIANTO ELETTRICO	PANNEL	PANNEAU	PANEL	PANEL
30	*	409772	1	CONTAORE	HOUR METER	COMPTEUR HORAIRES	BETRIEBSSTUNDENZAHLER	CUENTAHORAS
31		409297	1	CHIAVE	KEY	CLAVE	KEIL	LLAVE
50	-	-	-	VITE M4X10 UNI7687	SCREW	VIS	SCHRAUBE	TORNILLO
51	-	-	-	RONDELLA M4 D.12 UNI 6593	WASHER	RONDELLE	SCHRAUBE	ARANDELA
52	-	-	-	DADO M4 AUTOBL. UNI 7474	LOCK NUT	ECROU AUTOBLOQUANT	STOPMUTTER	TUERCA AUTOBLOCANTE
53	-	-	-	VITE Ø 5,5X10 AUTOFIL. UNI 6954 A2	SCREW	VIS	SCHRAUBE	TORNILLO
54	-	-	-	VITE M4X12 UNI 7688	SCREW	VIS	SCHRAUBE	ARANDELA
55	-	-	-	VITE M5X12 UNI5739	SCREW	VIS	SCHRAUBE	TORNILLO
56	-	-	-	RONDELLA M5 DIN 6798/A	LOCK WASHER	RONDELLE	ZAHNSCHEIBE	ARANDELA DENTADA
57	-	-	-	RONDELLA M8 UNI 6592 OTTONE	WASHER	VIS	SCHEIBE	ARANDELA
58	-	-	-	VITE M4X6 UNI 7687	SCREW	VIS	SCHRAUBE	TORNILLO
59	-	-	-	RONDELLA M4 DIN 6798/A	LOCK WASHER	RONDELLE	ZAHNSCHEIBE	ARANDELA DENTADA
60	-	-	-	RONDELLA M5 UNI 6592	WASHER	RONDELLE	SCHEIBE	ARANDELA

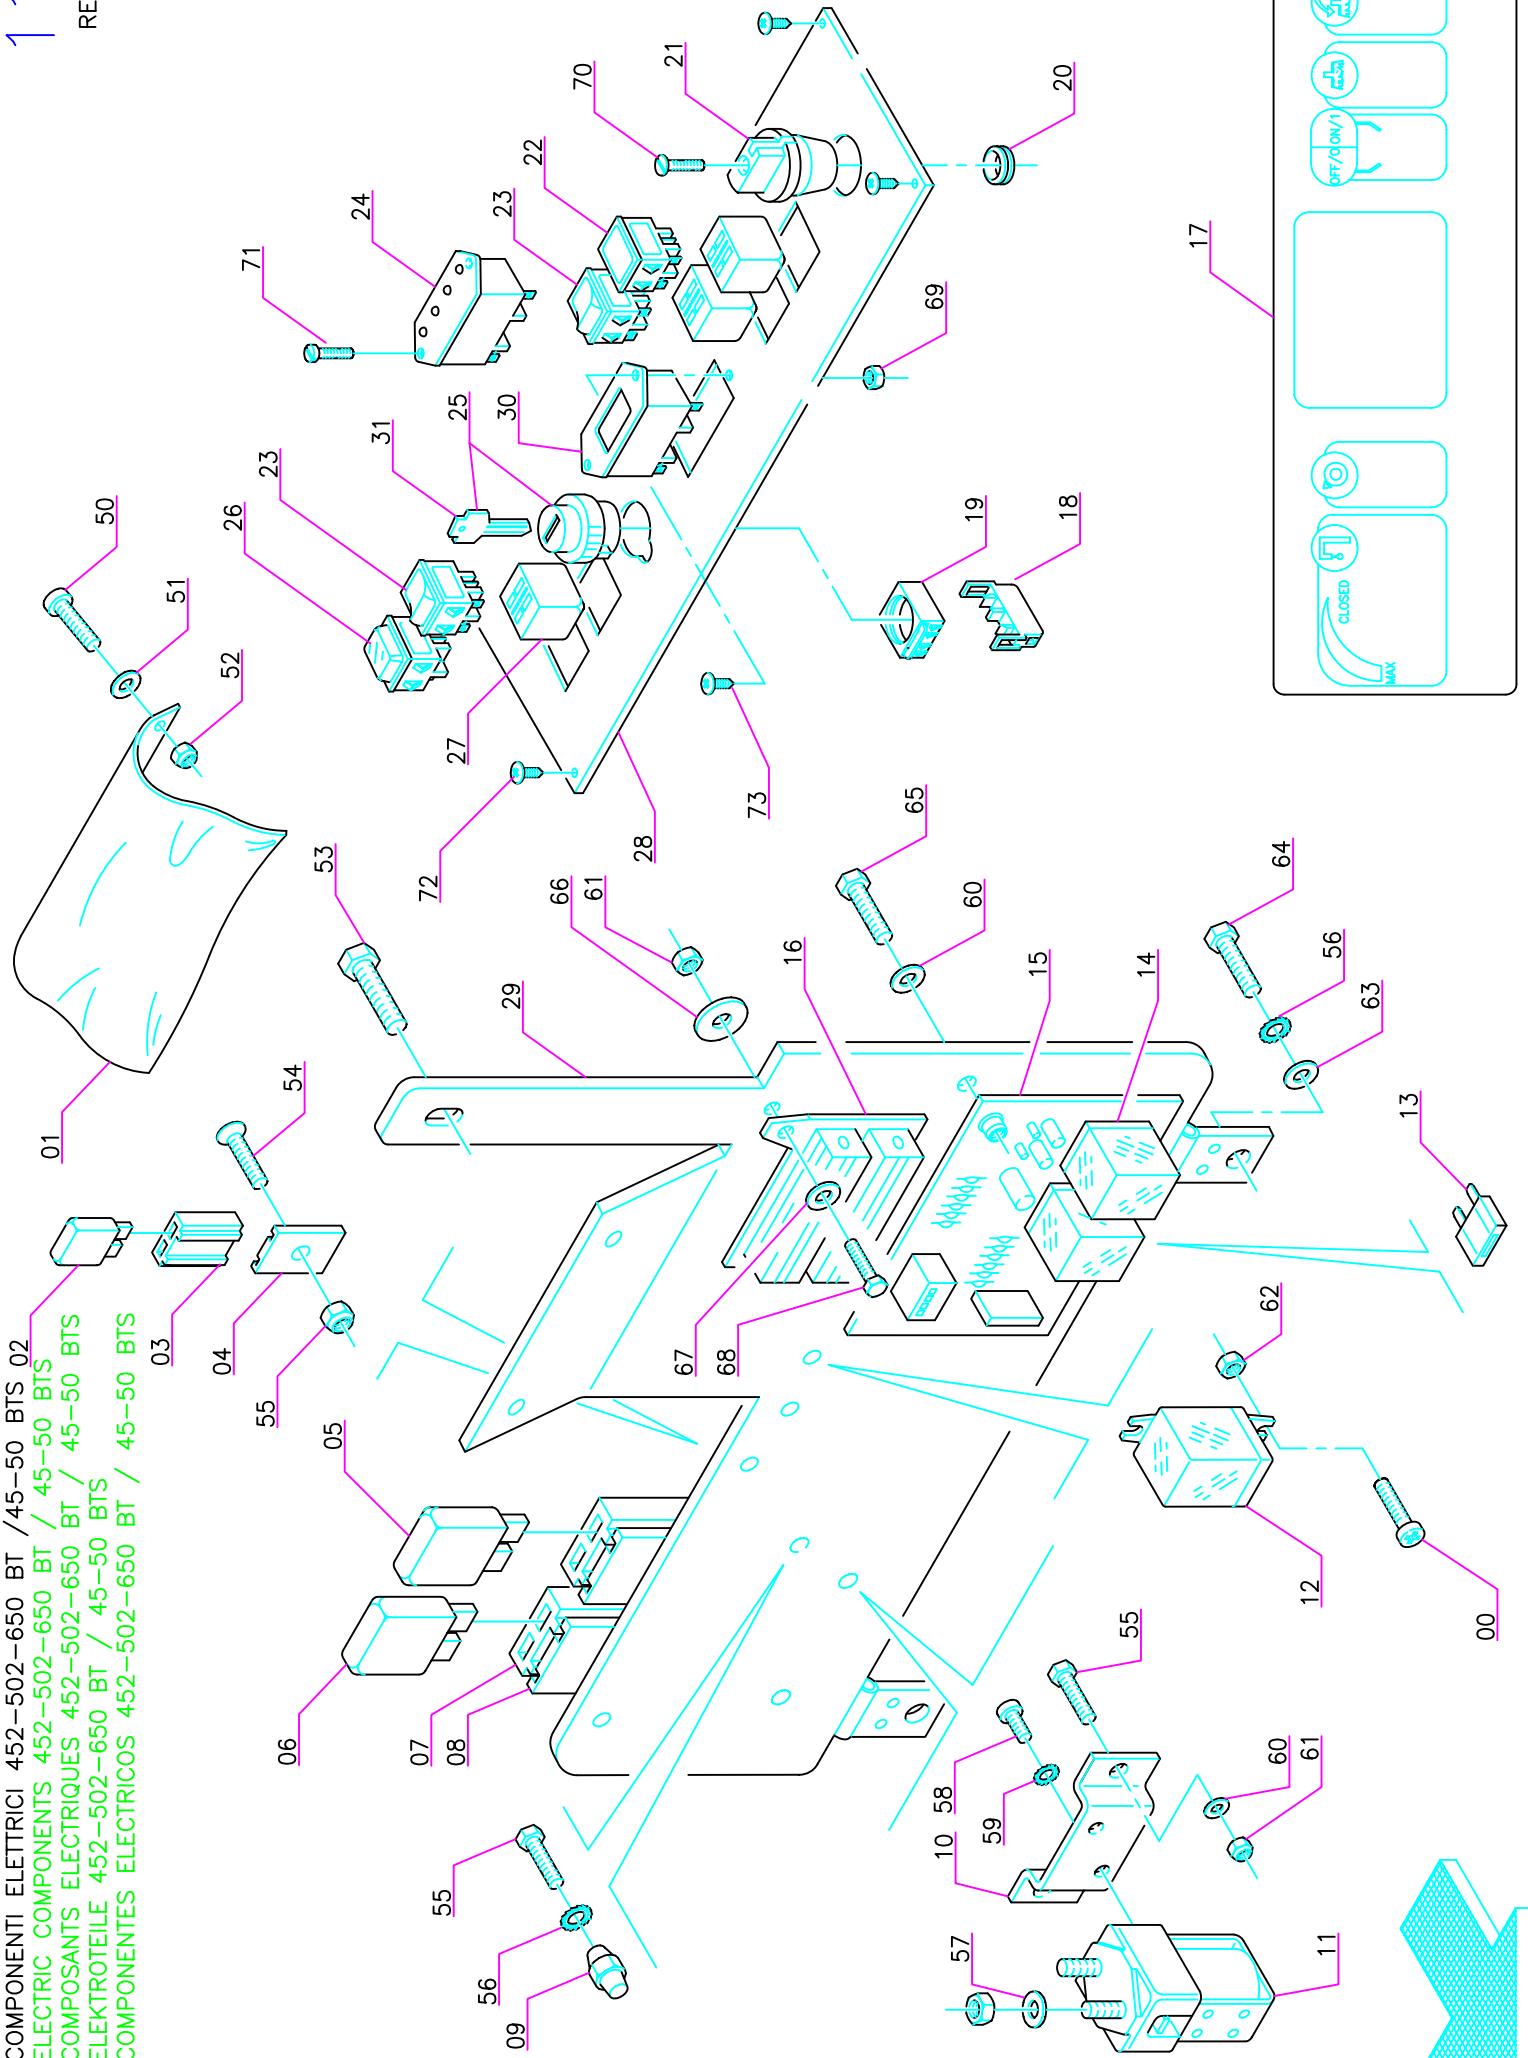

**TAV.11C rev.01**

GRUPPO COMPONENTI ELETTRICI 452-502 BT / 45-50 BTS / 650 BT


Pos.	Mod.	Codice	Q.tà	Denominazione	Denomination	Description	Benennung	Descripción
61	-	-	-	DADO M5 AUTOBL. UNI 7474	LOCK NUT	ECROU AUTOBLOQUANT	STOPMUTTER	TUERCA AUTOBLOCANTE
62	-	-	-	DADO M4 UNI 5588	NUT	ECROU	MUTTER	ARANDELA
63	-	-	-	RONDELLA M5 D.15 UNI 6593	WASHER	RONDELLE	SCHEIBE	ARANDELA
64	-	-	-	VITE M5X16 UNI 5739	SCREW	VIS	SCHRAUBE	TORNILLO
65	-	-	-	VITE M5X12 UNI 5739	SCREW	VIS	SCHRAUBE	TORNILLO
66	-	-	-	RONDELLA M5 D.20 UNI 6593	WASHER	RONDELLE	SCHEIBE	ARANDELA
67	-	-	-	RONDELLA M5 D.15 UNI 6593	WASHER	RONDELLE	SCHEIBE	ARANDELA
68	-	-	-	VITE M5X30 UNI 5739	SCREW	VIS	SCHRAUBE	TORNILLO
69	-	-	-	DADO M3 AUTOBL. UNI 7474	LOCK NUT	ECROU AUTOBLOQUANT	STOPMUTTER	TUERCA AUTOBLOCANTE
70	-	-	-	VITE M4X8 UNI 7688	SCREW	VIS	SCHRAUBE	TORNILLO
71	-	-	-	VITE M3X16 UNI 7687 A2	SCREW	VIS	SCHRAUBE	TORNILLO
72	-	-	-	VITE Ø 4,8X13 AUTOFIL. UNI 6954	SCREW	VIS	SCHRAUBE	TORNILLO
73	*	-	-	VITE Ø 4,2X13 AUTOFIL. UNI 6954	SCREW	VIS	SCHRAUBE	TORNILLO

\* = 452-502BT PROFY LINE ;45BTS INDY LINE

GRUPPO COMANDO TERGIPIAVIMENTO B/BS  
SQUEEZE CONTROL ASSEMBLY B/BS  
COMMANDE DE SUCEUR B/BS  
SAUGFUSSBETÄTTIGUNG B/BS  
MANDO LIMPPIAPAVIMENTOS B/BS

13


REV. 01

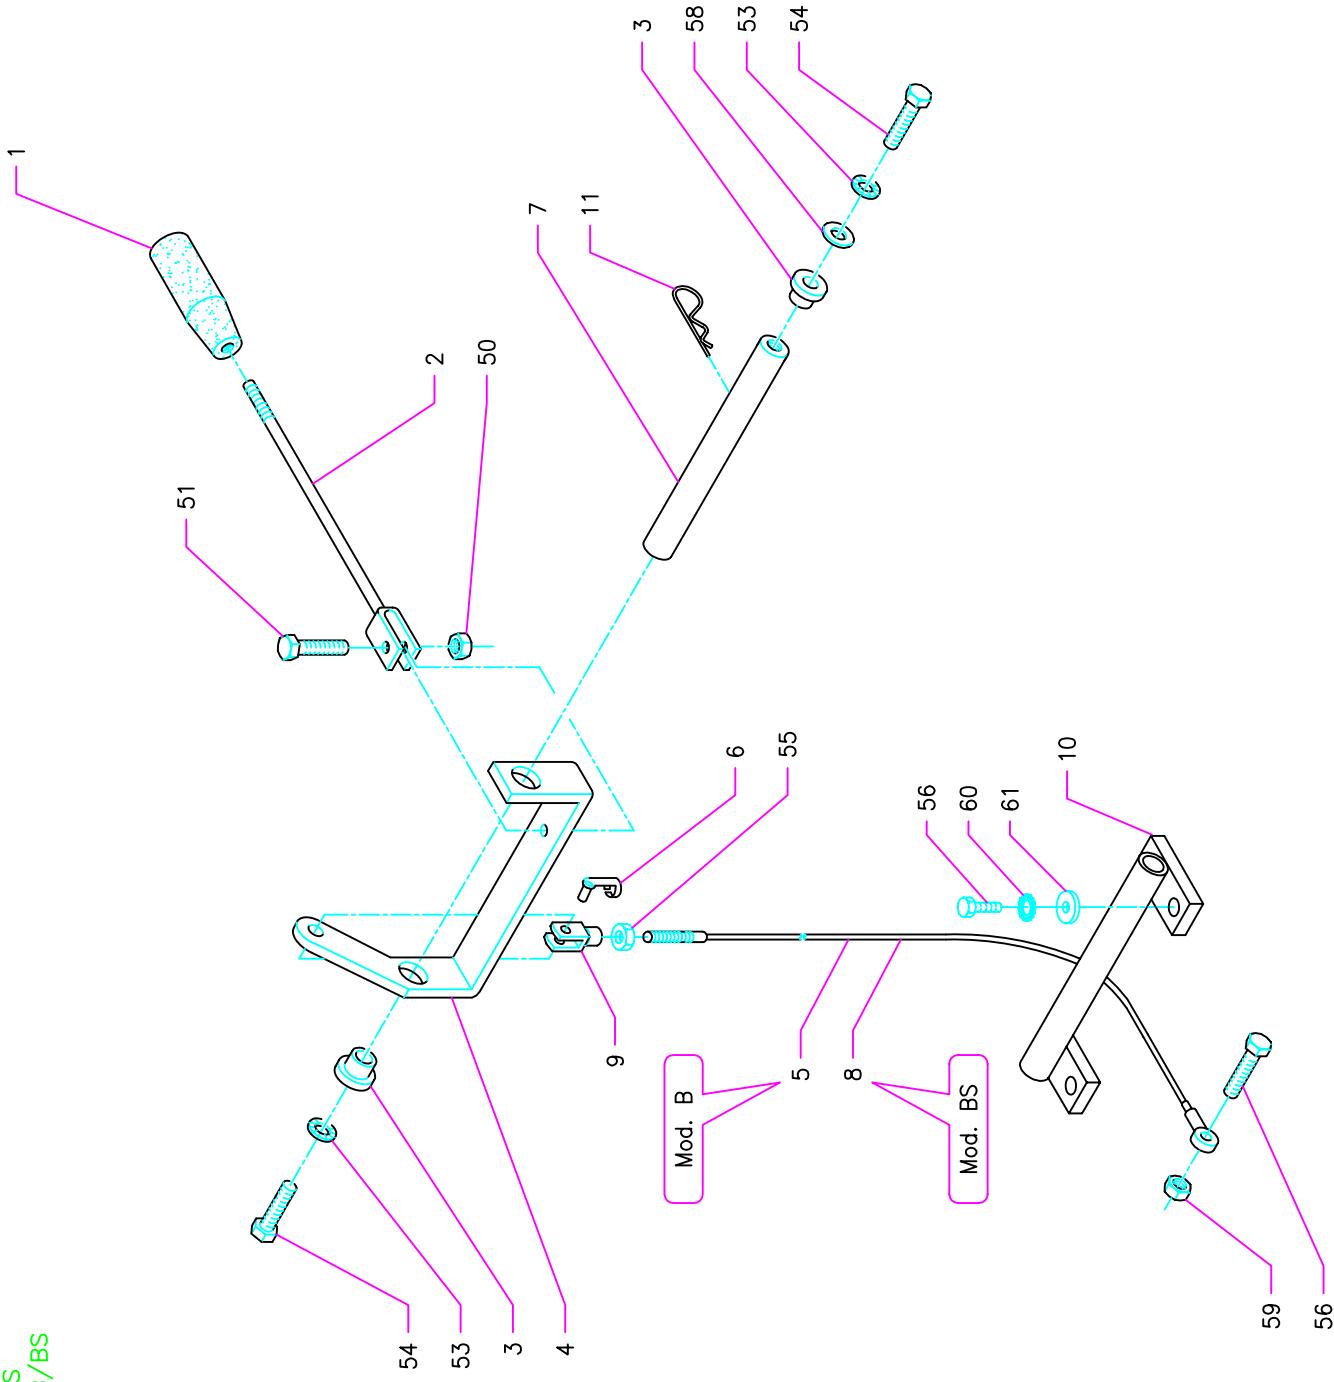

**TAV.13 rev.01**
**GRUPPO COMANDO TERGIPAVIMENTO B-BS**


<b>Pos.</b>	<b>Mod.</b>	<b>Codice</b>	<b>Q.tà</b>	<b>Denominazione</b>	<b>Denomination</b>	<b>Description</b>	<b>Bennnung</b>	<b>Descripcion</b>
1		410265	1	MANOPOLA	HANDLE	POGNEE	GRIFF	MANGO
2		206840	1	MANETTA TERGIPAVIMENTO	HANDLE	MENOTTES	HANDSCHELLE	MANETA
3		414726	2	BOCCOLA	BUSHING	DOUILLE	BUCHSE	CASQUILLO
4		203497	1	LEVA SOLLEVAMENTO	LEVER	LEVIER	HEBEL	PALANCA
5	B	415133	1	CAVO TERGIPAVIMENTO	CABLE	CABLE	KABEL	CABLE
6		410463	1	CLIPS PER FORCELLA	FORK PIN	FORK PIN	BOLZEN	PERNO
7		203498	1	ALBERO COMANDO TERGIPAVIM.	SHAFT	SHAFT	WELLE	EJE
8	BS	415154	1	CAVO TERGIPAVIMENTO	CABLE	CABLE	KABEL	CABLE
9		410455	1	FORCELLA	FORK	FOURCHE	GABEL	HORQUILLA
10		203499	1	STAFFA TENDICAVO	BRACKET	ATTACHE	BÜGEL	SOPORTE FIJADOR
11		409392	1	SPILLO Ø 2	PIN	CHEVILLE	STIFT	PASADOR
50	-	-	-	DADO M6 AUTOBL. UNI 7474	LOCK NUT	ECROU AUTOBLOQUANT	STOPMUTTER	TUERCA AUTOBLOQUEANTE
51	-	-	-	VITE M6X16 UNI 5739	SCREW	VIS	SCHRAUBE	TORNILLO
53	-	-	-	RONDELLA M6 DIN 6798/A	LOCK WASHER	RONDELLE	ZAHNSCHEIBE	ARANDELA DENTADA
54	-	-	-	VITE M6X20 UNI 5739	SCREW	VIS	SCHRAUBE	TORNILLO
55	-	-	-	DADO M6 UNI 5588	NUT	ECROU	MUTTER	TUERCA
56	-	-	-	VITE M5X16 UNI 5739	SCREW	VIS	SCHRAUBE	TORNILLO
58	-	-	-	RONDELLA M6 D.18 UNI 6593	WASHER	RONDELLE	SCHEIBE	ARANDELA
59	-	-	-	DADO M5 UNI 5589	NUT	ECROU	MUTTER	TUERCA
60	-	-	-	ROSETTA M5 DIN 6798/A	LOCK WASHER	RONDELLE	ZAHNSCHEIBE	ARANDELA DENTADA
61	-	-	-	ROSETTA M5 D.15 UNI 6593	WASHER	RONDELLE	SCHEIBE	ARANDELA

GRUPPO COMANDO TERGIPIAVIMENTO – GRUPPO FRENO BT/BTS  
 SQUEEGE CONTROL ASSEMBLY – BRAKE ASSEMBLY BT/BTS  
 COMMANDE DE SUCEUR – GROUPE DE FREIN BT/BTS  
 SAUGFUSSBETÄTTIGUNG – BREMSANLAGE BT/BTS  
 MANDO LIMPIAPIAVIMENTOS – GRUPO FRENO BT/BTS

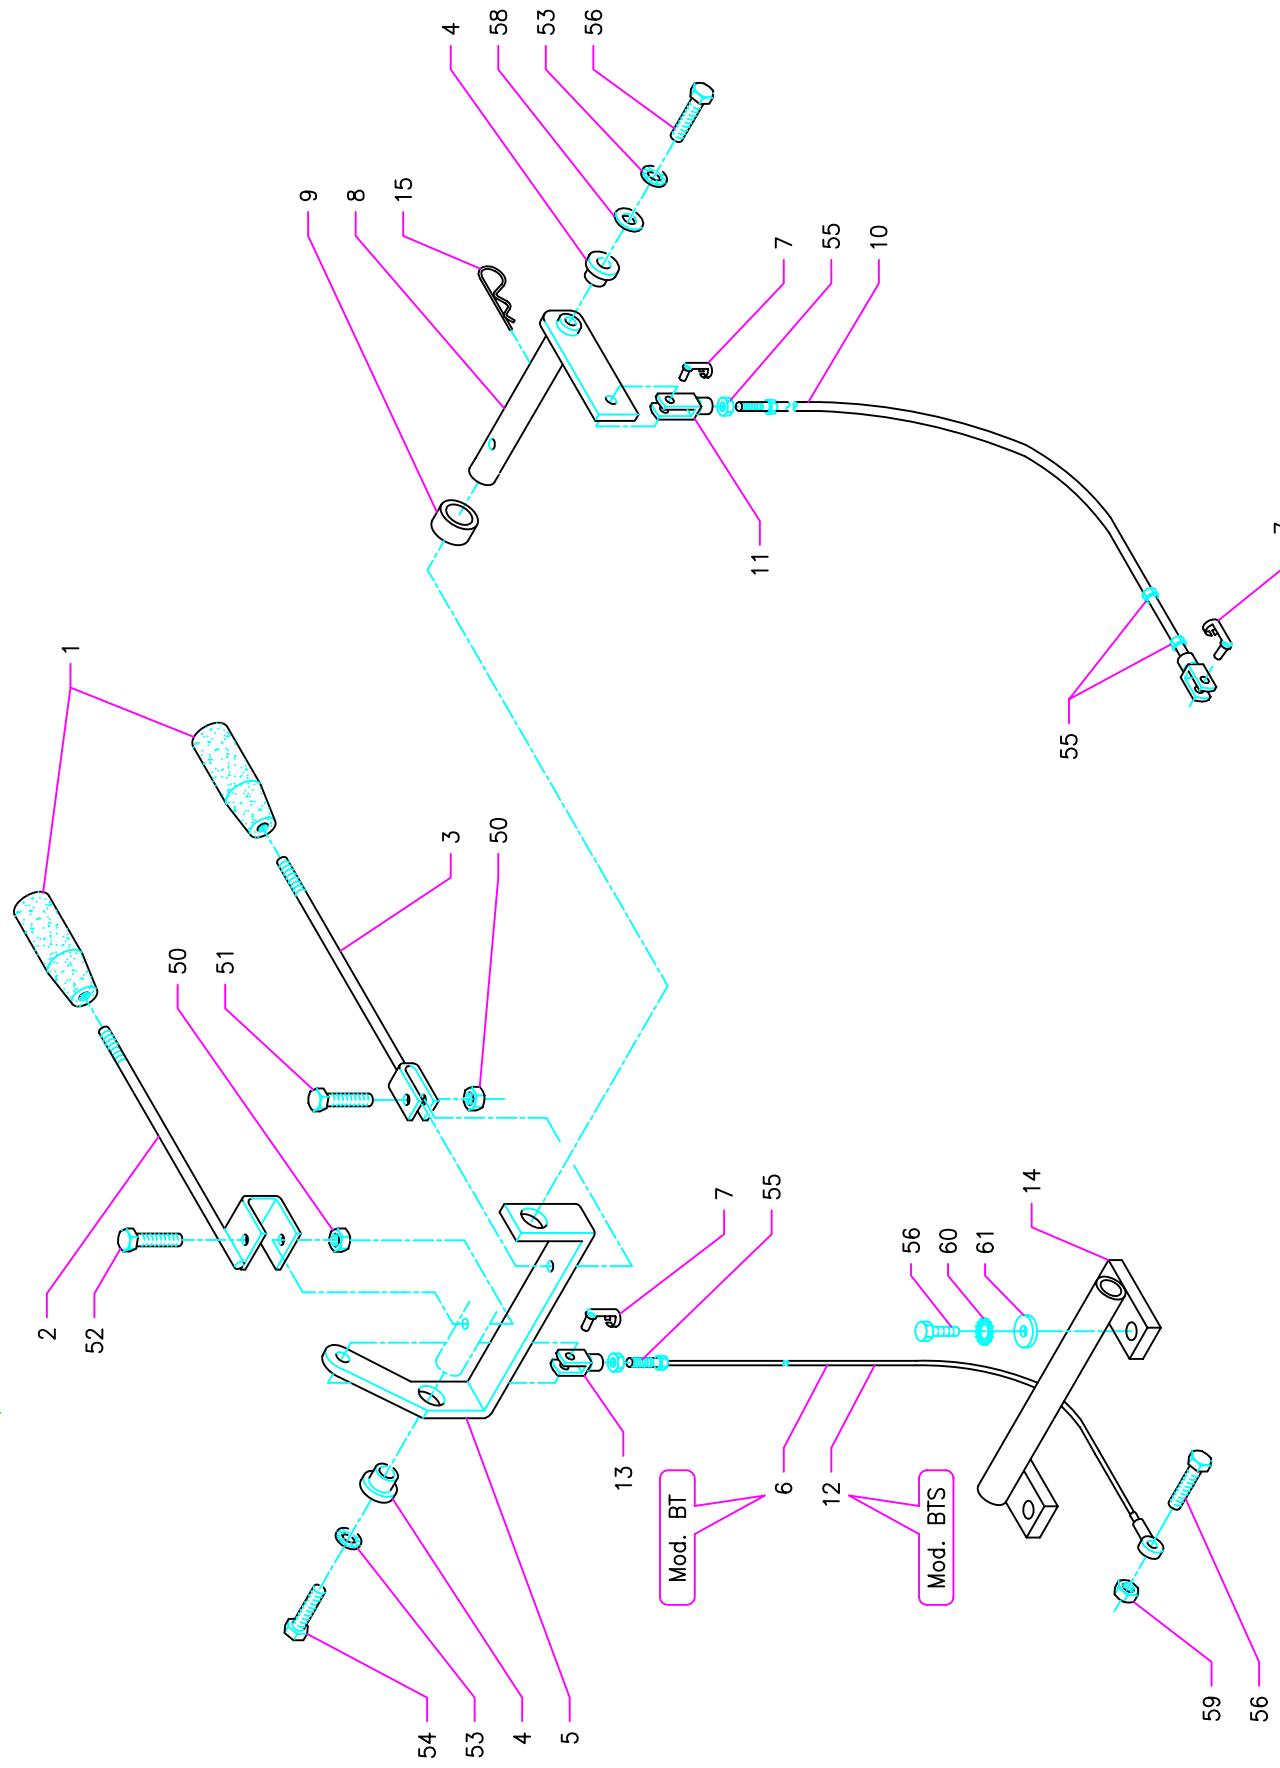


**TAV.13A rev.01** GRUPPO COMANDO TERGIPAVIMENTO – COMANDO FRENO BT-BTS

Pos.	Mod.	Codice	Q.tà	Denominazione	Denomination	Description	Bennnung	Descripcion
1		410265	2	MANOPOLA	HANDLE	POGNEE	GRIFF	MANGO
2		203506	1	MANETTA FRENO	HANDLE	MENOTTES	HANDSCHELLE	MANETA
3		206840	1	MANETTA TERGIPAVIMENTO	HANDLE	MENOTTES	HANDSCHELLE	MANETA
4		414726	2	BOCCOLA	BUSHING	DOUILLE	BUCHSE	CASQUILLO
5	BT	203497	1	LEVA SOLLEVAMENTO	LEVER	LEVIER	HEBEL	PALANCA
6		415133	1	CAVO TERGIPAVIMENTO	CABLE	CABLE	KABEL	CABLE
7		410463	3	CLIPS PER FORCELLA	FORK PIN	AXE	BOLZEN	PERNO
8		203505	1	ALBERO COMANDO FRENO	SHAFT	ARBRE	WELLE	EJE
9		202458	1	DISTANZIALE	SPACER	ENTRETOISE	ABSTANDSTUCK	SEPARADOR
10		415138	1	CAVO FRENO	CABLE	CABLE	KABEL	CABLE
11		410455	1	FORCELLA	FORK	FOURCHE	GABEL	HORQUILLA
12	BTS	415154	1	CAVO TERGIPAVIMENTO	CABLE	CABLE	KABEL	CABLE
13		410455	1	FORCELLA	FORK	FOURCHE	GABEL	HORQUILLA
14		203499	1	STAFFA TENDICAVO	BRACKET	ATTACHE	BÜGEL	SOPORTE FIJADOR
15		409392	1	SPILLO Ø 2	PIN	CHEVILLE	STIFT	PASADOR
50		-	-	DADO M6 AUTUBL. UNI 7474	LOCK NUT	ECROU AUTOBLOQUANT	STOPMUTTER	TUERCA AUTOBLOCANTE
51		-	-	VITE M6X16 UNI 5739	SCREW	VIS	SCHRAUBE	TORNILLO
52		-	-	VITE M6X30 UNI 5739	SCREW	VIS	SCHRAUBE	TORNILLO
53		-	-	RONDELLA M6 DIN 6798/A	LOCK WASHER	RONDELLE	ZAHNSCHEIBE	ARANDELA DENTADA
54		-	-	VITE M6X20 UNI 5739	SCREW	VIS	SCHRAUBE	TORNILLO
55		-	-	DADO M6 UNI 5588	NUT	ECROU	MUTTER	TUERCA
56		-	-	VITE M6X20 UNI 5739	SCREW	VIS	SCHRAUBE	TORNILLO
58		-	-	RONDELLA M6 D.18 UNI 6593	WASHER	RONDELLE	SCHEIBE	ARANDELA
59		-	-	DADO M5 UNI 5589	NUT	ECROU	MUTTER	TUERCA
60		-	-	ROSETTA M5 DIN 6798/A	LOCK WASHER	RONDELLE	ZAHNSCHEIBE	ARANDELA DENTADA
61		-	-	ROSETTA M5 D.15 UNI 6593	WASHER	RONDELLE	SCHEIBE	ARANDELA

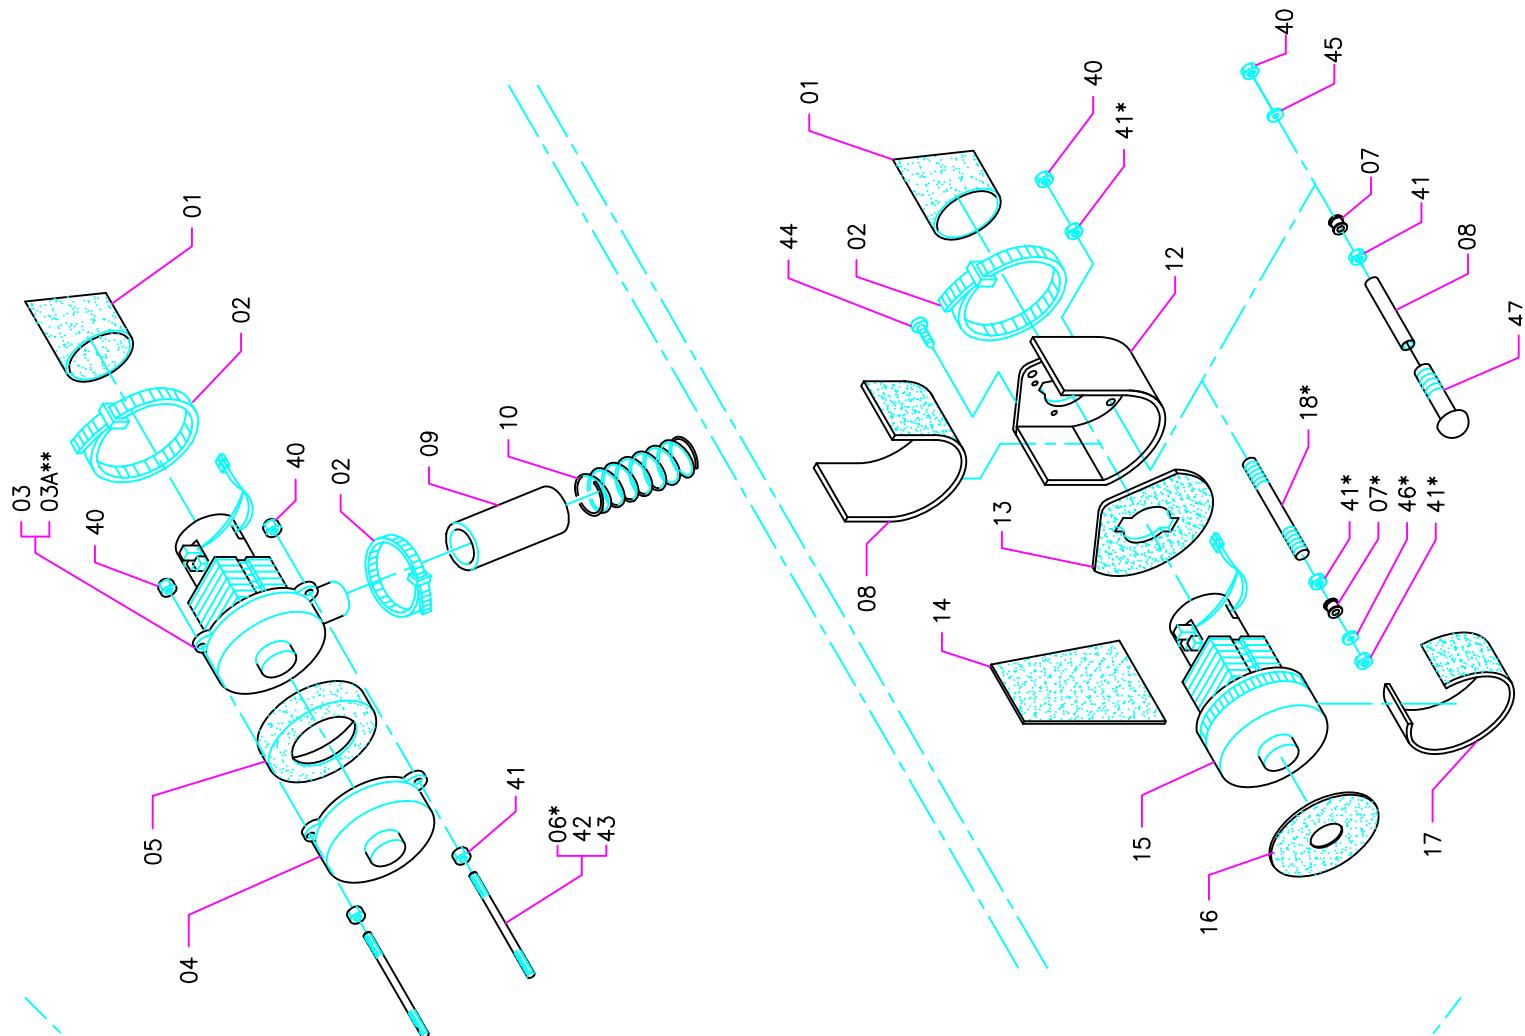

GRUPPO MOTORE ASPIRAZIONE B-BT / BS-BTS  
 SUCTION MOTOR ASSEMBLY B-BT / BS-BTS  
 GROUPE DE MOTEUR D'ASPIRATION B-BT / BS-BTS  
 SAUGMOTORGRUPPE B-BT / BS-BTS  
 GRUPO DE MOTOR DE ASPIRACION B-BT / BS-BTS

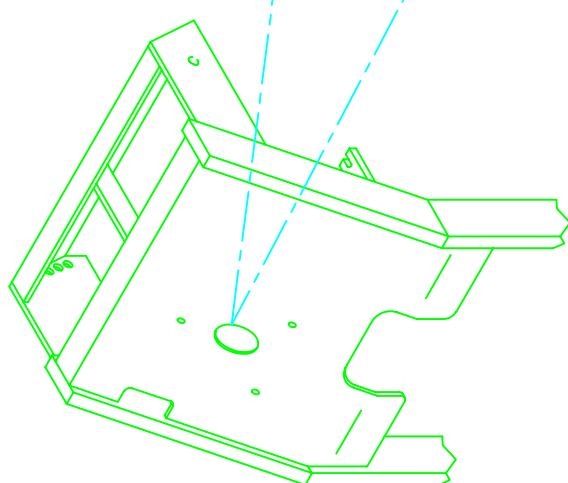

*	→	10/2002
**	→	06/2003




**TAV.14 rev.02 GRUPPO MOTORE ASPIRAZIONE B-BT / BS-BTS**

Pos.	Mod.	Codice	Q.tà	Denominazione	Denomination	Description	Benennung	Descripcion
1	◆○	202243	1	TUBO FONOASSORBENTE	DEADENING HOSE	TUYAU ISOLANT PHONIQUE	SCHALLSCHLUCKER	TUBO FONOASSORBENTE
2		410276	1	FASSETTA PLASTICA	CLAMP	COLLIER	BRIDE	ABRAZADERA
3		203214	1	MOTORE ASP. 24V H=1200 PREMON.	SUCTION MOTOR	MOTEUR D'ASPIRATION	SAUGMOTOR	MOTOR SUCCION
3A	♣♦	203217	1	MOTORE ASP. 36V 3 STADI	SUCTION MOTOR	MOTEUR D'ASPIRATION	SAUGMOTOR	MOTOR SUCCION
4		414960	1	SUPPORTO	SUPPORT	SUPPORT	HALTERUNG	SOPORTE
5		405936	1	CUFFIA MOTORE ASPIRAZIONE	GASKET	JOINT	LAGERRING	ANILLO
6		415134	3	COLONNETTA	STUD BOLT	TIGE	GEWINDEBOLZEN	PRISIONERO
7	○	409810	3	PASSACAVO PER FORO	FAIRLEAD	PASSE-CABLE	KABELMUFFE	GUIACABLE
8	○	414686	3	DISTANZIALE	SPACER	ENTRETOISE	DISTANZHÜLSE	DISTANCIADOR
9		202241	1	TUBO FONOASSORBENTE	DEADENING HOSE	TUYAU ISOLANT PHONIQUE	SCHALLSCHLUCKER	TUBO FONOASSORBENTE
10		202485	1	MOLLA TRAZIONE PER TUBO	DEADENING HOSE	TUYAU ISOLANT PHONIQUE	SCHALLSCHLUCKER	TUBO FONOASSORBENTE
11	○	414350	1	FONOAS. CARTER ASP.	DEADENING HOSE	TUYAU ISOLANT PHONIQUE	SCHALLSCHLUCKER	TUBO FONOASSORBENTE
12	○	203523	1	CARTER ASPIRATORE	COVER	CARTER	ABDECKUNG	TAPA
13	○	414352	1	FONOAS. LATO MOTORE ASP.	DEADENING HOSE	TUYAU ISOLANT PHONIQUE	SCHALLSCHLUCKER	TUBO FONOASSORBENTE
14	○	414351	1	TUBO FONOASSORBENTE	DEADENING HOSE	TUYAU ISOLANT PHONIQUE	SCHALLSCHLUCKER	TUBO FONOASSORBENTE
15	○	407503	1	MOTORE ASP. 36V 1600H 550W	SUCTION MOTOR	MOTEUR D'ASPIRATION	SAUGMOTOR	MOTOR SUCCION
16	○	405832	1	FONOAS. FONDO MOTORE ASP.	DEADENING HOSE	TUYAU ISOLANT PHONIQUE	SCHALLSCHLUCKER	TUBO FONOASSORBENTE
17	○	405833	1	FONOAS. LAT.MOTORE ASP.	DEADENING HOSE	TUYAU ISOLANT PHONIQUE	SCHALLSCHLUCKER	TUBO FONOASSORBENTE
18	○	206225	3	COLONNETTA	STUD BOLT	TIGE	GEWINDEBOLZEN	PRISIONERO
40	-	-	-	DADO M6 AUTOBL. UNI 7474	LOCK NUT	ECROU AUTOBLOQUANT	STOPMUTTER	TUERCA AUTOBLOANTE
41	-	-	-	DADO M6 UNI 5588	NUT	ECROU	MUTTER	TUERCA
42	◆	-	-	VITE M6X80 UNI 5732 TTQST	SCREW	VIS	SCHRAUBE	TORNILLO
43	♦	-	-	VITE M6X120 UNI 5732 TTQST	SCREW	VIS	SCHRAUBE	TORNILLO
44		-	-	VITE Ø 4,8X13 AUTOFIL. UNI 6954	SCREW	VIS	SCHRAUBE	TORNILLO
45		-	-	ROSETTA M6 D.18 UNI 6593	WASHER	RONDELLE	SCHEIBE	ARANDELA
46		-	-	ROSETTA M6 UNI 6592	WASHER	RONDELLE	SCHEIBE	ARANDELA
47	○	-	-	VITE M6x90 UNI 5732 TTQST	SCREW	VIS	SCHRAUBE	TORNILLO

◆ = INDY – BASIC LINE

♦ = PROFY LINE

○ = KLINIK LINE

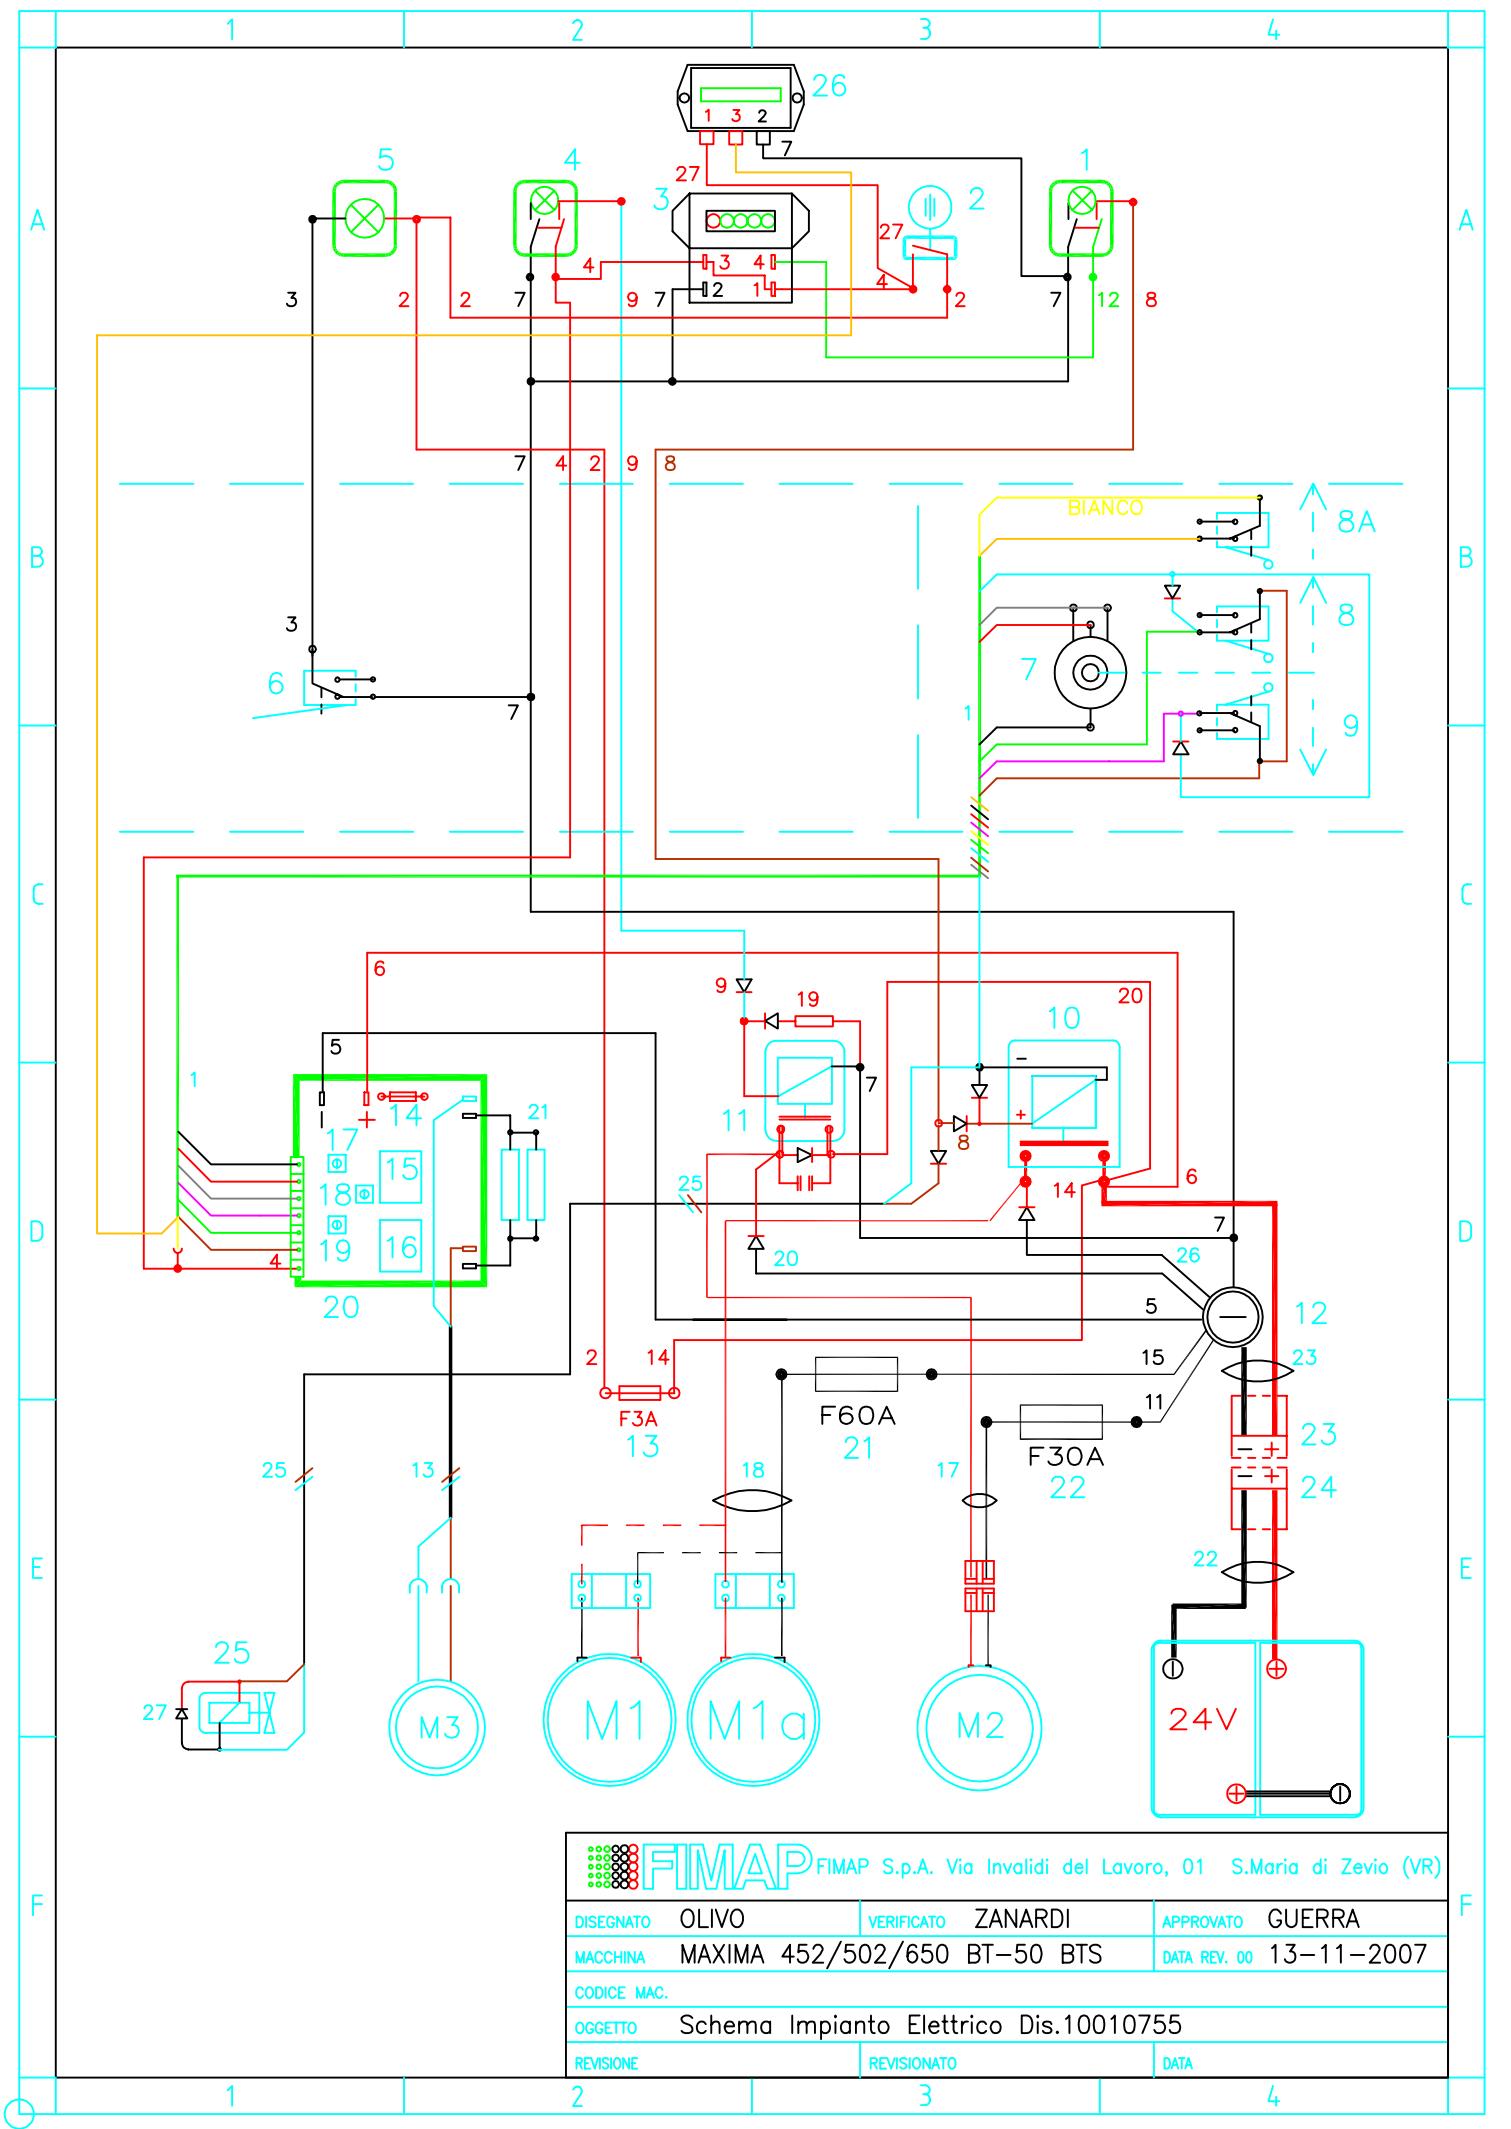



## IMPIANTO ELETTRICO MAXIMA 452/502-650 BT-50BTS -DIS.10010755-

13/11/07

Pos.	Codice	Denominazione	Description	Denomination	Benennung	Descripcin
1	409483	INTERRUTTORE LUM. VERDE 24V - MOTORE SPAZZOLE	GREEN LIGHT SWITCH 24V - BRUSHES MOTOR	INTERRUPTEUR LUMINEUX VERT 24V - MOTEUR DE BROSSES	GRÜNLEUCHTSCHALTER 24V - BÜRSTENMOTOR	INTERRUPTOR MIT TESTIGO VERDE 24V - MOTOR DE CEPILLOS
2	409261 409262 409246	INTERRUTTORE A CHIAVE	CONTACT KEY	CONTACT AVEC CLEF	SCHLÜSSELKONTAKT	CONTACTO LLAVE
3	411729	SCHEDA CONTROLLO BATTERIE	BATTERY CHECK CARD	PLAQUE CONTROLE DE BATTERIES	KONTROLLEMENT	FICHA CONTROL BATERIAS
4	409483	INTERRUTTORE LUM. VERDE 24V - MOTORE ASPIRAZIONE	GREEN LIGHT SWITCH 24V - SUCTION MOTOR	INTERRUPTEUR LUMINEUX VERT 24V - MOTEUR D'ASPIRATION	GRÜNLEUCHTSCHALTER 24V - SAUGMOTOR	INTERRUPTOR MIT TESTIGO VERDE 24V - MOTOR DE ASPIRACION
5	409539	SEGNALE LUMINOSO VERDE 24V - RUBINETTO	GREEN LIGHT SIGNAL 24V - COCK	INDICATEUR LUMINEUX VERT 24V - ROBINET	LAMPE GRÜN GESCHÜTZT 24V - WASSERHAHN	SEGNAI VERDE 24V - GRIFO
6	409498	MICROINTERRUTTORE 16A - RUBINETTO	MICROSWITCH 16A - COCK	MICRO INTERRUPTEUR 16A - ROBINET	MIKROSCHALTER 16A - WASSERHAHN	MICRONTERRUPTOR 16A - GRIFO
7	409448	POTENZIOMETRO 2kΩ	POTENTIOMETER 2kΩ	POTENTIOMETRE 2kΩ	POTENTIOMETER 2kΩ	POTENCIOMETRO 2kΩ
8	409491	MICROINTERRUTTORE 10A - MARCIA AVANTI	MICROSWITCH - FORWARDS	MICRO INTERRUPTEUR - MARCHE AVANT	MIKROSCHALTER - VORWÄRTS	MICRONTERRUPTOR - MARCHA ADELANTE
9	409491	MICROINTERRUTTORE 10A - RETROMARCA	MICROSWITCH - BACKWARDS	MICRO INTERRUPTEUR - MARCHE ARRIERE	MIKROSCHALTER - RÜCKWÄRTS	MICRONTERRUPTOR - MARCHA ATRAS
10	407576	TELERUTTORE 24V - SPAZZOLE	REMOTE CONTROL SWITCH 24V - BRUSHES	TELERUPTEUR 24V - BROSSES	SCHÜTZ 24V - BÜRSTENMOTOR	TELEINTERRUPTOR 24V - CEPILLOS
11	407580	RELE' 30A - MOTORE ASPIRAZIONE	RELAY 30A - SUCTION MOTOR	RELAI 30A - MOTEUR D'ASPIRATION	RELAIS 30A - SAUGMOTOR	RELE 30A - MOTOR DE ASPIRACION
12	409767	ISOLATORE	INSULATOR	ISOLATEUR	ISOLATOR	AISLADOR
13	409592	FUSIBILE 3A - SPIE E BOBINE	FUSE 3A - LAMPS AND BOBINES	FUSIBLE 3A - LAMPEN UND SPULEN	SICHERUNG 3A - LAMPEN UND SPULEN	FUSIBLE 3A - LAMPARAS TESTIGO Y BOBINAS
14	409605	FUSIBILE 30A - MOTORE TRAZIONE	FUSE 30A - TRACTION MOTOR	FUSIBLE 30A - MOTEUR DE TRACTION	SICHERUNG 30A - ANTRIEBSMOTOR	FUSIBLE 30A - MOTOR TRACCION



## IMPIANTO ELETTRICO MAXIMA 452/502-650 BT-50BTS -DIS.10010755-

13/11/07

15	407581	RELE' 20A - MARCIA AVANT	RELAY 20A - FORWARDS	RELAIS 20A - MARCHE AVANT	RELAIS 20A - VORWARTS	RELE 20A - MARCHA ADELANTE
16	407581	RELE' 20A - RETROMARCIA	RELAY 20A - BACKWARDS	RELAIS 20A - MARCHE ARRIERE	RELAIS 20A - RUCKWARTS	RELE 20A - MARCHA ATRAS
17	-	TRIMMER REGOLAZIONE MINIMA VELOCITA'	TRIMMER REGULATION MIN. SPEED	TRIMMER REGGLAGE MIN. VITESSE	TRIMMER REGULIERUNG MIN. GE SCHWINDIGKEIT	TRIMMER REGULADOR MIN. VELOCIDAD
18	-	TRIMMER REGOLAZIONE ACCELERAZIONE	TRIMMER REGULATION ACCELERATION	TRIMMER REGGLAGE ACCELERATION	TRIMMER REGULIERUNG BESCHLEUNIGUNG	TRIMMER REGULADOR ACCELERACION
19	-	TRIMMER REGOLAZIONE MASSIMA VELOCITA'	TRIMMER REGULATION MAX. SPEED	TRIMMER REGGLAGE MAX. VITESSE	TRIMMER REGULIERUNG MAX. GE SCHWINDIGKEIT	TRIMMER REGULADOR MAX. VELOCIDAD
20	414527	SCHEDA CHOPPER 24V	CHOPPER CARD 24V	VARIATEUR ELECTRONIQUE 24V	ELEKTRONIKKARTE 24V	FICHA-CHOPPER 24V
21	409614	MAXIFUSIBILE 60A - MOTORE SPAZZOLE	MAXIFUSE 50A - BRUSHES MOTOR	MAXIFUSIBLE 50A - MOTEUR DE BROSSES	MAXISICHERUNG 50A - BÜRSTENMOTOR	MAXIFUSIBLE 50A - MOTOR DE CEPILLOS
22	409607	MAXIFUSIBILE 30A - MOTORE ASPIRAZIONE	MAXIFUSE 30A - SUCTION MOTOR	MAXIFUSIBLE 30A - MOTEUR D'ASPIRATION	MAXISICHERUNG 30A - SAUGMOTOR	MAXIFUSIBLE 30A - MOTOR DE ASPIRACION
23	204354	CONNETTORE 50A M. - BATTERIE	MALE CONNECTOR	CONNECTEUR MALE	VERBINDER MIT ZAPFEN	CONECTADOR MACHO
24	204355	CONNETTORE 50A F. - IMPIANTO ELETROVALVOLA (OPZIONALE)	FEMALE CONNECTOR	CONNECTEUR FEMELLE	VERBINDER OHNE ZAPFEN	CONECTADOR HEMBRA
25	407885	CONTATORE DIGITALE	SOLENOID VALVE (OPT.)	ELECTROVALVE (OPT.)	MAGNETVENTIL (OPT.)	VALVULA SOLENOIDE
26	409772	MOTORE SPAZZOLE 24V	DIGITAL HOURMETTER	COMPTEUR HORAIRE DIGITAL	BETRIEBSSTUNDENZÄHLE R DIGITAL	CUENTAHORAS DIGITAL
M1	411738 452-502	MOTORE SPAZZOLE 24V	BRUSHES MOTOR 24V	MOTEUR DE BROSSES 24V	BÜRSTENMOTOR 24V	MOTOR DE CEPILLOS 24V
M1a	407717 50BTS	MOTORE SPAZZOLE 24V	BRUSHES MOTOR 24V	MOTEUR DE BROSSES 24V	BÜRSTENMOTOR 24V	MOTOR DE CEPILLOS 24V
M2	203214 BASIC-INDY	MOTORE ASPIRAZIONE 24V	SUCTION MOTOR 24V	MOTEUR D'ASPIRATION 24V	SAUGMOTOR 24V	MOTOR DE ASPIRACION 24V
M2	203217 PROFY	MOTORE ASPIRAZIONE 36V	SUCTION MOTOR 36V	MOTEUR D'ASPIRATION 36V	SAUGMOTOR 36V	MOTOR DE ASPIRACION 36V
M2	203223 KLINIK	MOTORE ASPIRAZIONE 24V	SUCTION MOTOR 24V	MOTEUR D'ASPIRATION 24V	SAUGMOTOR	MOTOR DE ASPIRACION



## IMPIANTO ELETTRICO MAXIMA 452/502-650 BT-50BTS -DIS.10010755-

13/11/07

M3 414603 MOTORE TRAZIONE 24V


TRACTION MOTOR 24V  
24V

ANTRIEBSMOTOR 24V

MOTEUR DE TRACTION

24V

MOTOR TRACCION 24V

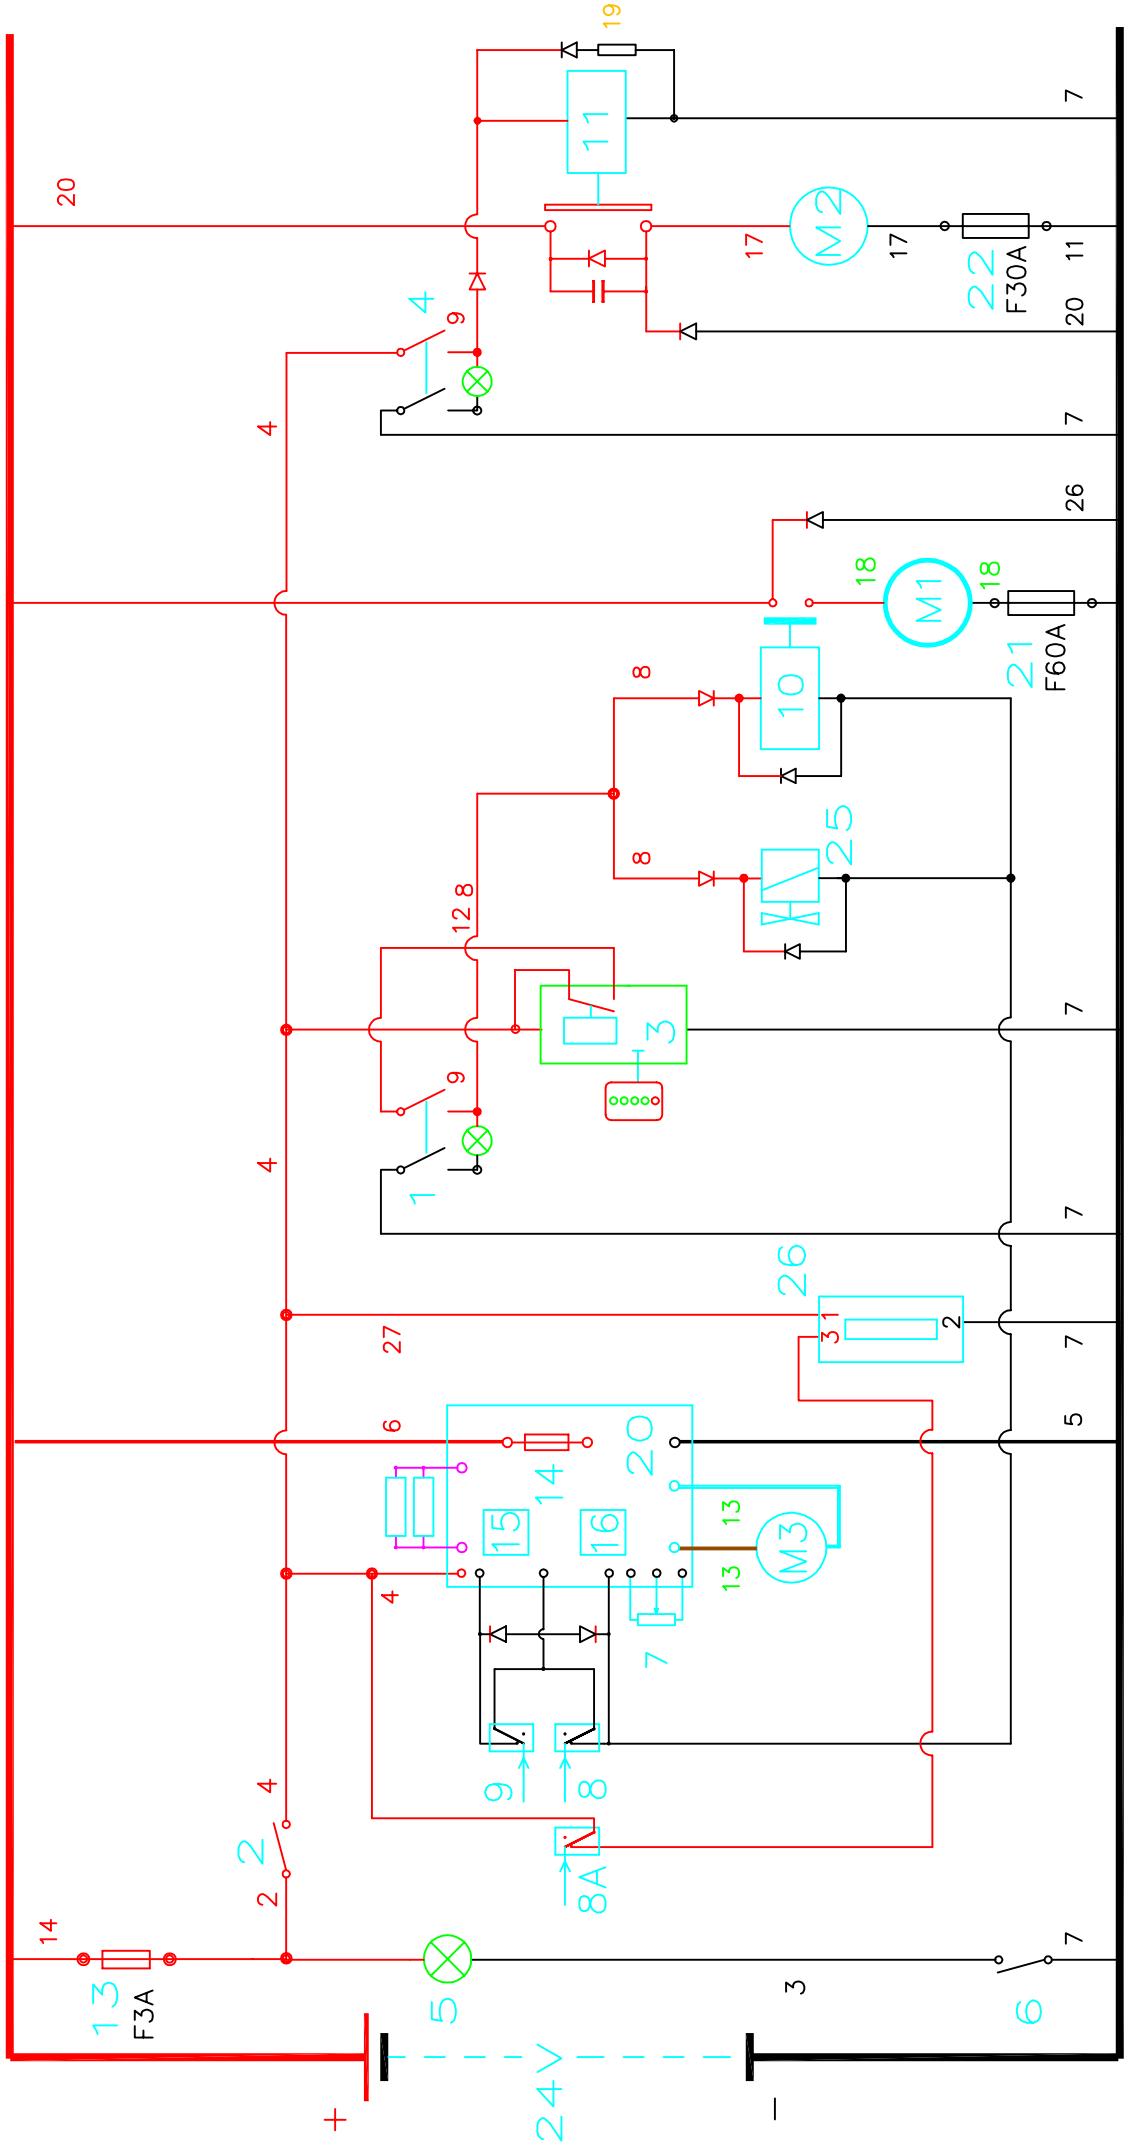

FIMAP FIMAP SpA, Via Invalidi del Lavoro, 01 S. Maria di Zevio (VR)		
DISEGNATO	OLIVO	VERIFICATO
MACCHINA	MAXIMA 452/502/650 BT-50 BTS	ZANARDI
CODICE MAC.		APPROVATO GUERRA
OGGETTO	Schemi Impianto Elettrico Dis. 10010755	DATA REV. 00 13-11-2007
REVISIONE		DATA