

\* Refers to pump oil

\*\* Refers to blower oil

\*\*\* Check blower, drive shaft, front end fasteners

Adjust	A
Check	CH
Clean and Inspect	C/I
Clean and Lubricate	C/L
Flush	F
Lubricate	L
Replace	R