

FS28

ORDER #86011

**Betco Foreman™ 28
Automatic Scrubber**

FEATURES

- Simple design for easy operation
- Large tank capacities increases productivity
- Easy access parts design
- Heavy duty quick-change squeegee assembly
- Built durable for maximum performance
- Self propelled forward and reverse, variable speed
- Hands free pad driver on/off

The Betco Foreman series of automatic scrubbers bring a new dimension to cleaning maintenance. A simple design makes the FS28 easy to operate reducing operator training. The 28" cleaning path along with 24 gallon solution and 26 gallon recovery tanks increase productivity. A heavy-duty quick-change squeegee assembly and adjustable brush pressure provide maximum cleaning performance. Easy access to all areas of the machine reduces service down time. Betco's Foreman Automatic Scrubbers are built durable to last and will help make your cleaning maintenance jobs easier!

WARRANTY

Tank: 10 Year
Other components: 3 Year*

*Please refer to Betco Equipment Price/Product Guide for complete equipment warranty information.



SPECIFICATIONS

- Cleaning path: 28"
- Pad Drivers: (2) 14"
- Drive system: Transaxle, .4 hp
- Brush motors: (2) 1.25 hp
- Brush pressure: 0 - 200 adjustable
- Vacuum motor: 3-stage, .75 hp
- Solution control: gravity feed - adjustable
- Solution tank: 24 gallon
- Recovery tank: 26 gallon
- Volts: 24 volt system (4 - 6 volt batteries)
- Run time: 3 - 5 hours
- Productivity: up to 32,000 sq. ft./hr.
- Weight: 308 lbs. w/o batteries
619 lbs. w/batteries
- Tires: (2) heavy-duty non marking
- Dimensions: Length 61"
Width 28"
Height 41.5"

APPLICATIONS

- General Cleaning
- Heavy Duty Scrubbing
- Stripping

Authorized Betco Distributor:

Better Resources. Better Results.
BETCO®

1001 Brown Avenue • P.O. Box 3127 • Toledo, Ohio 43607-0127
©All Rights Reserved 7/01 • Reorder #86011 • email@betco.com • www.betco.com

BETCO BETTER SOLUTIONS

OFFERING THE TOTAL SOLUTION.

Betco is now the only manufacturer with a complete line of products for the cleaning professional.



Complete Floor Machine, Vacuum and Scrubber Line.



Complete Carpet Care Program.



Complete Training Programs.



Complete Chemical Programs, Cleaners, Floor Care and specialties.



Complete Hand Cleaner Line.



Nationwide Support.

Let Betco be your single source manufacturer.

Better Resources. Better Results.
BETCO®

Foreman™ 32 Operator's Manual

Operator's Manual

Item #86013



1. TABLE OF CONTENTS

1. TABLE OF CONTENTS	2
2. GENERAL INFORMATION.....	4
2.1. SCOPE OF THE MANUAL	4
2.2. IDENTIFICATION OF THE MACHINE.....	5
2.3. DOCUMENTATION ANNEXED TO THE MACHINE	5
3. TECHNICAL INFORMATION.....	6
3.1. GENERAL DESCRIPTION.....	6
3.2. LEGEND.....	6
3.3. OVERALL DIMENSIONS.....	7
3.4. TECHNICAL SPECIFICATIONS	8
3.5. DANGER AREAS	8
3.6. SAFETY DEVICES	9
3.7. OPTIONAL UNITS	9
3.8. ACCESSORIES	9
4. INFORMATION ON SAFETY.....	10
4.1. SAFETY STANDARDS	10
5. HANDLING AND INSTALLATION.....	13
5.1. LIFTING AND CARRYING THE PACKED MACHINE.....	13
5.2. CHECKING THE MACHINE ON DELIVERY	13
5.3. UNPACKING	13
5.4. FEEDING BATTERIES	14
5.4.1. <i>Batteries: preparation</i>	15
5.4.2. <i>Batteries: installation and connection</i>	15
5.5. THE BATTERY-CHARGER	16
5.5.1. <i>Choosing the battery-charger</i>	16
5.5.2. <i>Preparing the battery-charger</i>	17
5.6. LIFTING AND HANDLING THE MACHINE.....	17
6. PRACTICAL GUIDE FOR THE USER.....	18
6.1. CONTROL DEVICES - DESCRIPTION	18
6.2. INSTALLING AND ADJUSTING THE SQUEEGEE.....	19
6.3. MOVING THE MACHINE.....	21
6.4. INSTALLING AND REPLACING THE BRUSHES / DRIVE DISCS	21
6.5. DETERGENTS - Use	22
6.6. SETTING UP THE MACHINE	22
6.7. WORK	23
6.7.1. <i>Additional functions</i>	23
6.8. SOME USEFUL SUGGESTIONS FOR THE OPTIMAL USE OF THE MACHINE.....	25
6.8.1. <i>Pre-washing</i>	25
6.8.2. <i>Drying</i>	25
6.9. DRAINING OFF DIRTY WATER.....	26
6.10. DRAINING OFF CLEAN WATER.....	27
7. PERIODS OF INACTIVITY.....	28
8. MAINTENANCE AND BATTERY RECHARGING.....	28
8.1. RECHARGING PROCEDURES	27

9. INSTRUCTIONS FOR MAINTENANCE	29
9.1. MAINTENANCE – GENERAL RULES	28
9.2. ROUTINE MAINTENANCE	29
9.2.1. <i>Daily cleaning</i>	29
9.2.2. <i>Suction air filter and floating rod: cleaning</i>	30
9.2.3. <i>Squeegee blades: replacement</i>	30
9.2.4. <i>Fuses: replacement</i>	31
9.3. PERIODIC MAINTENANCE	32
9.3.1. <i>Daily maintenance</i>	32
9.3.2. <i>Weekly maintenance</i>	33
9.3.3. <i>Six-monthly maintenance</i>	33
10. HOW TO ORDER SPARE PARTS	33
11. TROUBLESHOOTING	34
11.1. HOW TO OVERCOME POSSIBLE FAILURES	34

2. GENERAL INFORMATION



Read this manual carefully before starting any operations on this machine¹.

2.1. Scope of the manual

This manual has been drawn up by the Manufacturer and is considered as an integral part of the machine.

It defines the purpose for which the machine has been manufactured and contains all information the operators² require.

Besides this manual, which contains the necessary information for the users, other publications have been issued, which contain the specific information for the technicians in charge of maintenance³.

The constant observance of the instructions guarantee the safety of man and machine, low running costs, quality results and a longer work life of the machine itself. The non-observance of the prescribed rules could injure men, damage the machine, spoil the washed floor and even the environment.

To find the single topics in a fast way, see the descriptive table of contents at the beginning of this manual.

The paragraphs that are not to be neglected are printed in bold letters and preceded by symbols illustrated and defined below.

! DANGER

Indicates that attention must be paid to avoid serious consequences that could cause the death of the personnel or possible damages to health.

⚠ WARNING

Indicates that attention must be paid to avoid serious consequences that could damage the machine, spoil the environment where the machine is used or cause economic losses.

i INFORMATION

Particularly important instructions.

In following a policy of constant development and update of the product, the Manufacturer could implement modifications without any previous notice.

Even though the machine you own is greatly different from the one(s) illustrated in this manual, safety and information thereof are guaranteed anyway.

¹ The definition "machine" substitutes the commercial name to which this manual refers.

² People authorised to use the machine without carrying out maintenance operations that require precise technical knowledge.

³ People having the experience, technical preparation and knowledge of the regulations and laws necessary to carry out the activity and capable to recognize and avoid possible dangers when handling, installing, using the machine and carrying out maintenance operations.

2.2. Identification of the machine

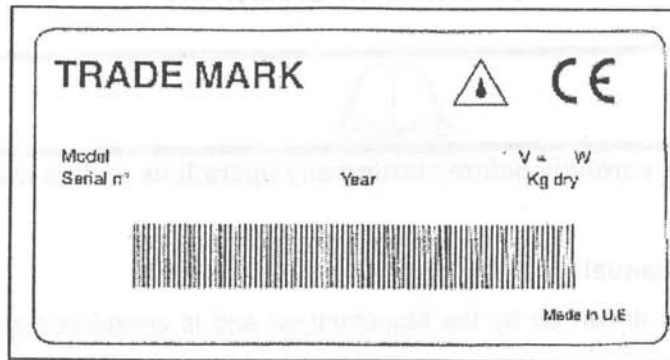


Fig. 1

The number plate (fig. 1), which is attached at the rear of the machine, shows the following information:

- model code;
- machine model;
- power supply voltage;
- total rated power;
- serial number (registration number);
- year of manufacture;
- dry weight;
- maximum full load weight;
- steepest slope that can be overcome;
- bar code with serial number;
- Manufacturer's identification.

2.3. Documentation annexed to the machine

- User's Manual;
- warranty certificate;
- adhesive slips for spare part orders;
- test sheet;
- CE Certificate of conformity.

3. TECHNICAL INFORMATION

3.1 General description

The machine is a sweeping scrubber, which can be used in civil and industrial environments for sweeping, washing and drying flat, horizontal, smooth or moderately rough floors, with even surfaces and free from obstacles.

The scrubber distributes on the floor an adequately dosed solution of water and detergent, and brushes it to remove dirt. Choosing with care the right cleaning detergent and brushes (or abrasive discs) in the wide range of accessories available, the machine can adapt itself to all kinds of combinations of floors and dirt.

A liquid suction system, which is embedded in the machine, allows a perfect drying of the just-washed floor: actually thanks to a suction unit which sucks up the air from the recovery tank thus creating a vacuum, the squeegee scrapes the dirty water from the floor, collects it and sends it to the recovery tank.

The storage battery feeding and the high capacity of usable batteries allow the **maximum freedom of movement** and endurance at **any work conditions**.

In addition, thanks to the electronic control drive motor provided with forward and reverse gear, the floor can easily be cleaned in any direction.

3.2. Legend

The main components of the machine are the following (fig. 2):

- the detergent solution tank (fig. 2, ref. 3): used to contain and carry the mixture of clean water and detergent;
- the recovery tank (fig. 2, ref. 2): used to collect dirty water sucked up from the floor during washing;
- control panel (fig. 2, ref. 1);
- head unit (fig. 2, ref. 5): the main element is represented by the brushes, which distribute the detergent solution on the floor, removing dirt;
- drive unit (fig. 2, ref. 7): the main element consists of the electronically controlled gearmotor which is operated via a lever below the machine handgrip and enables the machine to move forward and back;
- squeegee unit (or floor wiper, fig. 2, ref. 8): used to wipe and dry the floor, sucking up the water spread on the floor;
- battery unit (fig. 2, ref. 6): supplies energy for the machine feeding;
- bonnet (fig. 2, ref. 4).


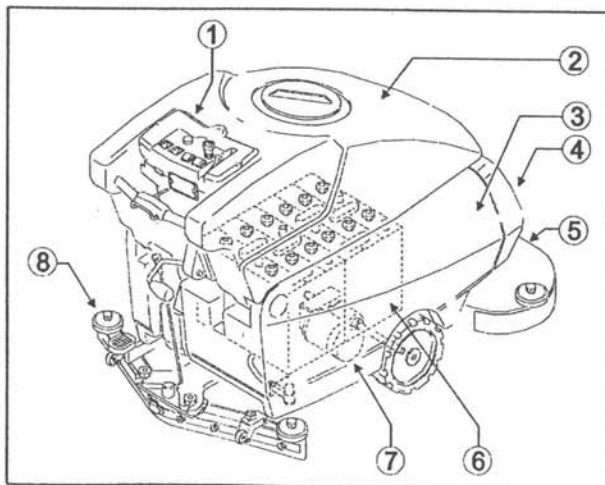


Fig. 2

3.3 Overall dimensions

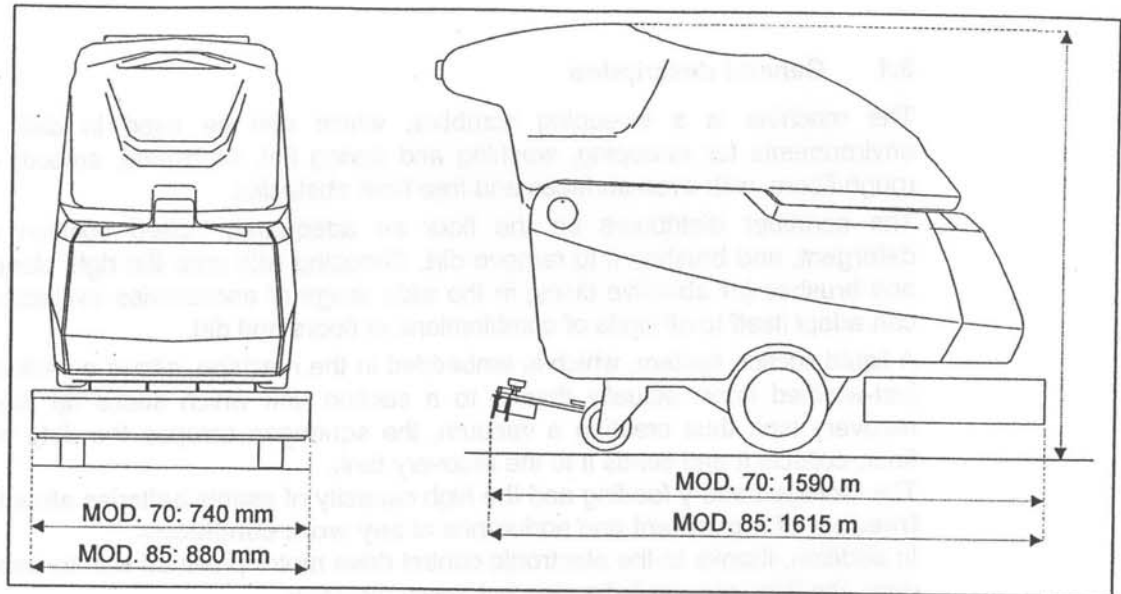

3.4. Technical specifications

		70	85
Cleaned track width	mm	680	810
Squeegee width	mm	880	940
Hourly performance	m ² /h	2600	3100
Number of brushes	n°	2	2
Brush diameter	mm	345	410
Max brush pressure	daN	75	80
Brush rotation speed	g/1°	200	200
Brush motor power	W	1000	1000
Drive control	/	Elettrica	Elettrica
Drive motor rated power	W	300	300
Maximum speed	Km/h	4	4
Three-stage suction motor power	W	550	550
Suction motor vacuum	Pa	17000	17000
Noise level	dB(a)	70	70
Solution tank capacity	L	90	90
Recovery tank capacity	L	100	100
Wheel diameter	mm	250	250
Net weight without batteries	Kg	170	175
Number of batteries	n°	4	4
Series battery voltage	V	24	24
Single battery capacity	Ah (5h)	220	220
	Ah (20h)	320	320
Single battery weight	Kg	46	46
Battery compartment size (length, width, height)	mm	630x	630x
		410x	410x
		380	380
Machine size (length, width, height)	mm	1590x	1615x
		740x	880x
		1075	1075
Dimensions of packing (length, width, height)	mm	1780x	1780x
		930x	930x
		1290	1290

Table A Data can be changed without notice.

3.5. Danger areas

A -Tank unit: in presence of certain detergents, danger of irritation for the eyes, skin, mucous diaphragms, respiratory apparatus and asphyxia. Danger caused by dirt recovered from the environment (germs and chemical substances). Danger of crushing between the recovery tank and solution tank, when the recovery tank is replaced on the solution tank.

B -Control panel: danger of shortcircuits.

C -Lower part of washing head: danger due to lowering of head and rotation of brushes.

D -Top of washing head: danger of crushing between the top of the brush head and the chassis.

E -Rear wheels: danger of crushing between wheel, chassis and tank.

F -Electrical components box: danger of short circuits.

G -Battery compartment (located within the solution tank): danger of short circuits between the battery poles and presence of hydrogen during battery charging.

3.6. Safety devices

	DEVICE (fig. 3)	ACTIVATION	FUNCTION
A	Emergency button	Made active when pressed.	Interrupts the power supply.
B	Safety in reverse	Safety device to prevent crushing in reverse. Cuts in when pressed.	Interrupts reverse movement of machine.
-	Service brake	Comes on automatically when the drive lever is released.	The machine gradually decelerates.
C	Parking and emergency brake	Press pedal C to engage. Must be operated only with the machine at a standstill or in case of emergency; if operated with the machine moving, it can cause damage.	Prevents the machine moving.

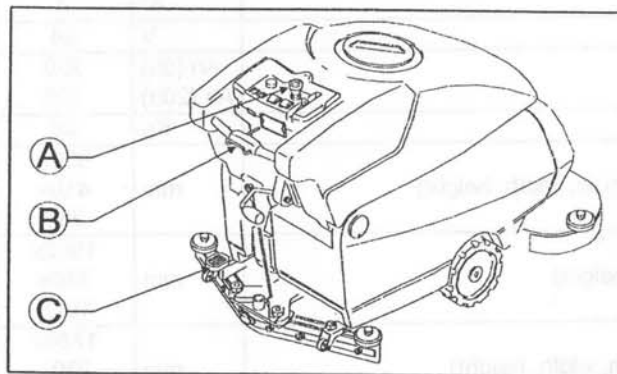


Fig. 3

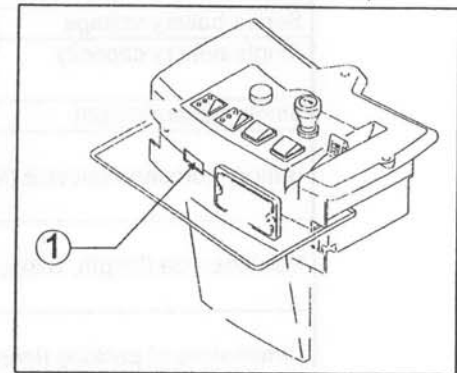


Fig. 4

3.7. Optional units

Hour counter: the hour counter accessory is fixed to the control panel (fig. 4, ref. 1). It displays the number of brush operating hours.

3.8. Accessories

- **Bristle brushes:** used for washing delicate floors and for polishing;
- **Polipropilene brushes:** used for normal floor washing;
- **Tynex brushes:** used to remove accumulated stubborn dirt on resistant floors;
- **Drive discs:** allow the use of the following discs:
 - * yellow discs: used for washing and polishing marble and similar surfaces;
 - * green discs: used for washing of resistant floors;
 - * black discs: used for thorough washing of resistant floors with stubborn dirt.

4. INFORMATION ON SAFETY

4.1. Safety standards



Read the User's manual carefully before proceeding with start-up, use, maintenance, routine maintenance or any other operations on the machine.

WARNING

Stick to all the instructions contained in this Manual (especially those regarding danger and warning) and observe the safety plates attached on the machine.

The Manufacturer declines all responsibility for injuries to persons or damage to things deriving from the non-observance of these instructions.

The machine must be used by trained personnel only, who have shown their skill and have been expressly authorized to use it.

Persons under eighteen cannot use the machine.

This machine must not be used for any other purpose than that for which it has been expressly manufactured. Assess the type of building in which it will be used (e.g. pharmaceutical and chemical companies, hospitals, etc.) and scrupulously respect the regulations and conditions in force.

Do not use the machine in places that are not adequately lighted, in environments with danger of explosions, on public roads, in the presence of dirt harmful to health or improper environments.

The suitable temperature for the use of the machine ranges between +4°C and +35°C; when the machine is not used, the temperature range is between +0°C e +50°C.

The humidity range for the machine under any conditions varies between 30% and 95%.

Never use or suck up inflammable or explosive liquids (e.g. petrol, fuel oil, etc.), inflammable gases, dry dust, acids and solvents (e.g. solvents for paints, acetone, etc.) even if diluted. Never suck up any burning or white-hot objects.

Do not use the machine on slopes or ramps higher than 2%; in the event of light slopes do not use it transversally, handle it with extreme care and do not reverse. When driving along ramps or heavier slopes take great care to avoid overturning or uncontrolled acceleration. Overcome ramps and/or steps exclusively with the brush head and squeegee lifted.

Never park the machine on slopes.

The machine must never be left unmanned with the motors running; before abandoning the machine, switch the motors off, ensure that it cannot move accidentally, engage the parking brake and remove the key from the ignition.

When using the machine mind the presence of people particularly children in the environment where you are working.

Do not use the machine to carry persons/things or to tow things. Do not drag the machine.

Never lay things on the machine for any reason.

Do not obstruct the air vents and heat dispersion openings.

Do not remove, modify or elude the safety devices.

Various and unpleasant experiences have shown that people wear or carry various objects capable of causing serious accidents: before starting to work, remove trinkets, watches, neckties or other such things.

Always use individual safety protections: apron or protective suit/overalls, non-slip waterproof shoes, rubber gloves, protective goggles and caps, face mask to protect the respiratory system.

Do not put the hands in between moving organs.

Do not use detergents different from those provided for, and stick to the instructions indicated on the respective safety sheets. Keep detergents in a safe place, inaccessible to children, and in case they come in contact with the eyes, wash them immediately with plenty of water or, if swallowed, call for a doctor immediately.

Make sure that the plugs for the power supply of the models with cable or of the battery-chargers are properly grounded and protected by magnetothermal switches and differentials.

Make sure that the electric characteristics of the machine (voltage, frequency, absorbed power) indicated on the identification plate (fig. 1), are compliant with those of the power distribution plant. The machine with cable is equipped with three lead wires and a three-contact ground plug for the use of a proper grounding plug. The yellow and green wire of the cable is the earth wire: never connect this wire to other wires that are not the plug ground tap.

It is fundamental to observe the battery Manufacturer's instructions and stick to the Legislator's provisions. Keep batteries always dry and clean to avoid surface leakage currents. Keep batteries safe from impurities, for instance metal dust.

Do not lay tools on batteries: danger of short circuits and explosions.

Mind the use of battery acid: stick to the relative safety instructions.

When using the machine model with cable mind that you do not crush or tear the power supply cable. Check this cable periodically to control if it is damaged; if this is so, the machine cannot be used.

In presence of particularly high magnetic fields assess the possible effects on the control electronics.

Never wash the machine with jets of water.

The recycled fluids contain detergents, disinfectants, water, organic and inorganic stuff recycled during the work stages: they must be disposed of in compliance with the laws in force.

In case of breakdown and/or bad operation of the machine, switch it off immediately (unplugging it from the mains) and do not tamper with it. Contact a technical assistance centre of the Manufacturer's.

All maintenance operations must be performed in adequately lighted environments and only after having disconnected the machine from the power supply (in models with cable by unplugging the machine from the socket, while in models with battery by detaching the battery connector).

Have any electrical work and all maintenance and repair operations (particularly those not explicitly described in this manual) carried out by a specialised and trained technical staff only.

In case of replacement of the power supply cable, plug or terminals, perform the repair by properly fixing the electric connections and the cable blocking strap that is located in the control panel, to guarantee the resistance of the cable. Then reassemble the panel with care to ensure the protection of the machine user.

Only the use of original accessories and spare parts supplied by the Manufacturer is permitted, as only these offer the certainty that the machine will operate safely and without any inconveniences. Do not use parts removed from other machines or other kits as spares.

This machine has been designed and manufactured for a service endurance of ten years starting from the date of manufacture, which can be seen on the identification plate (see

fig. 1). After this time, whether the machine has been used or not, disposal must be considered according to the laws in force in the place of use:

- the machine must be disconnected from the mains, emptied of all liquids and cleaned;
- then it must be dismantled in homogeneous groups of materials (plastics according to the indications of the recycling symbol, metals, rubber, wrapping and packing). In case there are parts composed of different materials, refer to the competent bodies;
- each homogeneous group must be disposed of according to the laws governing the recycling of materials.

Alternatively, the machine can be sent to the Manufacturer for a thorough overhaul.

If the machine is not used anymore, it is recommended that batteries are removed and deposited at an authorized collecting centre.

Moreover, it is recommended that you make harmless those parts of the machine that could be dangerous especially to children, who could use the machine for their games.

5. HANDLING AND INSTALLATION

5.1. Lifting and carrying the packed machine

WARNING

In all lifting operations make sure that the packed machine has been tightly anchored to the pallet, in order to avoid any overturning or accidental falls. Loading and/or unloading from the motor vehicles must be performed in an adequately lighted environment.

The machine, which is packed on a wooden pallet by the Manufacturer, must be loaded by means of proper handling machines (refer to the EEC provision 89/392/CEE and following amendments), onto the carrier and, once it has arrived at the appointed destination, unloaded by similar means.

The brushes and the squeegees are packed in cardboard boxes without pallet.

The packed machine body must be lifted only with a fork lift truck. Handle with care to avoid bumps or overturnings.

5.2. Checking the machine on delivery

On delivery check with attention that the package and the machine are not damaged. In the event that the machine has suffered any damages, report so to the carrier; before accepting the goods, reserve by written the right to present a claim for the refund of the damages.

5.3. Unpacking

WARNING

On unpacking the machine, the operator must be provided with the necessary accessories (e.g. gloves, protective goggles etc.) to limit possible hazards of accidents.

Unpack the machine in the following way:

- cut and remove the plastic straps with scissors or nippers;
- remove the cardbox;
- remove the envelopes inside the battery compartment (within the solution tank) and check its contents:
 - envelope 1: - test sheet;
 - warranty coupon;
 - user's and maintenance manual;
 - envelope 2: - 3 battery bridge with clips;
 - 1 pair of tweezers for fuses;
 - 1 connector for the battery-charger;
 - 2 switch keys;

i INFORMATION

Keep one of the 2 keys safe so that it can be located in case the other one is lost; the other key is to be inserted in the lock on the mushroom switch.

- depending on the model, remove the metal brackets or cut the plastic straps, which fix the machine chassis to the pallet;
- disengage the parking brake via the pedal ref. C fig. 3;

- let the machine slide down the pallet on an inclined plane, by pushing it into reverse;
- unwrap the brushes (fig. 5, ref. 1) and the squeegee (fig. 5, ref. 2) from their packing;
- clean the outside of the machine observing the safety rules;
- after unpacking the machine, you can install the batteries: see respective paragraphs.

If necessary, preserve the wrapping material as it could be used again to protect the machine in the event of a move or if the machine should be sent to a service centre for repair.

Otherwise, the material must be disposed of in compliance with the laws in force.

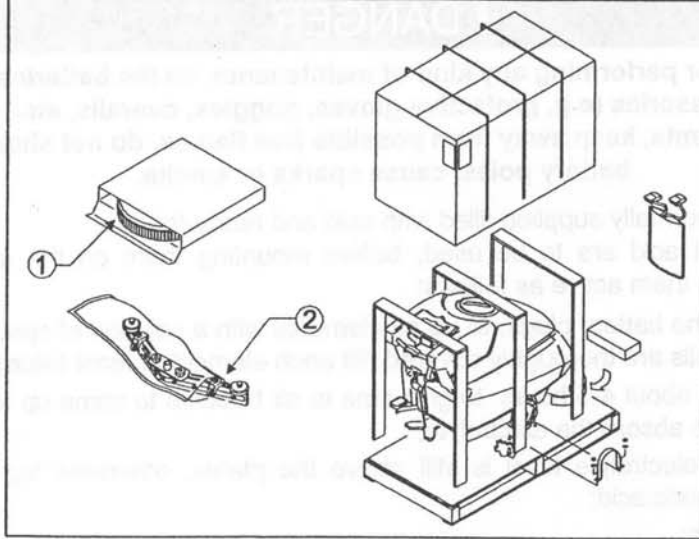


Fig. 5

5.4. Feeding batteries

Two different batteries can be fitted on this machine:

- **Tubular leak-proof batteries:** these batteries require the periodical check of the electrolyte level. When it is necessary, top up with distilled water alone until the plates are covered; do not overfill (max. 5 mm. above the plates).
- **Gel batteries:** this kind of batteries requires no maintenance.

When using this type of battery the fuse **FU7** (fig. 6, ref. 2) inside the machine control panel must be removed using the pliers. This operation serves to inform the electronic control of the type of battery used.

WARNING

Do not fit the fuse FU7 if using gel batteries.

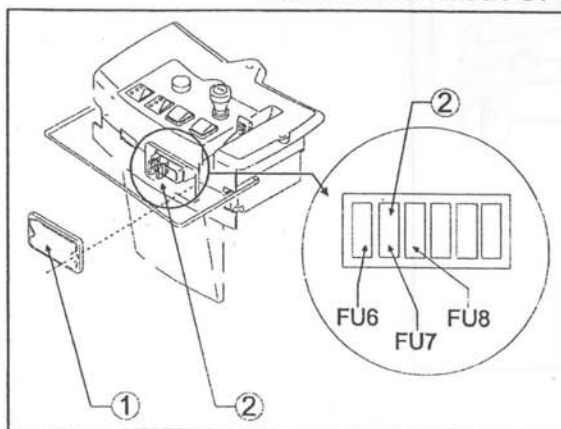


Fig. 6

The technical specifications must correspond to those indicated in the paragraph concerning the machine technical data: actually, the use of heavier storage batteries can cause serious problems to the machine controllability and overheat the drive motor, whereas storage batteries with a lower capacity require recharges more frequently. They must be kept charged, dry and clean, with their connections tight.

5.4.1. Batteries: preparation

! DANGER

On installing or performing any kind of maintenance on the batteries wear the necessary accessories (e.g. protective gloves, goggles, overalls, etc.) to limit the hazards of accidents, keep away from possible free flames, do not short-circuit the battery poles, cause sparks or smoke.

The batteries are normally supplied filled with acid and ready-for-use.

If batteries without acid are to be used, before mounting them on the machine, it is necessary to make them active as follows:

- after taking off the battery plugs, fill up all elements with a solution of specific sulphuric acid, until the cells are thoroughly covered (fill each element at least twice);
- let them rest for about 4-5 hours, to give time to air bubbles to come up to the surface and the plates to absorb the electrolyte;
- check that the electrolyte level is still above the plates, otherwise top up with the solution of sulphuric acid;
- reclose the plugs;
- install the storage batteries on the machine (following the procedure described below).

It is now necessary to perform a first recharging before having the machine start; to do so stick to the instructions written in the respective paragraph.

5.4.2. Batteries: installation and connection

! DANGER

Check that the emergency button on the control panel is at the position "0" (off). Mind you connect only the clips marked with the symbol "+" to the positive poles.

Do not check the battery charge by creating sparkles.

Stick scrupulously to the instructions described below, as any short circuits of the batteries may cause them to explode.

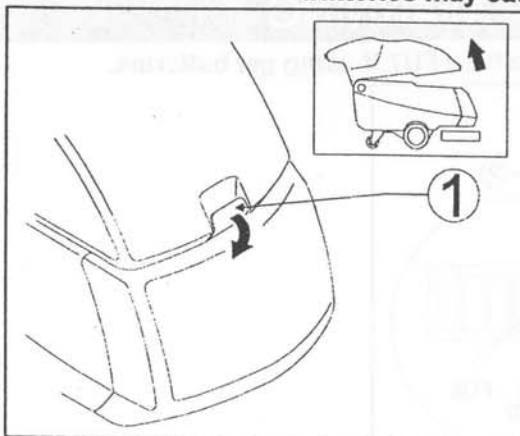


Fig. 7

- 1) Stop the machine and press the emergency button (fig. 8, ref. 2); engage the parking brake by means of the pedal (fig. 8, ref. 12);
- 2) make sure that the two tanks are empty (empty them, if necessary: see respective paragraph);
- 3) unhook the recovery tank (fig. 2, ref. 2) from the solution tank (fig. 2, ref. 3) acting on the blocking hook (fig. 7, ref. 1), placed on front of the machine;
- 4) lift the recovery tank, by making it turn backwards around about 90°: in this way you have access to the battery compartment (embedded in the solution tank) from the upper side;

WARNING

Before opening the upper tank:

**ensure that the recovery tank is empty (an acoustic warning device will sound if you try to open the recovery tank without emptying it first);
ensure that the emergency button is pressed.**

- 5) insert the batteries in the compartment, orienting them as shown in the drawing printed on the solution tank in the compartment.

WARNING

Install the storage batteries on the machine using suitable means according to their weight.

Positive and negative poles have different diameters.

- 6) Referring to the arrangement of cables in the aforesaid drawing, connect the clips of the battery wiring and the bridge to the poles of the storage batteries. After orienting the cables as shown in the drawing, tighten the clips at the poles and cover them with vaseline;
- 7) insert back the tank unit in its work position and hook it to the solution tank by means of the fixing hook (fig. 7, ref. 1);
- 8) use the machine in compliance with the instructions written below.

5.5. The battery-charger

WARNING

Never let the batteries run down excessively, as they could become damaged irreparably.

WARNING

Before recharging the batteries, ensure that you have pressed the emergency button.

5.5.1. Choosing the battery-charger

Check that the battery-charger is compatible with the batteries to be charged:

- **tubular lead batteries:** an automatic battery-charger 24V - 20A is suggested. Anyway, refer to the Manufacturer and read the relative manual to confirm your choice;
- **gel batteries:** use a battery-charger specifically intended for this type of storage batteries.

5.5.2. Preparing the battery-charger

If you wish to use a battery-charger not supplied with the machine, it is necessary to mount on it the connector delivered with the machine (see paragraph "Unpacking" of this manual).

To install the connector proceed as follows:

- remove about 13 mm of sheath from the black and red cables of the battery-charger;
- insert the cables in the connector pins and push strongly with suitable pliers;
- insert the cables in the connector respecting the polarity (red cable +, black cable -).

5.6. Lifting and handling the machine

WARNING

All stages must be performed in an adequately lighted environment adopting all necessary safety measures.

Always wear individual protections for the user's safety.

The loading of the machine onto a vehicle must be done as follows:

- empty the recovery tank and the solution tank;
- remove the squeegee and the brushes (or drive discs);
- remove the batteries;
- place the machine on the pallet, engage the parking brake and secure it with plastic straps or metal brackets;
- lift the pallet by means of a fork lift truck and load it on the vehicle;
- anchor the machine to the vehicle with ropes connected to the pallet and to the chassis of the machine.

6. PRACTICAL GUIDE FOR THE USER

6.1. Control devices - Description

With reference to fig. 8 the machine has the following controls and leds:

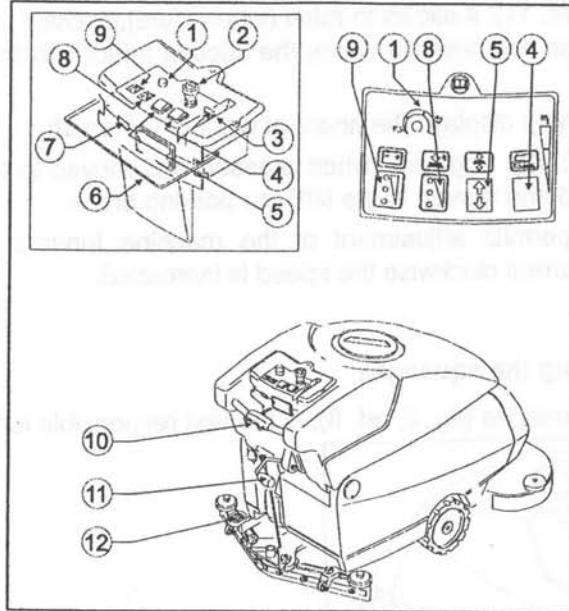


Fig. 8

- **Battery charge level indicator** (ref. 9): signals both "Power on" and the battery charge level. Note: the following percentages are based on the usable capacity and not the total capacity of the batteries (therefore 100% flat = 80% of total battery capacity). Possible situations are:
 - a) **off**: the main switch is set to "0" (off) or the batteries are disconnected;
 - b) **permanent green light**: batteries charged from 100% to 50%;
 - c) **permanent yellow light**: batteries charged from 50% to 15%;
 - d) **permanent red light**: batteries charged from 10% to 0%; batteries flat and must be recharged;
 - e) **blinking red light**: batteries completely flat; batteries must be immediately recharged.
- **Main switch - emergency button with key** (ref. 2): enables or disables the power supply to all the machine functions. It acts as a safety device. To start the machine turn the proper key clockwise. To stop the machine press the button.
- **Brush up-down button** (ref. 5): when the arrow down is pressed, the head moves down to the working position, the brush motor comes on automatically and the solenoid valve is activated. Via this button, a variable pressure can be exerted on the head during the work phase (according to how long the button is kept pressed), thus adapting the cleaning power of the brushes to a wide range of different operating conditions.

When the arrow up is pressed, the head moves up to the rest position, the brush motors are switched off and the solenoid valve is de-activated.
- **Brush pressure indicator** (ref. 8): indicates the pressure exerted by the head (1 led on indicates minimum pressure; 2 leds on indicate medium pressure; 3 leds on indicate maximum pressure).
- **Brush release button** (ref. 4): permits release of the brushes; press the button for a couple of seconds: when the button is released, the brushes will be released.
- **Cock control lever** (ref. 3): allows to adjust continuously the flow of solution sent to the brushes. On turning it forward, the liquid outlet flow is increased.

- **Drive command lever** (ref. 6): placed under the handgrip, when it is slightly pressed upwards (the emergency button must be active), it starts the drive motor thus making the machine move forward. When the lever is pressed down, the drive motor moves the machine in reverse gear.
- **Squeegee lifting lever** (ref. 11): it allows to raise (when lifted) or lower (when pushed down) the squeegee. When it is pressed down, the suction motor is also switched on for drying the floor.
- **Hour meter** (ref. 7 - optional): displays the hours of work of the brush.
- **Parking brake pedal** (ref. 12): engages (when pressed and moved to the right) and disengages (when pressed and moved to the left) the parking brake.
- **Potentiometer** (ref. 1): permits adjustment of the machine forward and reverse speed; when the knob is turned clockwise the speed is increased.

6.2. Installing and adjusting the squeegee

The floor wiper, also called squeegee (fig. 2, ref. 8), is the first responsible for drying.

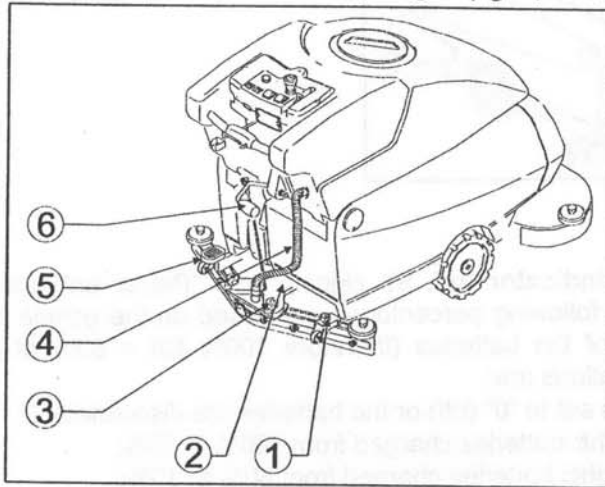


Fig. 9

To install the squeegee on the machine proceed as follows:

- 1) Stop the machine and press the emergency button (fig. 8, ref. 2); engage the parking brake by means of the pedal (fig. 9, ref. 5);
- 2) check that the squeegee supporting plate (fig. 9, ref. 2) is raised, otherwise lift it by acting on the proper lever (fig. 9, ref. 6);
- 3) firmly push down the sleeve of the suction tube (fig. 9, ref. 4) into the squeegee;
- 4) slacken the two knobs (fig. 9, ref. 3) placed in the centre of the squeegee;
- 5) insert the two threaded dowels in the slots of the support (fig. 9, ref. 2);
- 6) fix the squeegee by tightening the knobs (fig. 9, ref. 3).

The blades of the squeegee are used to scrub from the floor the film of water and detergent thus allowing a perfect drying. As long as time goes by the continuous scraping rounds off and splits the sharp edge in contact with the floor, thus reducing the drying efficacy and therefore requiring the replacement of the blades. Therefore, often check their state of wear and tear.

To obtain a perfect drying action it is necessary to adjust the squeegee in such a way that when it is in operation, the rear blade lip is bent about 45 degrees with respect to the floor at all points. It is possible to adjust the inclination of the blades by screwing down the nuts (fig. 9, ref. 1): by unscrewing the nuts the blade inclination is reduced, while by screwing the nuts the blade inclination is increased.

Moreover, check that the suction hole of the squeegee is not clogged, to let dirty water to be perfectly drained from the floor.

- Fill the squeegee.
- Take the head by pressing the front release button (fig. 2, ref. 2) on the handle.
- Press the front release button (fig. 2, ref. 2) on the handle.
- Press the front release button (fig. 2, ref. 2) on the handle.
- Press the front release button (fig. 2, ref. 2) on the handle.
- Press the front release button (fig. 2, ref. 2) on the handle.
- Press the front release button (fig. 2, ref. 2) on the handle.
- Press the front release button (fig. 2, ref. 2) on the handle.

WARNING

Always leave the machine unpowered or parked with the parking brake engaged, or the key inserted in the emergency button. Do not engage the parking brake while the machine is moving.



Fig. 18

6.4 Installing and replacing the brushes

WARNING

Do not work if the brushes or drive rollers are not properly installed.

Removing

- Place the head by pressing the front release button (fig. 2, ref. 2) on the handle.
- Press the front release button (fig. 2, ref. 2) on the handle.
- Press the front release button (fig. 2, ref. 2) on the handle.

Fitting

- Position the brushes side by side by the end of the rollers.
- Move forward with the machine until the brush is positioned against the rollers and they are engaged.
- Press the front release button (fig. 2, ref. 2) on the handle.
- Press the front release button (fig. 2, ref. 2) on the handle.
- Press the front release button (fig. 2, ref. 2) on the handle.

WARNING

In particular conditions, the brushes may not engage correctly. In this case the head will vibrate. The brushes must be disassembled and replaced.

6.3. Moving the machine

To displace the machine do as follows:

- lift the squeegee;
- raise the head by pressing the brush up-down button (fig. 8, ref. 5) on the arrow up;
- disengage the parking brake via the pedal (fig. 8, ref. 12);
- insert the key to release the emergency button (fig. 8, ref. 2);
- below the handgrip is a lever (fig. 8, ref. 6): by pulling the lever up (fig. 10, ref. 2) or pressing it down (fig. 10, ref. 1), according to whether you wish to move forward or back, the drive motor is switched on and the machine will begin to move;
- adjust the running speed via the potentiometer (fig. 8, ref. 1);
- once you have reached your destination, engage the parking brake via the pedal (fig. 8, ref. 12).

WARNING

Never leave the machine unmanned or parked with the parking brake disengaged or the key inserted in the emergency button. Do not engage the parking brake when the machine is moving.

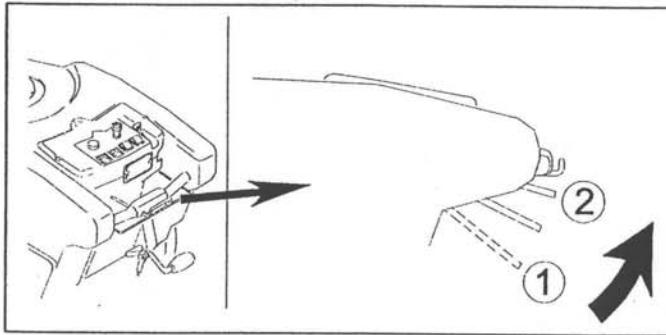


Fig. 10

6.4. Installing and replacing the brushes / drive discs

WARNING

Do not work if the brushes or drive discs are not perfectly installed.

Removing:

- Raise the head by pressing the brush up-down button (fig. 8, ref. 5) on the arrow up;
- press the brush release button (fig. 8, ref. 4) for a couple of seconds: when the button is released, the brushes will be released.

Fitting:

- Position the brushes side by side at the front of the machine;
- move forward with the machine until the head is positioned above the brushes and they are centred;
- press the brush up-down button (fig. 8, ref. 5) on the arrow down and keep it pressed until the first led of the brush pressure indicator comes on (fig. 8, ref. 8); in this phase the brush motor may come on and then switch off for a few moments: this is a normal part of the brush engagement procedure.

WARNING

In particular conditions, the brushes may not engage correctly. In this case the head will vibrate. The brushes must be disassembled and refitted.

If you wish to use the **ABRASIVE DISCS** instead of the brushes, they must firstly be fitted on the drive discs: rest the pad on the drive disc, placing it exactly in the centre, and fix it with the center lock ring nut. The drive discs must then be fitted on the machine following exactly the same procedure as for the brushes.

WARNING

Fully tighten the drive disc flange via the handle provided in order to prevent the flange dragging on the ground and damaging the floor.

6.5. Detergents - Use

WARNING

Always dilute detergents according to the supplier's instructions. Do not use sodium hypochlorite (bleaching solution) or other oxidizers, especially if in high concentrations, and do not use solvents or hydrocarbons. The temperatures for water and detergent must not exceed the maximum temperatures indicated in the technical data and must be free from sand and/or other impurities.

The machine has been designed to be used with non-foaming and biodegradable detergents specific for sweeping scrubbers.

Contact the Manufacturer to have a complete and updated list of the available detergents and chemical products; you will receive all papers together with the Manual "Complete cleaning system".

Use only products suitable for floors and for removing dirt.

Follow the safety rules concerning the use of detergents indicated in the paragraph "Safety regulations".

6.6. Setting up the machine

WARNING

Before starting to work wear an apron, cap, non-slip waterproof shoes, a mask to protect the respiratory system, gloves and any other form of protection indicated by the supplier of the detergent or necessary in the environment you are going to work in.

Before starting to work, perform the following operations:

- check the level of battery charge (recharge, if necessary);
- disengage the parking brake via the pedal (fig. 8, ref. 12);
- make sure that the recovery tank (fig. 2, ref. 2) is empty; if this is not so, empty it;
- check that the cock control lever (fig. 8, ref. 3) is at the position "off";
- fill the solution tank (fig. 2, ref. 3) through the respective hole on the front with clean water and non-foaming detergent in a suitable concentration: leave a difference in level of at least 5 cm between the liquid surface and the tank opening;
- install brushes or drive discs suitable for the floor and the job to be done;
- lower the head by pressing the brush up-down button (fig. 8, ref. 5) on the arrow down;
- check that the squeegee (fig. 2, ref. 8) is fixed well and connected to the suction tube (fig. 9, ref. 4); make sure that the rear blade is not worn.

i INFORMATION

If you use the machine for the first time, it is advisable that you train with it for a short time on a wide surface without any obstacles, to acquire the necessary familiarity.

Always empty the recovery tank before refilling the solution tank.

For an effective cleaning and long life of the equipment, it is necessary to follow some simple rules:

- prepare the work area, keeping away the possible obstacles;
- begin to work starting from the farthest spot, in order to avoid trampling on the area just-cleaned;
- choose paths that are as much straight as possible;
- on wide floors divide the paths into rectangular and parallel areas.

At the end quickly mop the area, if necessary, to clean spots that are inaccessible to the scrubber.

6.7. Work

After setting up the machine, proceed as follows:

- insert and operate the key to release the main switch (fig. 8, ref. 2) and enable all the machine functions: the battery charge level indicator will come on (fig. 8, ref. 9);
- move the cock lever (fig. 8, ref. 3) to the position of minimum flow of solution: the detergent solution begins to reach the brushes;
- press the brush up-down button (fig. 8, ref. 5) on the arrow down: the head will begin to move down and as soon as the brushes touch the floor the brush motors will come on. As the brushes rotate, the solution is distributed over the floor;
- lower the squeegee by means of the proper lever (fig. 8, ref. 11): the suction motor comes on;
- press the drive lever (fig. 8, ref. 6) placed under the handgrip: the drive motor is started and the machine starts moving forward;
- adjust the running speed via the potentiometer (fig. 8, ref. 1);
- if you wish to engage reverse gear during work with the squeegee lowered, you must first stop and raise the squeegee;
- check periodically that the detergent solution reaches the brushes and fill with solution if it runs out;
- check cleaning quality during work and adjust, as required, the flow of solution sent to the brushes (by rotating the cursor (fig. 8, ref. 3)) and the pressure exerted by the head-brushes on the floor (via the brush up-down button (fig. 8, ref. 5) until the test pressure indicator (fig. 8, ref. 8) indicates the required level).

i INFORMATION

In working conditions, if the emergency switch is accidentally pressed and the machine is switched off, when it is switched on again the brush button must be pressed to re-activate the brushes.

WARNING

Never leave the machine stationary with the head lowered and the brushes in motion: the floor could be damaged.

WARNING

Whenever you fill up the solution tank, always empty the recovery tank. Do not leave the machine stationary with the suction motor on and the solution cock turned on.

- if the warning led (fig. 8, ref. 9) starts flashing, it means that the storage batteries are getting flat. Therefore, it is necessary to recharge them; if you keep on working, the batteries could become damaged irreparably;
- if the suction unit revs up but does not perform suction, it means that the floater has

cut in. In this case the recovery tank must be emptied (see specific paragraph).

WARNING

If the drive lever (fig. 8, ref. 6) operation is intermittent for a prolonged time, it is possible that the motor becomes overheated with consequent damages to the same motor. For this reason limit the "lever shots" to the sole events when they are strictly necessary.

WARNING

If for any reason the battery voltage drops considerably below the level envisaged, even temporarily, the drive lock may cut in. In this case the machine must be switched off and then on again.

At the end of work:

- move the cock lever (fig. 8, ref. 3) to the position "CLOSED";
- release the drive lever (fig. 8, ref. 6) placed beneath the handle: the drive motor switches off and the machine stops;
- raise the head by pressing the brush up-down button (fig. 8, ref. 5) on the arrow up to stop the brushes (or drive discs) and raise them to prevent them becoming permanently distorted;
- let the suction motor run for at least 2 minutes to make sure that it is completely dry;
- by raising the lever (fig. 8, ref. 11), lift the squeegee from the ground to prevent continuous pressure causing distortion of the drying blades and to switch off the suction motor;
- press the main switch (fig. 8, ref. 2) to disable all the machine functions;
- engage the parking brake via the pedal (fig. 8, ref. 12);
- empty and clean the recovery tank.

6.7.1. Additional functions

The machine is provided with additional functions that can be activated by **removing** the fuses inside the control panel (fig. 11).

FU6 FUSE FUNCTION:

The brushes stop:

- a) when the drive is released (with delay);
- b) when the batteries are flat.

FU7 FUSE FUNCTION: gel battery activation

FU8 FUSE FUNCTION: water is delivered to the brushes only when the drive is activated.

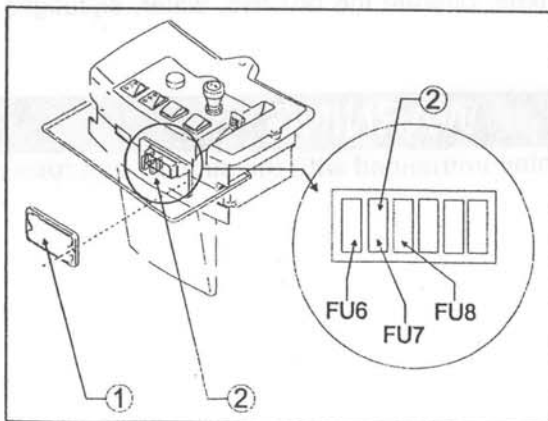


Fig. 11

In particular if working without fuse **FU6**:

a) if the drive is released after a few seconds the brushes will stop; pull the drive lever to reactivate the brushes;

b) when the batteries are flat and the red led blinks, the brushes will lock; in this case the head must be raised (an acoustic signal warns that the head will be damaged with the brushes lowered but at a standstill as drive and suction continue to operate) and the batteries recharged.

If working without fuse **FU8**: the water is delivered only if the drive is active in addition to the brush motors.

i INFORMATION

The machine is supplied with fuses FU6, FU7, FU8 inserted; if you wish to activate one or more of the above functions, the related fuse must be removed (the three functions are independent from one another).

6.8. Some useful suggestions for the optimal use of the machine

If the floor presents a particularly resistant type of dirt, it is possible to make the machine wash and dry it in separate stages.

6.8.1. Pre-washing

- Turn on the water cock;
- switch on the brush motor and lower the head;
- adjust the head pressure, which depends on the type of floor and dirt to be removed;
- start washing with the suction motor off and the squeegee lifted.

The flow of water must be dosed in proportion to the desired advance speed: the slower the machine goes, less water comes down.

Insist on washing the dirtiest spots: in this way the detergent has the time to perform its chemical action for the detachment and suspension of dirt, and the brushes to develop an effective mechanical action.

6.8.2. Drying

Lower the squeegee and with the suction unit operating pass again on the same area you have previously washed. In this way you obtain a result that is similar to a thorough washing and the following operations of ordinary maintenance will certainly take less time. To wash and dry at the same time, operate the brushes, water, squeegee and suction motor simultaneously.

WARNING

Never leave the machine unmanned with the suction unit running.

6.9. Draining off dirty water

! DANGER

Use the individual protection devices suitable for the operation to be performed. Perform the draining operations with the machine disconnected from the power supply.

The drain hose of the recovery tank is located at the rear left side of the machine. To empty the above-mentioned tank:

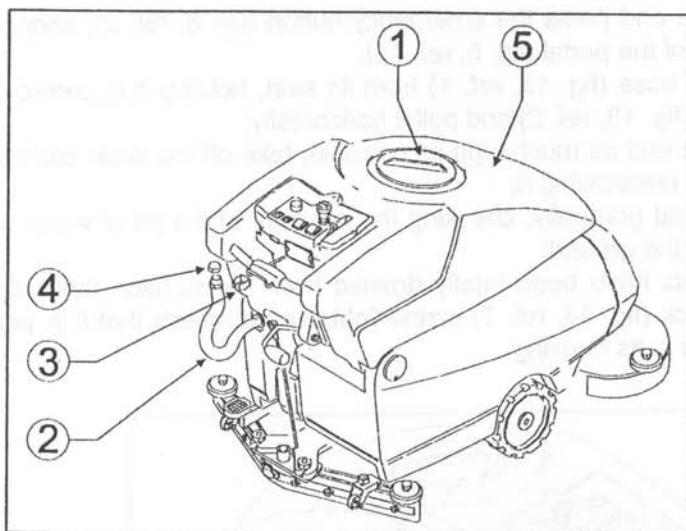


Fig. 12

- take the machine next to a drain;
- stop the machine and press the emergency button (fig. 8, ref. 2); engage the parking brake by means of the pedal (fig. 8, ref. 12);
- take off the tank cap (fig. 12, ref. 1) from the recovery tank (fig. 12, ref. 5);
- detach the drain hose (fig. 12, ref. 2) from its seat, holding it in correspondence with the fixing spring (fig. 12, ref. 3) and pull it horizontally;
- keeping the hose end as much high as possible, take off the drain cock (fig. 12, ref. 4) from the hose by unscrewing it;
- lower the hose end gradually, checking the intensity of the jet of water with reference to its height from the ground;
- check the amount of residual dirt in the recovery tank and wash it inside, if necessary. To facilitate the cleaning and total drain, it is better to unhook it from the solution tank and lift it;
- when the dirty water has been totally drained, lower the recovery tank (if it has been previously lifted) and hook it again to the solution tank;
- put back the cap (fig. 12, ref. 1) on the recovery tank, making sure that it is perfectly closed;
- close the drain hose (fig. 12, ref. 2) with the cock (fig. 12, ref. 4) screw-tightening it; check that it is perfectly closed and refit the hose in its housing.

⚠ WARNING

While washing the recovery tank never remove the suction filter (fig. 15, ref. 2) from its seat and never direct the jet of water towards the filter itself.

Now it is possible to proceed with a new washing and drying action.

6.10 Draining off clean water

! DANGER

Use the individual protection devices suitable for the operation to be performed. Perform the draining off operations with the machine disconnected from the power supply.

To empty the tank:

- take the machine next to a drain;
- stop the machine and press the emergency button (fig. 8, ref. 2); engage the parking brake by means of the pedal (fig. 8, ref. 12);
- detach the drain hose (fig. 13, ref. 1) from its seat, holding it in correspondence with the fixing spring (fig. 13, ref. 2) and pull it horizontally;
- keeping the hose end as much high as possible, take off the drain cock (fig. 13, ref. 3) from the hose by unscrewing it;
- lower the hose end gradually, checking the intensity of the jet of water with reference to its height from the ground;
- when the contents have been totally drained from the solution tank, close the drain hose with the cock (fig. 13, ref. 3) screw-tightening it; check that it is perfectly closed and refit the hose in its housing.

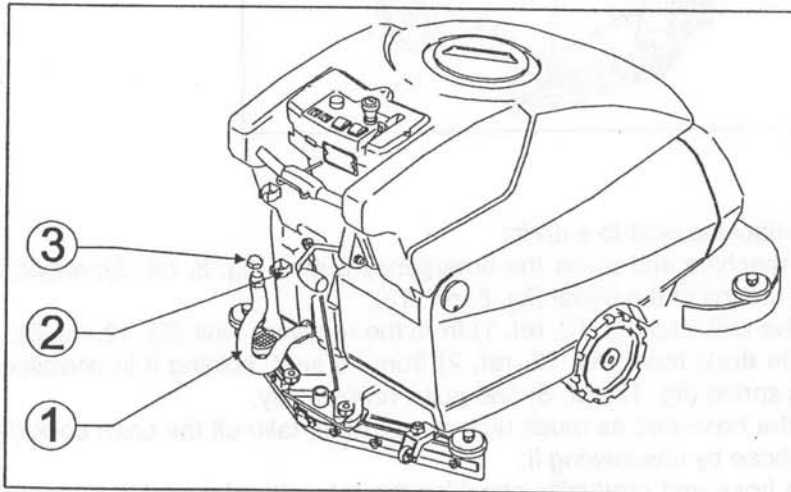


Fig. 13

i INFORMATION

The water and detergent solution can also be used to wash the recovery tank.

7. PERIODS OF INACTIVITY

If the machine is to remain unused for a long time, the squeegee and brushes (or drive discs) must be dismantled, washed and kept in a dry place (preferably packed in a plastic envelope or sheet), sheltered from dust. Park the machine with the parking brake engaged.

Furthermore, make sure that the tanks are completely empty and perfectly clean. Recharge the batteries completely before putting them in the storehouse. During long periods of inactivity recharge the batteries (once every two months at least) to preserve the storage batteries constantly at the maximum charge.

WARNING

If the batteries are not recharged periodically, they may become damaged irreparably.

8. MAINTENANCE AND BATTERY RECHARGING

! DANGER

Do not check the battery charge by producing sparks.

The batteries give off inflammable vapours: put out any fire or embers before checking and filling up the batteries.

Perform the operations described below in airy environments.

To avoid permanent damages to the batteries, never let them get flat completely. Remember that when the proper red led (fig. 8, ref. 9) flashes on the control panel, it is necessary to recharge the batteries.

8.1. Recharging procedures

Lead batteries with liquid electrolyte:

It is necessary to check the level of the electrolytic solution in order that it always covers the films of the elements, adding the necessary distilled water.

WARNING

During recharging do not let the temperature of the electrolyte exceed 45°C.

To recharge proceed as follows:

- stop the machine and press the emergency button (fig. 8, ref. 2);
- engage the parking brake by means of the pedal (fig. 8, ref. 12);
- connect the battery-charger to the battery wiring connector (fig 14, ref. 1);
- recharge according to the instructions written in the manual to the battery-charger;
- switch off the battery charger before disconnecting the connectors;
- disconnect the battery charger connector from the battery wiring connector;
- at the end of the recharging time check the battery intensity with a densimeter: if one or more elements are flat and the remaining ones completely charged, the battery is damaged and must be replaced.

Gel batteries:

- connect the battery-charger connector to the battery wiring connector (fig 14, ref. 1);

⚠ WARNING

Use only a battery-charger that is specific for gel storage batteries.

- recharge following the instructions written in the manual to the battery-charger;
- at the end of the recharging time disconnect the connectors.

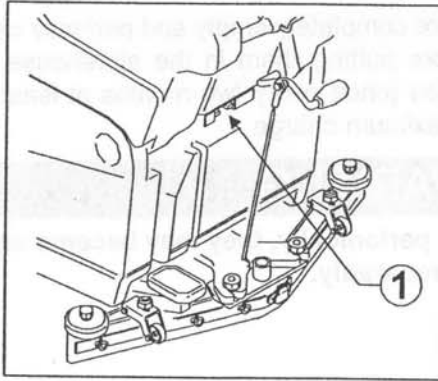


Fig. 14

9. INSTRUCTIONS FOR MAINTENANCE

! DANGER

All maintenance operations on the electric system and those not explicitly described in this manual must only be performed by trained technical staff in compliance with the safety regulations in force and recommendations stated in the maintenance manual.

9.1. Maintenance – General rules

A regular maintenance performed according to the Manufacturer's instructions guarantees a better performance and endurance of the machine.

9.2. Routine maintenance

9.2.1. Daily cleaning

When cleaning the machine always observe the following instructions:

- avoid using water cleaners, which could let water go inside the electric or the motor compartments with a consequent damage or hazard of short circuits;
- do not use steam in order not to warp the plastic parts;
- do not use solvents or hydrocarbons, which could damage the hoods or the rubber parts.

i INFORMATION

Do not use water on the motors or electric parts.

9.2.2. Suction air filter and floating rod: cleaning

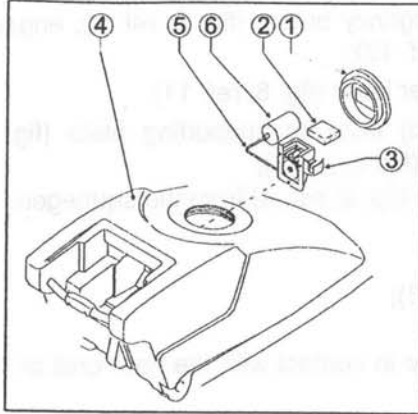


Fig. 15

- Stop the machine and press the emergency button (fig. 8, ref. 2); engage the parking brake by means of the pedal (fig. 8, ref. 12);
- unscrew and take off the tank cap (fig. 15, ref. 1) from the recovery tank (fig. 15, ref. 4);
- make sure that the recovery tank (fig. 15, ref. 4) is empty;
- take out the air filter (fig. 15, ref. 2) of the suction unit from the float support (fig. 15, ref. 3), which is located on the upper inner side of the recovery tank;
- clean the filter with current water or with the detergent used in the machine;
- put the filter back in the support only after having it dried well;
- make sure that the filter has been replaced in its seat correctly;
- check that the floating rod (fig. 15, ref. 5), which is also fixed to the support (fig. 15, ref. 3), moves freely and clean it, if necessary;
- screw again the cap on the recovery tank.

9.2.3. Squeegee blades: replacement

The blades of the squeegee are used to scrub from the floor the film of water and detergent thus allowing a perfect drying. As long as time goes by the continuous scraping rounds off and splits the sharp edge in contact with the floor, thus reducing the drying efficacy and therefore requiring the replacement of the blades. Therefore, often check their state of wear and tear.

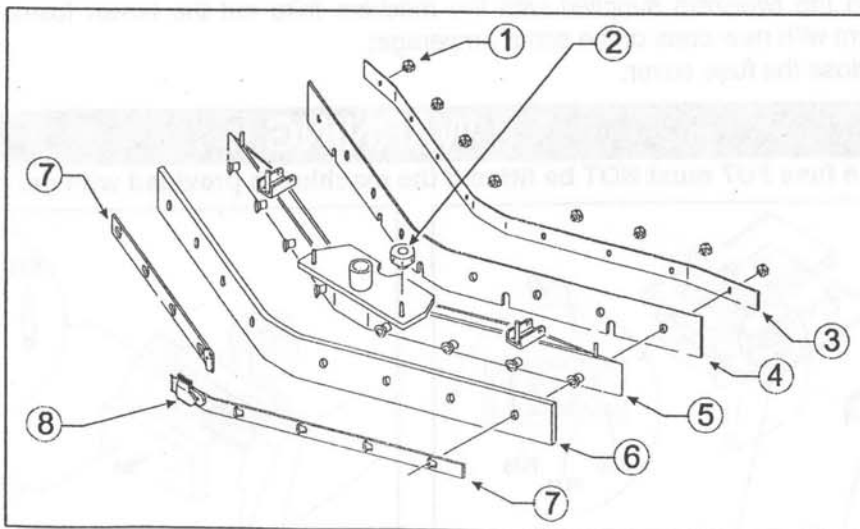


Fig. 16

Exchanging or replacing the blades:

- stop the machine and press the emergency button (fig. 8, ref. 2); engage the parking brake by means of the pedal (fig. 8, ref. 12);
- lower the squeegee by using the proper lever (fig. 8, ref. 11);
- take off the squeegee (fig. 2, ref. 8) from its supporting plate (fig. 9, ref. 2) by unscrewing completely the two knobs (fig. 9, ref. 3);
- slide out the sleeve of the suction tube (fig. 9, ref. 4) from the squeegee.

Front blade:

- unscrew the knobs (fig. 16, ref. 1);
- remove the blade clamps (fig. 16, ref. 3);
- take out the blade (fig. 16, ref. 4);
- fit in the same blade inverting the edge in contact with the floor until all the four edges are worn, or else fit in a new blade;
- put the blade clamp (fig. 16, ref. 3) back;
- screw down all the knobs (fig. 16, ref. 1).

Rear blade:

- unhook the hook clamp (fig. 16, ref. 8);
- slide out the two blade clamps (fig. 16, ref. 7) by first pushing them outwards with respect to the squeegee unit (fig. 16, ref. 5) and then taking them out;
- remove the blade (fig. 16, ref. 6);
- fit in the same blade inverting the edge in contact with the floor until all the four edges are worn, or else fit in a new blade embedding it in the screws of the squeegee unit (fig. 16, ref. 5);
- put the two blade clamps (fig. 16, ref. 7) back, centering the largest part of the slots on the fixing screws of the squeegee unit (fig. 16, ref. 5) and then pushing the blade clamps towards the inside of the squeegee itself;
- hook the clamp (fig. 16, ref. 8) again.

Insert the squeegee back on its support following the instructions reported in §6.2.

9.2.4. Fuses: replacement

To replace the fuses in the control panel of the machine, proceed as follows:

- stop the machine and press the emergency button (fig. 8, ref. 2); engage the parking brake by means of the pedal (fig. 8, ref. 12);
- remove the fuse cover (fig. 17, ref. 1);
- with the tweezers supplied with the machine take out the blown fuses and replace them with new ones of the same amperage;
- reclose the fuse cover.

WARNING

The fuse FU7 must NOT be fitted if the machine is provided with gel batteries.

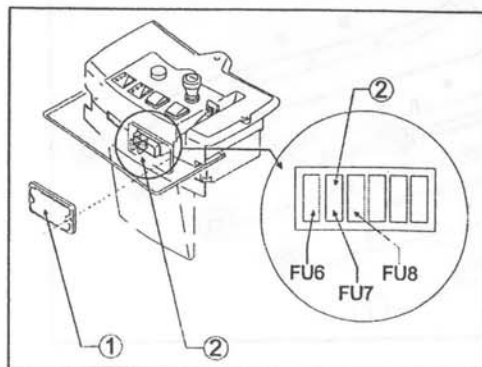


Fig. 17

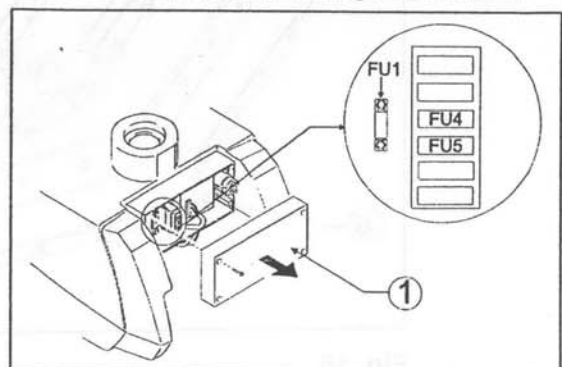


Fig. 18

To replace the fuses inside the electrical box, proceed as follows:

- stop the machine and press the emergency button (fig. 8, ref. 2); engage the parking brake by means of the pedal (fig. 8, ref. 12);
- remove the bonnet (fig. 2, ref. 4);
- remove the cover of the electrical box (fig. 18, ref. 1);
- with the tweezers supplied with the machine take out the blown fuses and replace them with new ones of the same amperage;
- re-close the cover of the electrical box;
- refit the bonnet.

FUSE	DESCRIPTION	FUSE	DESCRIPTION
FU1	General fuse of power	FU6	Brush electronic control switch
FU4	Suction motor fuse	FU7	Switch for gel batteries
FU5	Control protection fuse	FU8	Solenoid valve control switch

Fuse chart: for a chart of the fuses see the Catalogue of Spare Parts.

⚠ WARNING

Never fit a fuse with a higher Amp value than the intended one.

If a fuse keeps burning, it is necessary to identify and repair the damages present in the wiring, boards (if fitted) or motors: have the machine checked by trained technical staff.

9.3. Periodic maintenance

9.3.1. Daily maintenance

Every day at the end of work perform the following operations:

- stop the machine and press the emergency button (fig. 8, ref. 2);
- engage the parking brake by means of the pedal (fig. 8, ref. 12);
- empty the recovery tank and clean it, if necessary;
- clean the squeegee blades, checking that they are not excessively worn; replace them, if necessary;
- make sure that the squeegee suction hole is not clogged, freeing it from any encrusted dirt;
- recharge the batteries according to the procedure described above.

9.3.2. Weekly maintenance

- Clean the floating rod of the recovery tank and check that it works correctly;
- clean the suction air filter and check that it is not damaged (replace it, if necessary);
- clean the solution filter placed at the front opening of the solution tank (fig. 2, ref. 3) and check that it is not damaged (replace it, if necessary);
- clean the suction tube;
- clean the recovery tank and the solution tank;
- check the level of the electrolyte in the batteries and top up with distilled water, if necessary.

9.3.3 Six-monthly maintenance

Have the electric system, calibrations checked by qualified staff.

10. HOW TO ORDER SPARE PARTS

For a correct identification by our After-sales Service Office of the spare part(s) you need and, therefore, to help us serving you better, please fill in your orders with the following data:

- machine model;
- machine serial number on the identification plate (see fig. 1);
- chart of the list of spare parts in which the item and its reference number are found;
- code of the item to be found in the list of spare parts;
- amount ordered.

If you ask for a replacement under warranty terms, the order must be completed with a brief description of the fault.

11. TROUBLESHOOTING

11.1. How to overcome possible failures

Possible failures affecting the whole machine

FAILURES	CAUSES	REMEDIES
The machine does not work	• the emergency button is pressed or faulty	• insert the key, turn and release or replace the button
	• the batteries are flat	• recharge the batteries
	• the battery connector microswitch is out of calibration or faulty;	• calibrate or replace
	• the power fuse FU1 and/or the control fuse FU5 have blown	• check and remove the causes that made the fuse blow, then replace it
	• the battery charger connector is connected to the battery wiring connector	• disconnect the battery charger from the battery wiring connector
The brushes do not turn	• the machine has been switched off and then on again with the head lowered	• press the drive lever
	• the brush motor thermal protection has tripped: the motor has become overheated	• release the drive lever; raise the brushes by pressing the brush up-down button; leave the machine to cool for at least 45'
	• the power fuse FU1 and/or the control fuse FU5 have blown	• check and remove the causes that made the fuse blow, then replace it
	• the brush motor activation microswitch is out of calibration or faulty	• check and remove the causes that made the fuse blow, then replace it
	• you are working without fuse FU6 and the batteries are flat	• raise the head and recharge the batteries
	• you are working without fuse FU6 and the drive has been released	• pull the drive lever
	• you are working without fuse FU6 and the card permitting use of the brush function has failed	• temporarily insert fuse FU6 to bypass the card and continue working, then have the card replaced so that the brush function can be used again
	• the head is in the rest position	• lower the head by pressing the brush up-down button
	• check the components (brush motors, brush motor relay, connectors)	• have the faulty component replaced
The machine does not wash evenly	• the brushes or abrasive discs are worn	• replace them
	• the pressure exercised by the head on the floor is not right	• adjust the brush pressure on the floor acting on the proper button

<p>The brush keeps on turning also when the main switch and/or brush switch have been pressed</p>	<ul style="list-style-type: none"> • the brush relay is faulty 	<ul style="list-style-type: none"> • have it replaced
<p>The solution does not come out</p>	<ul style="list-style-type: none"> • the head is in the rest position and therefore the solenoid valve is not working • the cock control lever is at the position "CLOSED" • the tap filter is dirty • the solution tank is empty 	<ul style="list-style-type: none"> • lower the head by pressing the brush up-down button • move the lever to the position "OPEN" • clean it • fill it up
<p>The flow of solution keeps coming to the brush</p>	<ul style="list-style-type: none"> • the solenoid valve is dirty 	<ul style="list-style-type: none"> • have the solenoid valve cleaned
<p>The suction motor does not work</p>	<ul style="list-style-type: none"> • the squeegee microswitch is out of calibration or faulty • the power fuse FU1 and/or the control fuse FU5 and/or the suction motor fuse FU4 have blown • the suction motor is not fed or is faulty 	<ul style="list-style-type: none"> • calibrate or replace • check and remove the causes that made the fuse blow, then replace it • check that the motor power supply connector is connected to the main wiring in the right way; in the second case have the motor replaced
<p>The squeegee does not clean or suck well</p>	<ul style="list-style-type: none"> • the edge of the rubber blades in contact with the floor is rounded off • there is an obstruction or damage in the squeegee or in the tube • the float has intervened (recovery tank full), or is blocked by dirt or broken • there is an obstruction in the suction tube • the suction tube is not connected to the squeegee or is damaged • the suction unit motor is not fed or is faulty 	<ul style="list-style-type: none"> • replace the rubber blade • remove the obstruction and repair the damage • empty the recovery tank or make the necessary repairs to the float • free the tube from the obstruction • connect or repair the tube • check that the motor power supply connector is connected to the main wiring in the right way and that the protection fuse has not blown; in the second case replace the motor

The drive is not working	• the power fuse FU1 and/or the control fuse FU5 have blown	• check and remove the causes that made the fuse blow, then replace it
	• the thermal protection of the drive motor has tripped: the motor has become overheated	• stop the machine and switch it off, letting it cool down for at least 45'
	• the potentiometer is faulty	• replace it
	• the anti-crushing microswitch is out of calibration or faulty (the machine does not work in reverse);	• calibrate or replace
	• the parking brake is engaged	• release the brake
• check the components (drive motor, drive control unit, connectors)	• have the faulty component replaced	

The washing head does not go down	• the fuse FU5 has blown	• check and remove the causes that made the fuse blow, then replace it
	• the head descent actuator is disconnected or broken	• have the connection restored or the actuator replaced

The batteries do not ensure the normal work time	• the poles and charging clips of the batteries are dirty and oxydized	• clean and grease the poles and clips, recharge the batteries
	• the electrolyte level is low	• add distilled water topping up all elements according to the instructions
	• the battery-charger does not work or is unsuitable	• see instructions relative to the battery-charger
	• there are considerable differences in density between the various elements of the battery	• replace the damaged battery
	• the machine is working with a too high pressure on the brush	• reduce pressure on the brush

The storage battery gets flat too fast during use, although it has been charged in the correct way and when tested with a densimeter at the end of recharging, it turned out to be uniformly charged	• the storage battery is new and does not give 100% of its expected capacity	• it is necessary to "run-in" the storage battery by 20-30 charges and discharges to obtain maximum performance
	• the machine is used at its maximum capacity for continuous periods and the autonomy is not sufficient	• use, if possible, storage batteries with larger capacity or replace the storage batteries with others already charged
	• the electrolyte has evaporated and does not cover the plates completely	• add distilled water, topping up all elements until the plates are covered and recharge the storage battery

<p>The storage battery gets flat too fast during use, the recharging with an electronic battery-charger is too fast and at the end the storage battery gives the right voltage (about 2,14V for each empty element), but it turns out to be not uniformly charged when tested with densimeter</p>	<ul style="list-style-type: none"> • the storage battery, already filled with acid by the Manufacturer, has been stored for a too long time before being recharged and used for the first time 	<ul style="list-style-type: none"> • if the recharging with a normal storage-charger is not effective, it is necessary to carry out a double recharging consisting in: <ul style="list-style-type: none"> - a slow recharging of about 10 hours with a current equal to 1/10 of the rated capacity expressed in 5 hours (ex.: for a storage battery of 100Ah(5), the current should be 10A, realized by a manual battery-charger); - one-hour pause; - charging with a normal battery-charger
---	---	--

<p>After recharging with an electronic battery-charger the storage-battery does not show the correct voltage (about 2,14V for each empty element) and only one or few elements turn out to be flat when tested with densimeter</p>	<ul style="list-style-type: none"> • the storage battery has not been connected to the battery-charger 	<ul style="list-style-type: none"> • connect the battery-charger to the storage battery connector
	<ul style="list-style-type: none"> • the battery-charger and the power socket to which the storage battery is connected are not compatible 	<ul style="list-style-type: none"> • check that the power supply characteristics indicated on the battery-charger plate are compliant with those of the mains
	<ul style="list-style-type: none"> • the battery-charger has not been installed correctly 	<ul style="list-style-type: none"> • taking into account the actual voltage available at the socket, check that the connections of the transformer primary circuit in the battery-charger are correct (at this purpose read the manual to the battery-charger)
<p>After recharging with an electronic battery-charger the storage-battery does not show the correct voltage (about 2,14V for each empty element) and only one or few elements turn out to be flat when tested with densimeter</p>	<ul style="list-style-type: none"> • the battery-charger does not work 	<ul style="list-style-type: none"> • check that there is voltage at the battery-charger, that the fuses are not interrupted and that there is current at the storage battery; in addition try to charge by means of another rectifier: if the battery-charger does not work, call the after-sales service staff communicating the serial number of the battery-charger
	<ul style="list-style-type: none"> • one or more elements are damaged 	<ul style="list-style-type: none"> • replace, if possible, the damaged elements. For monoblock storage batteries at 6V or 12V, replace the whole storage battery


The electrolyte that is present in the storage battery has a cloudy colour	• the storage battery has completed the charge/discharge cycles indicated by the Manufacturer	• replace the storage battery
	• the storage battery has been recharged with a too high current	• replace the storage battery
	• the storage battery has been charged beyond the limit suggested by the Manufacturer	• replace the storage battery

FS28 Foreman™ 28" Auto Scrubber


Parts Schematic

Item #86011



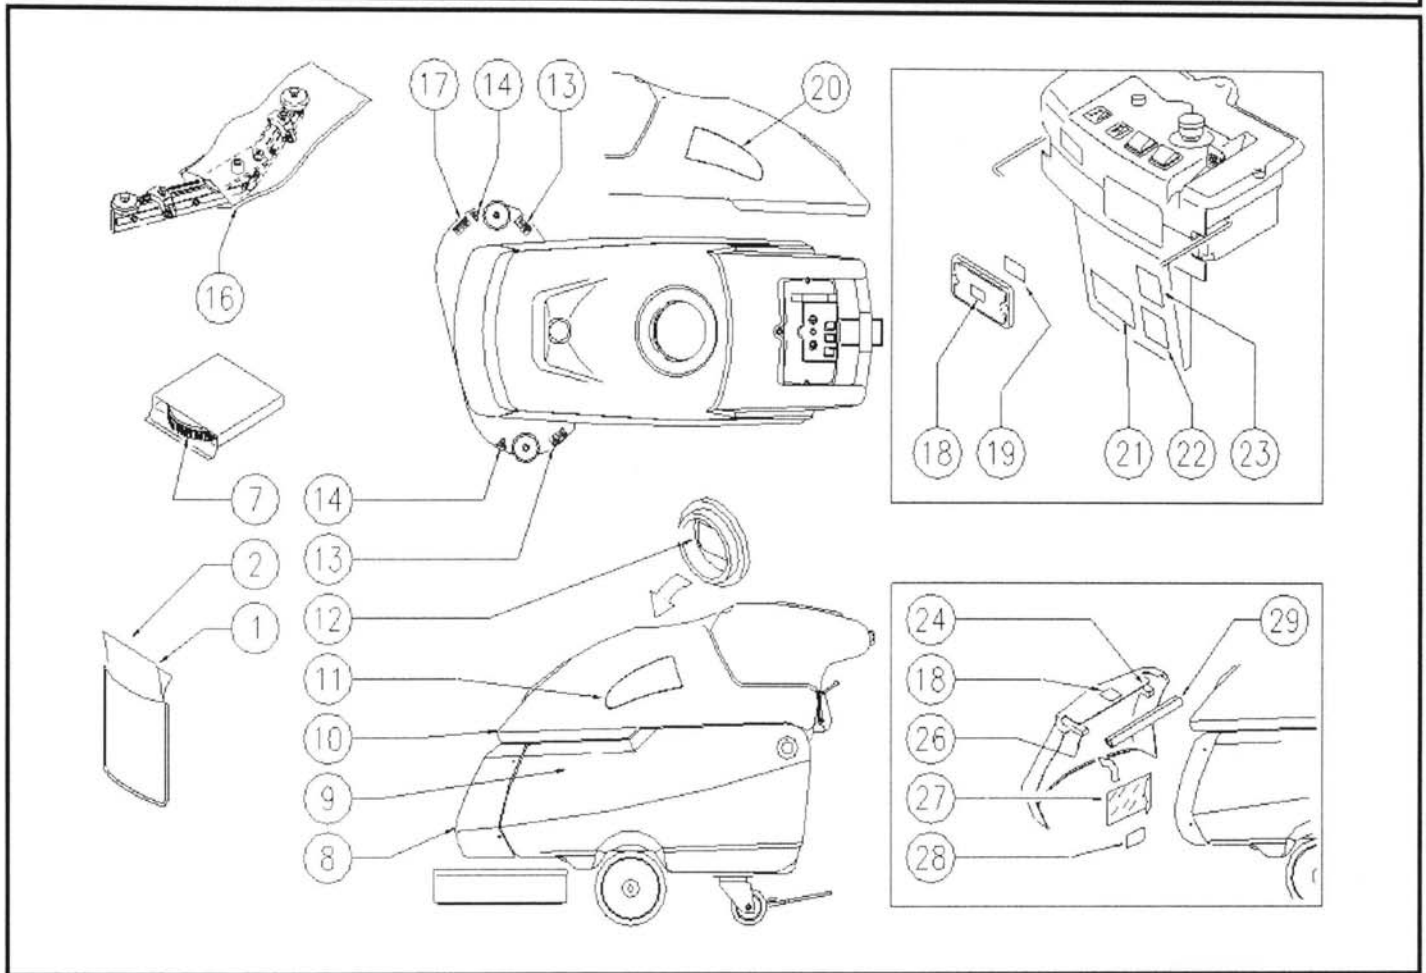


Ref. K	Part N.	Customer Part N.	Description	Qty	Validity:		Price
					From	To	
0001	PLDC01287		OP-TOR'S MANUAL	1,00	12/2002		--
0007	SPPV45333		DISC D.340 BT7000	2,00	12/2002		--
0009	MPVR04025		TANK	1,00	12/2002		--
0010	MPVR04028		TANK RECUPERO	1,00	12/2002		--
0012	ETET00554		ADHESIVE AVVERTENZE	1,00	12/2002		--
0013	ETET00906		ADHESIVE SIMBOLO PERICOLO DI ABRAS	2,00	12/2002		--
0014	ETET00897		ADHESIVE SIMBOLO PERICOLO	2,00	12/2002		--
0016	MIVR00048		TUBE UNIBOL	1,00	12/2002		--
0017	ETET00898		ADHESIVE SIMBOLO SCHIACCIAMENTO	1,00	12/2002		--
0018	ETET00763		LABEL SIMBOLO FUSIBILI	2,00	12/2002		--
0019	ETET01328		LABEL AVVERTENZA FUSIBILI	1,00	12/2002		--
0021	ETET00730		LABEL BATTERIE SCOLLEGATE	1,00	12/2002		--
0022	ETET00463		ADHESIVE SCARICO ACQUA	1,00	12/2002		--
0023	ETET00550		ADHESIVE PENDENZA	1,00	12/2002		--
0024	GUGO00259		GASKET MOUSSE FRONTALE SX	1,00	12/2002		--
0026	GUGO00258		GASKET MOUSSE FRONTALE DX	1,00	12/2002		--
0028	ETET01329		LABEL AVVERTENZA FUSIBILI	1,00	12/2002		--
0029	GUGO00253		GASKET CARTER FRONTALE	1,00	12/2002		--

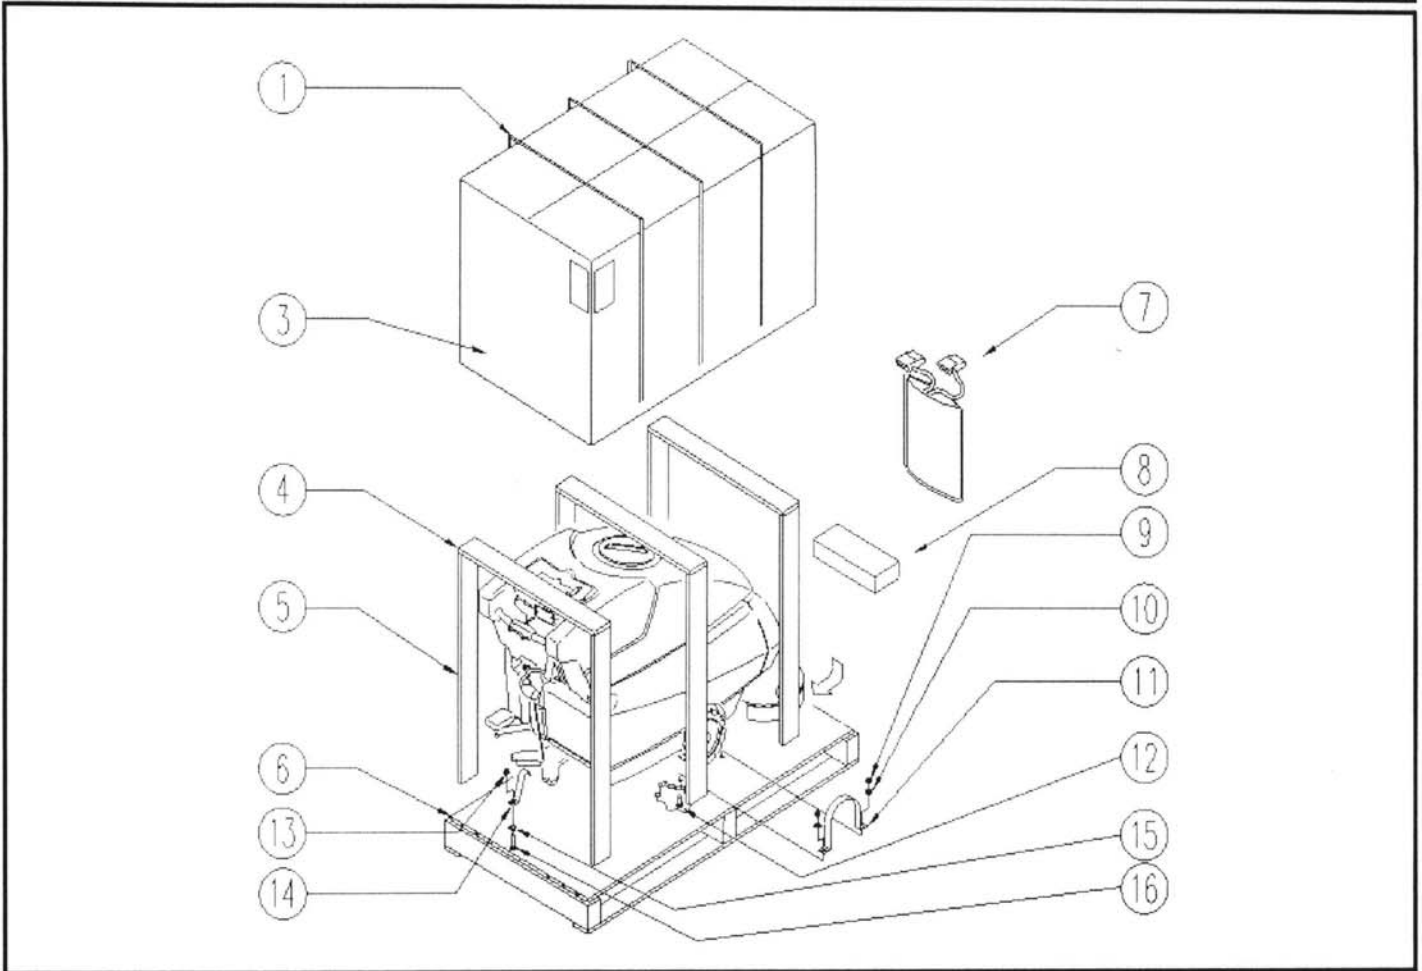

Ref. K	Part N.	Customer Part N.	Description	Qty	Validity:		Price
					From	To	
	MISC00010		SACK 2500X16000	1,00	12/2002		--
0001	MPVR02139		STRAP IN POLIPROP. 15X0.80 MM	3,00			--
0003	MICT00127		CARTON IMBALLO	1,00	12/2002		--
0004	MIVR00092		LATH LEGNO	3,00	12/2002		--
0005	MIVR00102		LATH LEGNO VERT.	6,00	12/2002		--
0006	MIBA00071		PALLET	1,00	12/2002		--
0007	MEVR34820		WIRING B 450 BT	3,00	12/2002		--
0008	MIVR00110		POLYSTYRENE TESTATA	1,00	12/2002		--
0009	VTDD00124		NUT M 8 BASSO	4,00	12/2002		--
0010	VTRS00294		WASHER D 8	4,00	12/2002		--
0011	LAFN05651		BRACKET IMBALLO	2,00	12/2002		--
0012	VTVT00635		SCREW	4,00	12/2002		--
0013	VTDD01695		NUT M 8 INX	1,00	12/2002		--
0014	LAFN05729		BRACKET IMBALLO	1,00	12/2002		--
0015	VTRS00293		WASHER D. 8-24	1,00	12/2002		--
0016	VTVT00733		SCREW TE M. 8.75	1,00	12/2002		--

Table: PANNELLO COMANDI


Progressive Number: 1

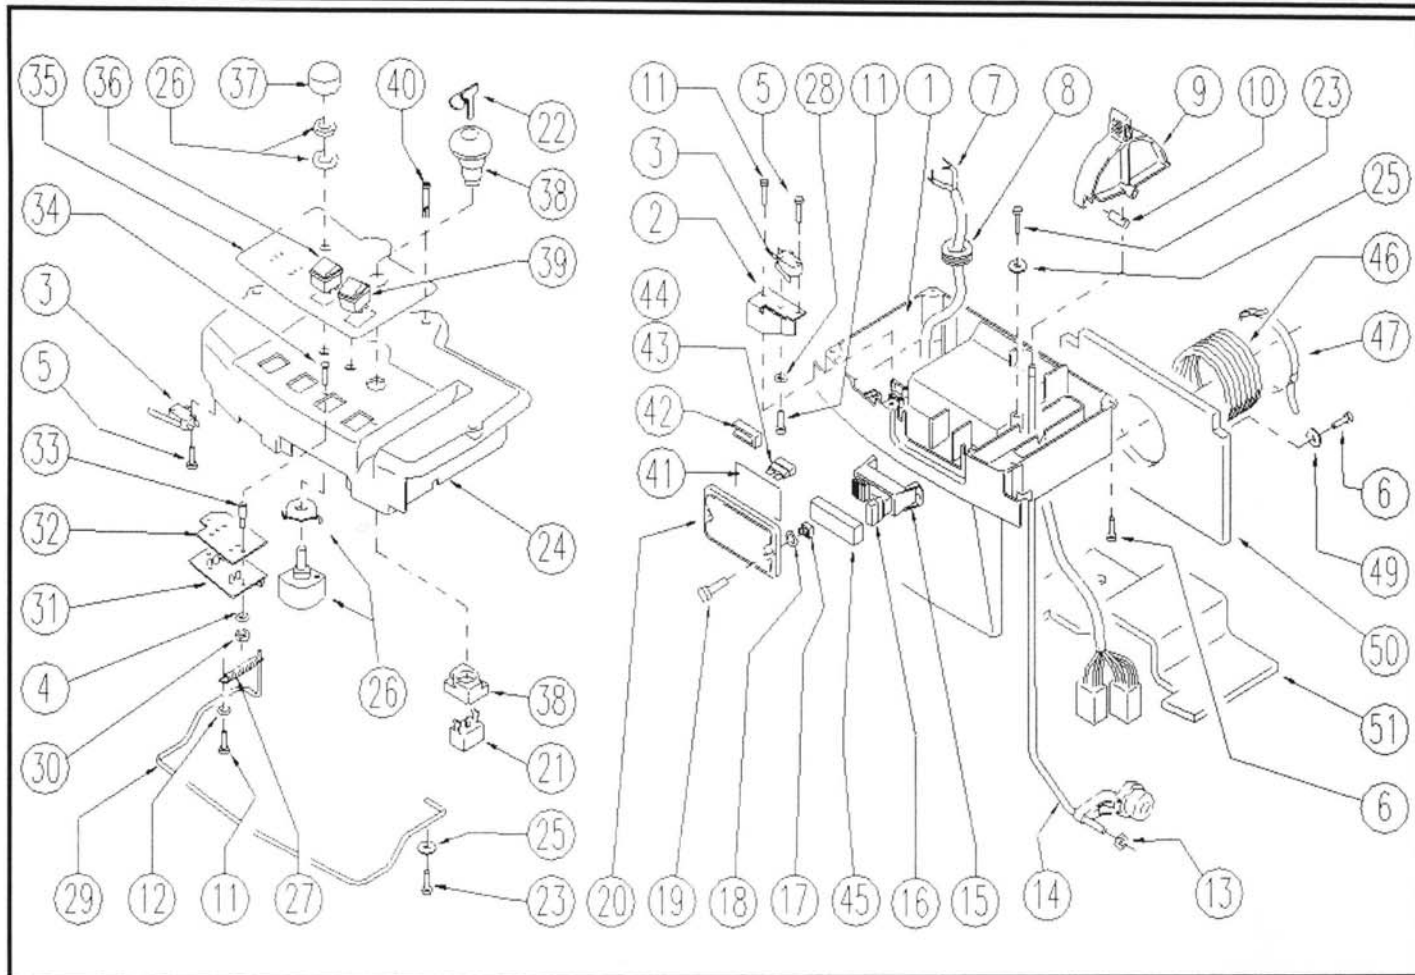


Ref. K	Part N.	Customer Part N.	Description	Qty	Validity:		Price
					From	To	
0001	MPVR03843		PANEL COMANDI INFER.	1,00			--
0002	LAFN05615		SPRING LEVA ANTISCH./SUPP. MICRO	1,00	03/2004		--
0003	MECI00310		MICROSWITCH	3,00	03/2004		--
0004	VTRS00268		WASHER D.3	2,00	03/2004		--
0005	VTVT00744		SCREW	6,00	03/2004		--
0006	VTVT28553		SCREW TCB-TC 3.5X16	6,00	03/2004		--
0007	MECB00773		CABLE PANNELLO COMANDI	1,00			--
0008	MEVR01331		FAIR-LEAD PVC	1,00	03/2004		--
0009	MPVR03845		LEVER REGOLAZ	1,00	03/2004		--
0010	LAFN05103		ARTICULATION SUPERIORE	1,00	03/2004		--
0011	VTVT00820		SCREW TC+ M.3,5-10	5,00	03/2004		--
0012	VTRS15958		WASHER D. 5 X15 UNI 6593	1,00	03/2004		--
0013	VTDD00157		NUT M. 6 DIN 985 ZN	1,00			--
0014	LAFN05645		ROD SUPERIORE RUBINETTO	1,00			--
0015	MEVR01387		BODY SENZA TERMINALI	1,00	03/2004		--
0016	MEVR01132		FUSE A LAMA 5 A.	4,00	03/2004		--
0017	VTDD00167		NUT M 6	2,00	03/2004		--
0018	GUGO00150		NUT	4,00	03/2004		--
0019	VTVT00858		SCREW	2,00	03/2004		--
0020	MPVR35628		COVER LAV	1,00	03/2004		--
0021	MECI00403		CONTACT	1,00			--
0022	CHVR00051		DIASSASS SPANNERPULSANTE FUNGO	1,00			--
0023	VTVT07859		SCREW TCB-TC 3.5X13 UNI6954	2,00			--
0024	MPVR03841		PANEL COMANDI SUPER.	1,00			--
0025	VTRS13750		WASHER D. 5X14 INX	2,00			--
0026	MEVR01432		POTENTIOMETER A FILO	1,00	03/2004		--
0027	MLML00196		SPRING PER GIUNTO HS NADIR	1,00	03/2004		--
0028	VTRS00501		WASHER D. 4 0.232 UNI 6592	1,00	03/2004		--
0029	LAFN05584		LEVER TRAZIONE	1,00	03/2004		--
0030	VTDD21115		NUT M 3 INOX	2,00	03/2004		--
0031	MECE00346		BOARD LED	1,00			--
0032	MPVR02781		PLATE LED	1,00	03/2004		--
0033	LAFN04047		SPACER X SCHEDE M3 15x8x8	2,00	03/2004		--
0034	VTVT00865		SCREW TSP-TC M 3X 6 UNI7688 INX	2,00	03/2004		--
0035	ETET01263		LABEL PANN.COMANDI	1,00	03/2004		--
0036	MECI46638		COMMUTAT SWITCH0 CT 0401/C2	1,00	03/2004		--
0037	MPVR36404		KNOB SPECTROL 635M NE	1,00	03/2004		--
0038	MECI00323		BUTTON FUNGO	1,00			--
0039	MECI00309		SWITCH	1,00	03/2004		--

Table: PANNELLO COMANDI


Progressive Number: 1

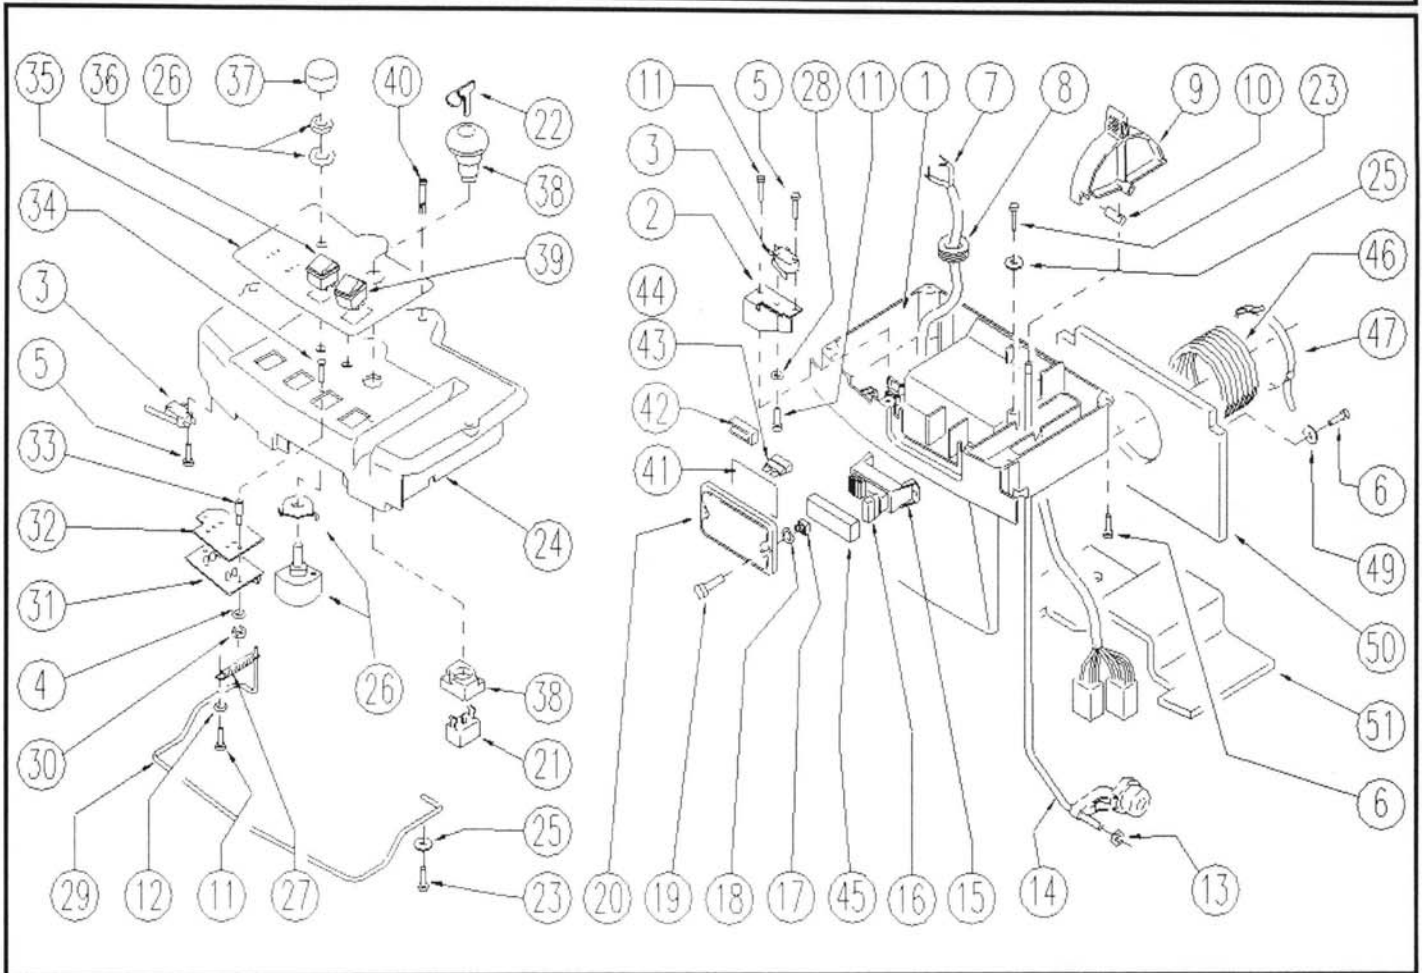


Ref. K	Part N.	Customer Part N.	Description	Qty	Validity:		Price
					From	To	
0040	MPVR02940		KLIP D. 6,5 L=15	1,00	03/2004		--
0041	ETET01328		LABEL AVVERTENZA FUSIBILI	1,00	03/2004		--
0042	MEVR01153		FUSE FUSIBILI	1,00	03/2004		--
0043	MEVR01316		FUSE A LAMA 10 A. 32V	1,00	03/2004		--
0044	MEVR01380		FUSE A LAMA	1,00	03/2004		--
0045	MEVR01383		COVER PVC TRASP.	1,00	03/2004		--
0046	TBBP00225		TUBE D 80-320 MM	1,00			--
0047	FSVR00083		CLAMP 62-82	1,00			--
0049	VTRS00291		WASHER D. 5 X20 ZC UNI 6593	2,00	03/2004		--
0050	ITSO00031		SOUND-PROOFING PARETE POST. PANN.COM SK	1,00	03/2004		--
0051	ITSO00032		SOUND-PROOFING PARETE INFER.PANN.COM SK	1,00	03/2004		--

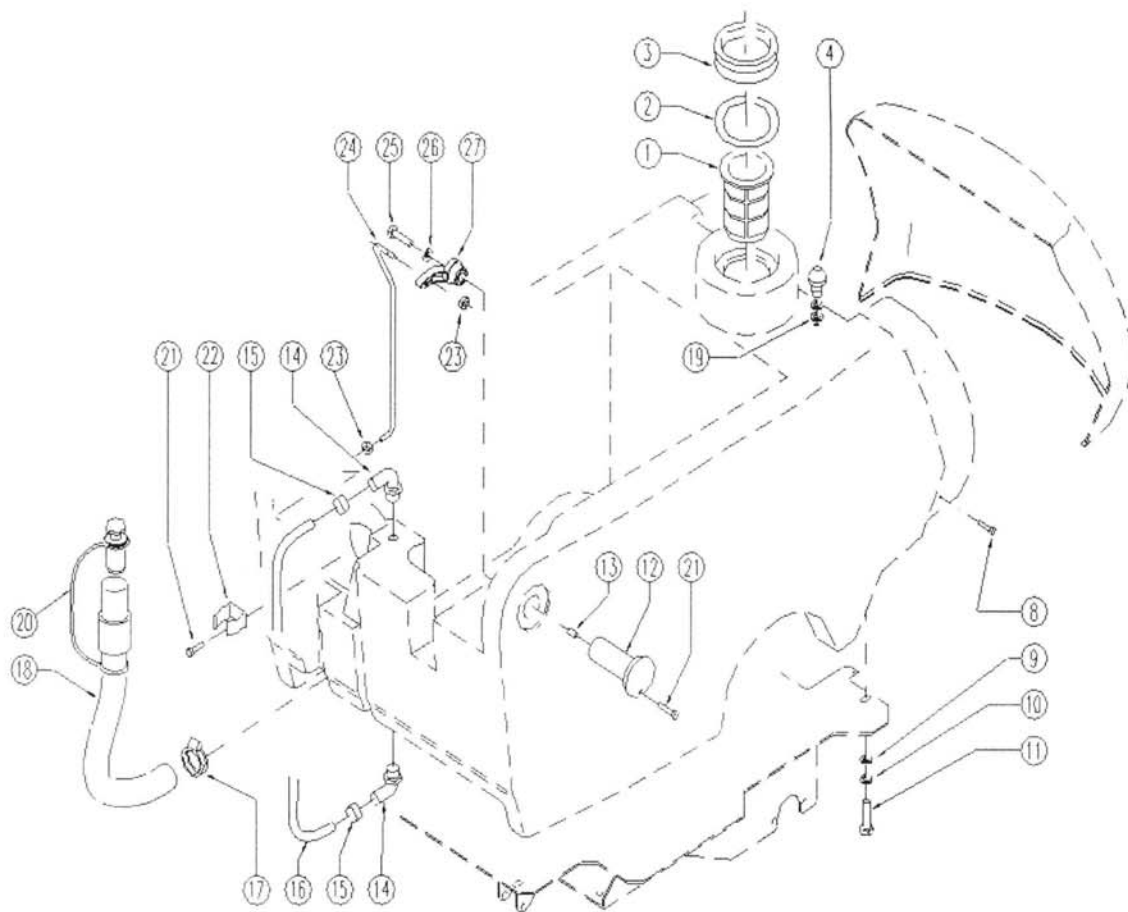


Ref. K	Part N.	Customer Part N.	Description	Qty	Validity:		Price
					From	To	
0001	FTAC48857		FILTER ASP. ACQUA SERB. LAVAP.	1,00	12/2002		--
0002	GUVR48858		GASKET SRB SHK	1,00	12/2002		--
0003	GUVR48859		GASKET SHK	1,00	12/2002		--
0004	LAFN04044		PIN APERTURA SERBATOIO	1,00	12/2002		--
0008	VTVT00874		SCREW TTL INTAGLIO M. 5-10	4,00	12/2002		--
0009	VTRS15524		WASHER D.10	4,00	12/2002		--
0010	VTRS15909		WASHER D.10	4,00	12/2002		--
0011	VTVT00455		SCREW TE 10X20 UNI5739	4,00	12/2002		--
0012	MPVR48695		PIN SHK BK	2,00	12/2002		--
0013	VTVR48693		INSERT M6 D.9	1,00	12/2002		--
0014	RCVR45752		HOSE FITTING "L" 3/8M - D.10 PLS.	2,00	12/2002		--
0015	FSVR00096		CLAMP 10-16 INOX	2,00	12/2002		--
0016	TBBP00202		TUBE D.10 L=420 MM	1,00	12/2002		--
0017	FSVR43136		CLAMP D. 35-40 DF.	1,00	12/2002		--
0018	TBFX00208		TUBE DI SCARICO	1,00	12/2002		--
0019	VTRS15523		WASHER D.10 X21 INOX UNI 6592	2,00			--
0020	MPVR05064		CAP COMPLETO	1,00			--
0021	VTVT48694		SCREW TCB TC 5 X12 UNI 9707 TZ	4,00	12/2002		--
0022	MPVR46988		CLIP LAV. SHK	1,00	12/2002		--
0023	VTDD15518		NUT M 6 INX	2,00	12/2002		--
0024	LAFN05609		ROD INFERIORE RUBINETTO	1,00	12/2002		--
0025	VTVT15906		SCREW TE 6X 12 A2 UNI 5739	1,00	12/2002		--
0026	VTRS00239		WASHER D.6-18	1,00	12/2002		--
0027	MPVR49471		LEVER SHK	1,00	12/2002		--

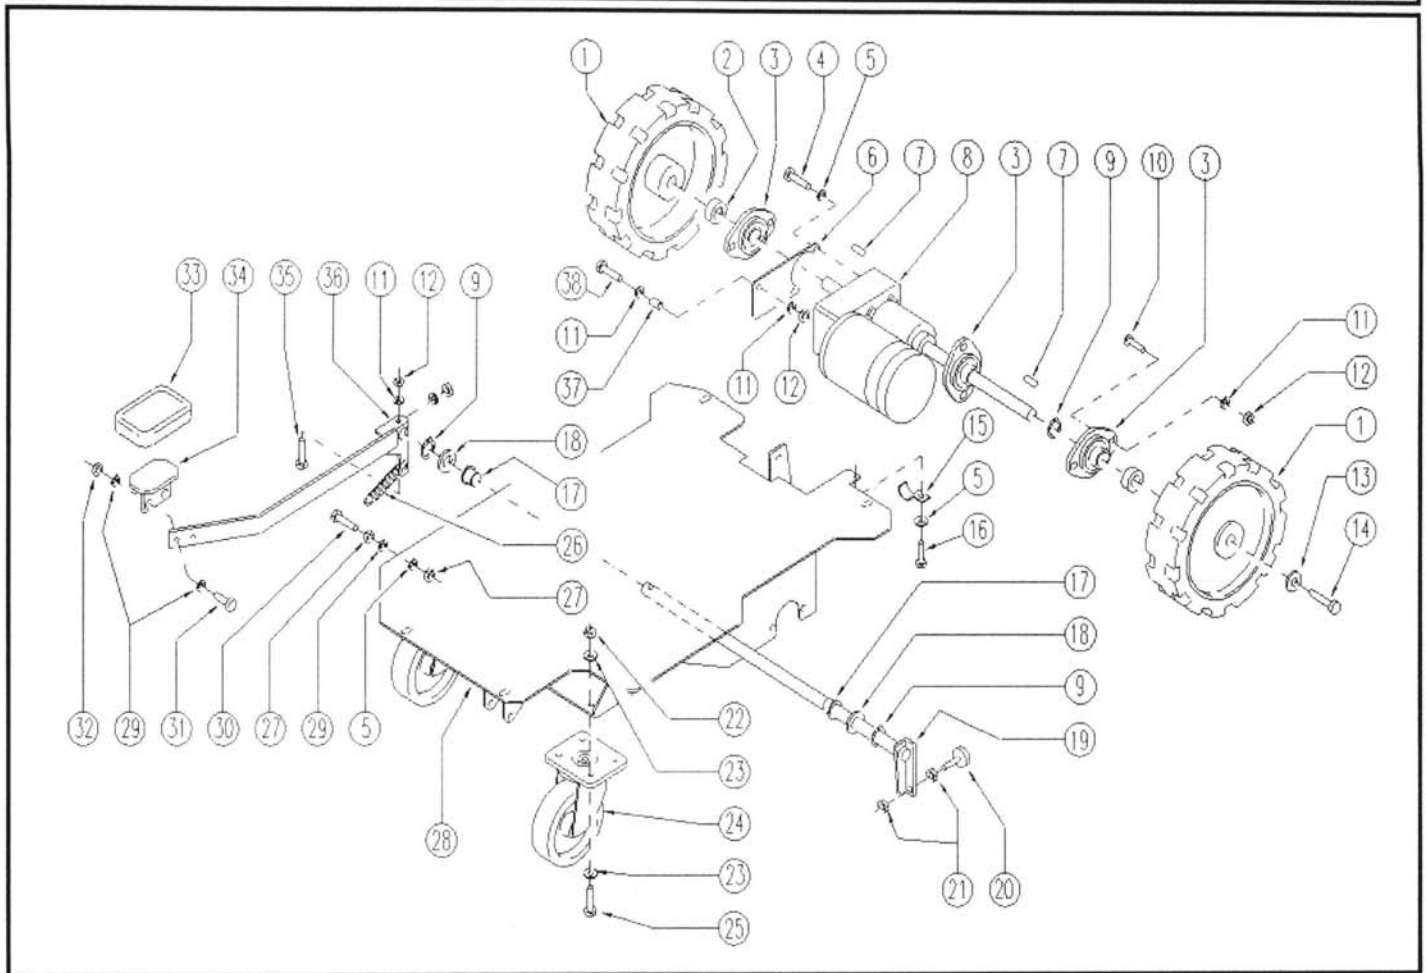


Ref. K	Part N.	Customer Part N.	Description	Qty	Validity:		Price
					From	To	
0001	RTRT00294		WHEEL D 250X60	2.00	12/2002	--	--
0002	LAFN05311		SPACER X CUSCINETTO	2.00	12/2002	--	--
0003	CUVR00105		SUPPORT	3.00	12/2002	--	--
0004	VTVT15143		SCREW TE 6X16 UNI5739	2.00	12/2002	--	--
0005	VTRS15144		WASHER D. 6 INX GRW UNI 1751	4.00	12/2002	--	--
0006	LAFN05617		PLATE FISSAGGIO MOTORE TRAZIONE	1.00	12/2002	--	--
0007	VTVR33668		KEY 6x 6x40 UNI 6604A	2.00	12/2002	--	--
0008	MOCC00235		MOTOR GEARBOX TRAZIONE CABLATO	1.00	12/2002	--	--
0009	VTAE00050		RING D'ARRESTO ALBERO	3.00	12/2002	--	--
0010	VTVT00842		SCREW	6.00	12/2002	--	--
0011	VTRS13947		WASHER D. 8 INX UNI 6592	9.00	12/2002	--	--
0012	VTDD01695		NUT M 8 INX	7.00		--	--
0013	VTRS00278		WASHER D.8X32 ZINC.BIANCA 6593	2.00		--	--
0014	VTVT00779		SCREW TBEI M.8-16	2.00	12/2002	--	--
0015	FSVR00104		CLAMP XTUBO RIGIDO	1.00	12/2002	--	--
0016	VTVT15906		SCREW TE 6X 12 A2 UNI 5739	1.00	12/2002	--	--
0017	CUVR44348		BUSHING CB 85 2010 31T	2.00	12/2002	--	--
0018	VTRS00287		WASHER D20 ZINCATA BIA UNI 6592	2.00	12/2002	--	--
0019	LAFN05840		AXLE FRENO	1.00	06/2003	--	--
0020	MPVR04162		CAP FRENO	2.00	12/2002	--	--
0021	VTDD15521		NUT M 8 INX A2 UNI 5588	4.00	12/2002	--	--
0022	VTDD00042		NUT AUT M10 UNI7474	8.00	12/2002	--	--
0023	VTRS00236		WASHER D.10 UNI 6592 ZINC. PIANA	16.00	12/2002	--	--
0024	RTRT49041		TURNING WHEEL D.125 BNDT	2.00	12/2002	--	--
0025	VTVT03640		SCREW TE 10X25 UNI5740	8.00	12/2002	--	--
0026	MLML00147		SPRING	1.00	12/2002	--	--
0027	VTDD15520		NUT M 6 A2 UNI 5588 INX	2.00	12/2002	--	--
0028	LAFN05592		FRAME PANTHER	1.00	12/2002	--	--
0029	VTRS00245		WASHER D 6 UNI 6592 INOX	5.00	12/2002	--	--
0030	VTVT00701		SCREW TE M 6-30	1.00	12/2002	--	--
0031	VTVT13939		SCREW TE 6X20 UNI5739 INX	2.00	12/2002	--	--
0032	VTDD01694		NUT M 6 INX	2.00		--	--
0033	MPVR35598		RUBBER B-BT	1.00	12/2002	--	--
0034	LAFN35599		BRAKE PEDAL LAV. BT	1.00	12/2002	--	--
0035	VTVT00708		SCREW TE M. 8-40	1.00	06/2003	--	--
0036	LAFN05841		LEVER FRENO	1.00	06/2003	--	--
0037	LAFN03913		BUSHING LEVA COFANO	1.00	12/2002	--	--
0038	VTVT13937		SCREW TE M 8X 30 INX UNI 5739	1.00	12/2002	--	--

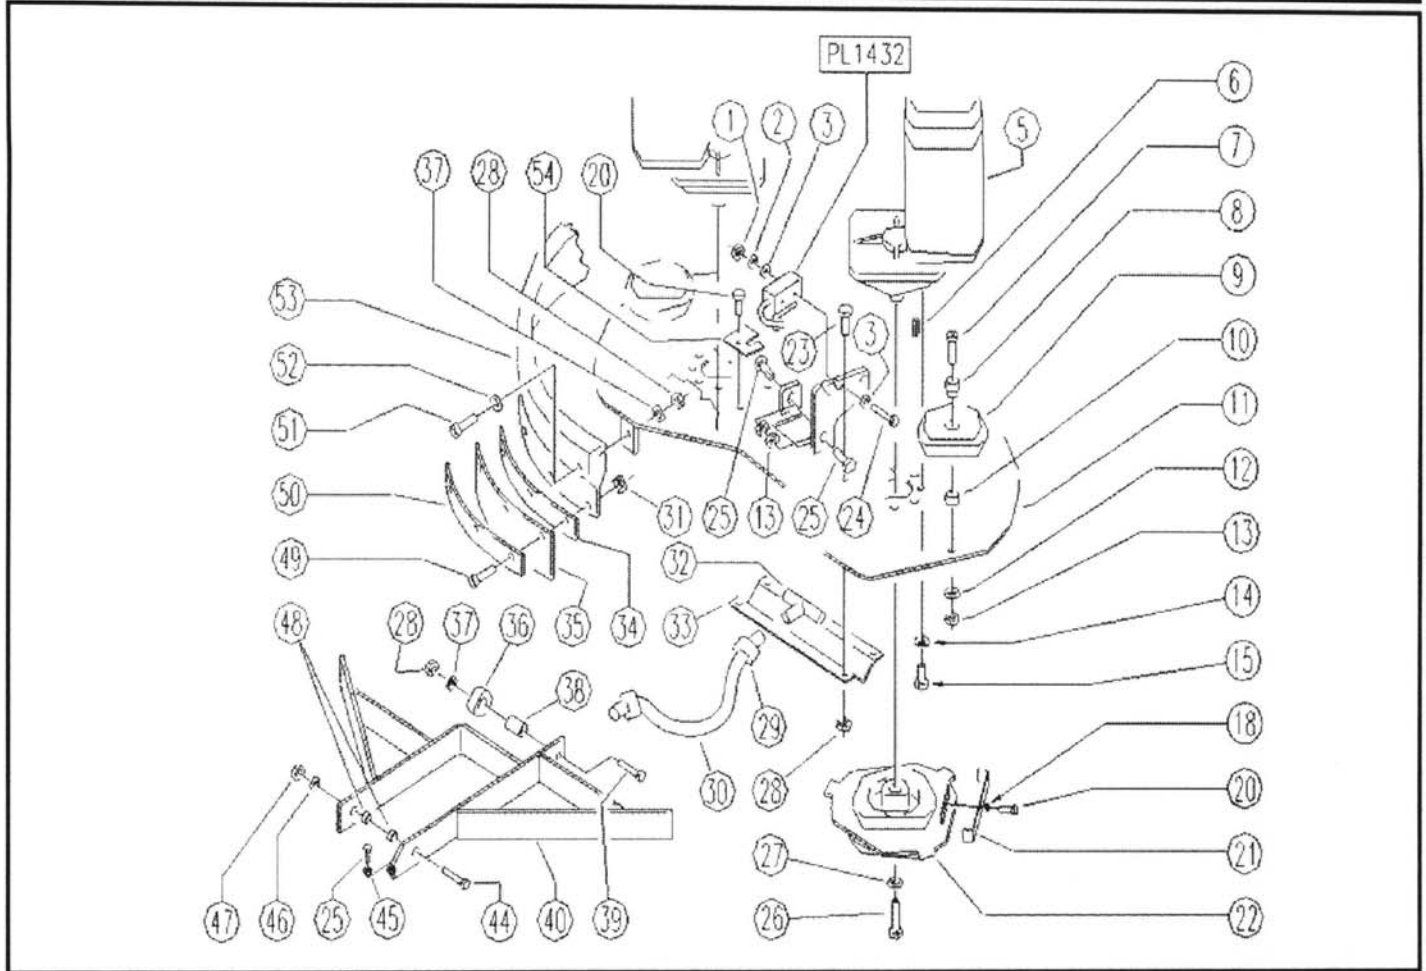


Ref. K	Part N.	Customer Part N.	Description	Qty	Validity:		Price
					From	To	
0001	VTDD15925		NUT M 4 INX	2,00	12/2002		--
0002	VTRS15913		WASHER D. 4 GROVER A2 UNI1751	2,00			--
0003	VTRS00251		WASHER 4-16 INOX A2	4,00	12/2002		--
0005	MOCC00236		MOTOR SPAZZOLE	2,00	12/2002		--
0006	VTVR21944		KEY 6X6X30	2,00	12/2002		--
0007	VTVT00775		SCREW TCEI M 8X40 ZC.BK UNI5931	2,00	09/2006		--
0007	VTVT63038		SCREW TCEI M8X45 BR	2,00	12/2002	09/2006	--
0008	LAFN03915		BUSHING NUOVO RUOTINO STRONG	2,00	12/2002		--
0009	RTRT43370		CASTER D 100 2V.	2,00	12/2002		--
0010	LAFN03825		SPACER ATTUATORE ALZA-TESTATA	2,00	12/2002		--
0011	LAFN05610		PLATE TESTATA	1,00	12/2002		--
0012	VTRS13947		WASHER D 8 INX UNI 6592	2,00	12/2002		--
0013	VTDD01695		NUT M 8 INX	4,00	02/2003		--
0014	VTRS15144		WASHER D. 6 INX GRW UNI 1751	14,00	12/2002		--
0015	VTVT15906		SCREW TE 6X 12 A2 UNI 5739	14,00	12/2002		--
0018	VTRS15913		WASHER D. 4 GROVER A2 UNI1751	2,00	06/2003		--
0020	VTVT21887		SCREW TCB-TC 4X10 8112	3,00	12/2002		--
0021	MLML00230		SPRING ANTISGANCIO 70 X FLANGIA	2,00	12/2002		--
0022	MFVR00133		FLANGE TRASC. SPAZZOLA	2,00			--
0023	VTVT00787		SCREW TBEI M 6-16	4,00	12/2002		--
0024	VTVT20824		SCREW TE M 4X 40 UNI 5739 ZC	2,00	12/2002		--
0025	VTVT15907		SCREW TE 8X25 UNI5739 INX	3,00	06/2003		--
0026	VTVT00179		SCREW TSPEI M 8X30	3,00	05/2003		--
0027	VTRS00289		WASHER D.10.5-40	2,00	12/2002		--
0028	VTDD15518		NUT M 6 INX	10,00	12/2002		--
0029	FSVR00091		CLAMP 14-24	2,00			--
0030	TBBP00362		TUBE	1,00			--
0031	VTDD00175		NUT M.6 TONDO FILET.4 PUNTE	6,00	12/2002		--
0032	RCVR00483		CONNECTOR 3 VIE	1,00	12/2002		--
0033	LAFN05642		DISTRIBUTOR ACQUA TESTATA 71	1,00	12/2002		--
0034	MPVR02815		THICKNESS X FLAP	2,00	12/2002		--
0035	MPVR02786		FLAP TESTATA	2,00	12/2002		--
0036	RTRT49413		WHEEL D. 60-D 15 X36 NYL.	1,00	12/2002		--
0037	VTRS00245		WASHER D 6 UNI 6592 INOX	6,00	12/2002		--
0038	LAFN04041		SPACER D6/15	1,00	12/2002		--
0039	VTVT00655		SCREW TE M. 6-55	1,00	12/2002		--
0040	LAFN05654		BRACKET CENTRAGGIO SPAZZOLE 70	1,00	12/2002		--
0044	VTVT00868		SCREW TE M12-140	1,00	12/2002		--
0045	VTDD15521		NUT M 8 INX A2 UNI 5588	1,00	06/2003		--

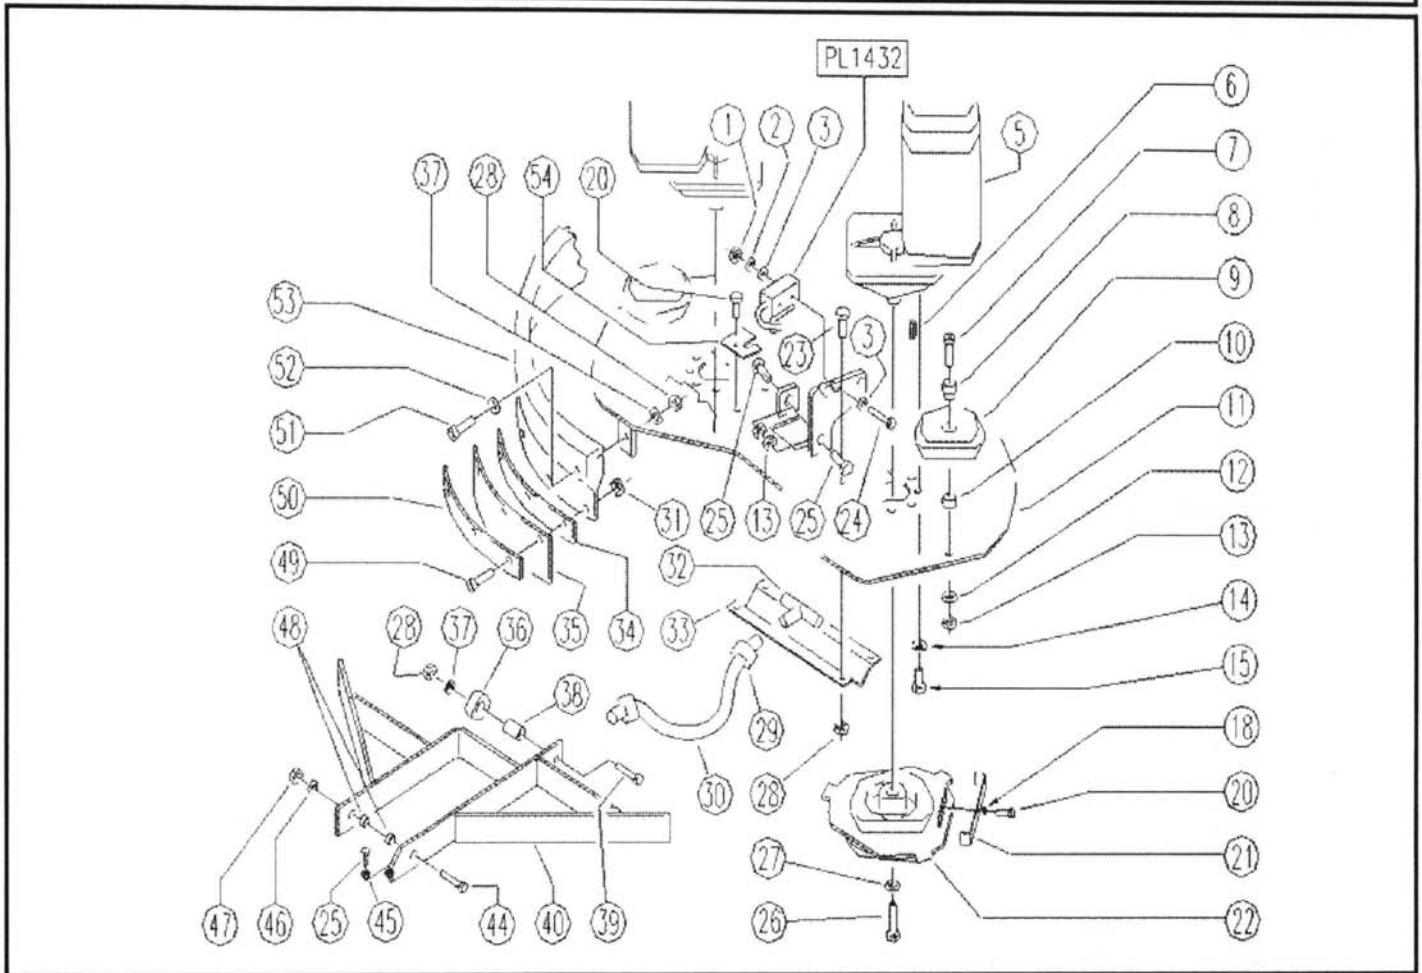


Ref. K	Part N.	Customer Part N.	Description	Qty	Validity:		Price
					From	To	
0046	VTRS00232		WASHER D.12 UNI 6592 ZINC.	1,00	12/2002		--
0047	VTDD00131		NUT M.12 AUT. DIN 982 ZINC	1,00	12/2002		--
0048	LAFN03721		BUSHING PEDALIERA	2,00	12/2002		--
0049	VTVT00858		SCREW	6,00	12/2002		--
0050	MPVR02792		FLAP PRESS NYLON NERO SP2	2,00	12/2002		--
0051	VTVT00818		SCREW TBEI 6X35	5,00	12/2002		--
0052	VTRS13945		WASHER D. 6X18 INX UNI 6593	5,00	12/2002		--
0053	MPVR02772		BUMPER TESTATA 71	1,00			--
0054	LAFN05671		PLATE RESCA TESTATA	1,00	12/2002		--

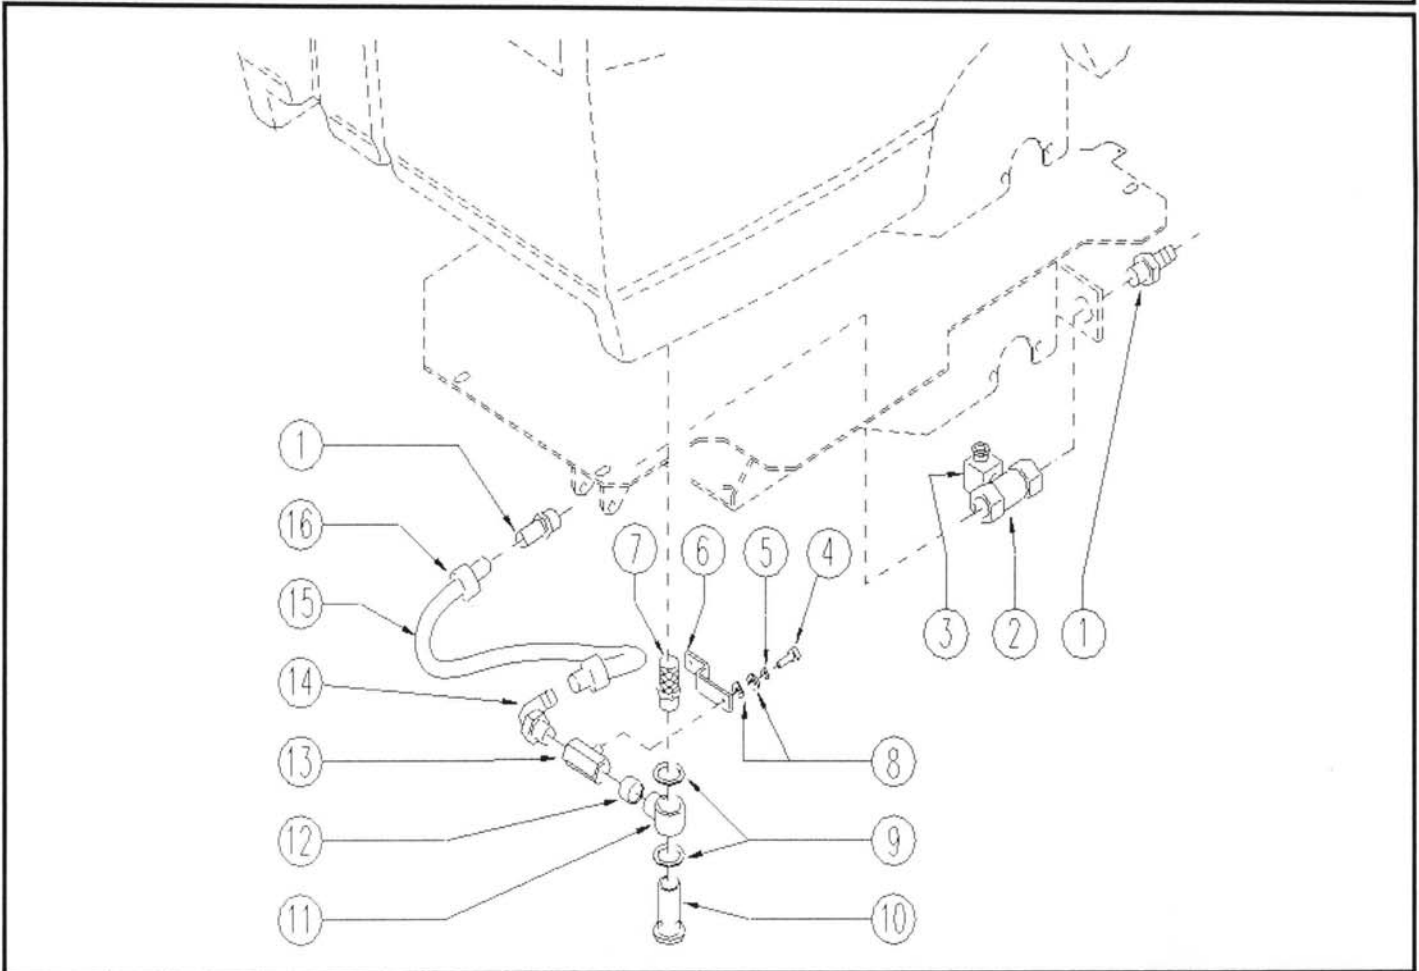


Ref. K	Part N.	Customer Part N.	Description	Qty	Validity:		Price
					From	To	
0001	RCVR00535		CONNECTOR 3/4" M RESCA	2,00	12/2002		--
0002	MEEV00015		SOLENOID VALVE	1,00	12/2002		--
0003	MEVR01155		CONNECTOR ELETTOVALVOLA	1,00	12/2002		--
0004	VTVT00834		SCREW TC+ M.3-6	1,00	12/2002		--
0005	VTRS00251		WASHER 4-16 INOX A2	1,00	12/2002		--
0006	LAFN05724		LEVER RUBINETTO	1,00	12/2002		--
0007	FTAC00036		FILTER IN RETE	1,00	12/2002		--
0008	VTRS13947		WASHER D 8 INX UNI 6592	2,00	12/2002		--
0009	GUVR00213		WASHER GOMMA	2,00	12/2002		--
0010	RCDS49623		SCREW G 1/2 L=41,5	1,00	12/2002		--
0011	RCDS49622		CONNECTOR OCC 1/2 - 1/2M	1,00	12/2002		--
0012	MPVR02862		COVER FISSAG SERB.	1,00	12/2002		--
0013	RCGR00065		TAP F/F 1/2"	1,00	12/2002		--
0014	RCVR00537		CONNECTOR MASCH G1/2 RESCA	1,00	12/2002		--
0015	TBBP00322		TUBE	1,00	12/2002		--
0016	FVSR00091		CLAMP 14-24	2,00	12/2002		--

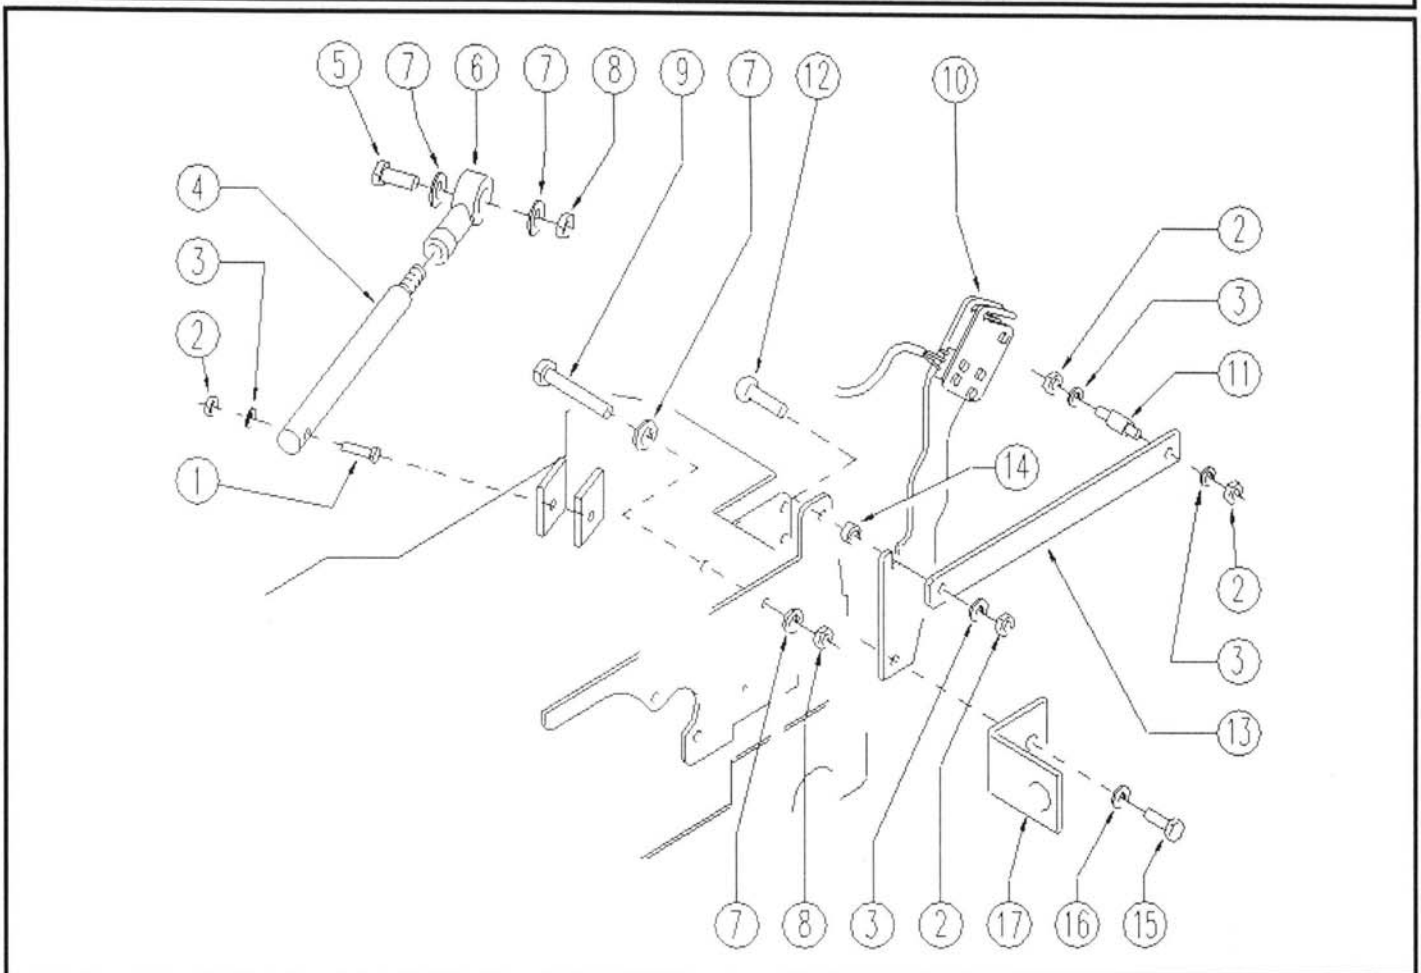


Ref. K	Part N.	Customer Part N.	Description	Qty	Validity:		Price
					From	To	
0001	VTVT15371		SCREW TE M 8X45 INOX A2 UNI	1,00	12/2002	--	--
0002	VTDD01695		NUT M 8 INX	4,00	12/2002	--	--
0003	VTRS13947		WASHER D. 8 INX UNI 6592	4,00	04/2003	--	--
0004	LAFN05600		LEVER LATERALE	1,00	12/2002	--	--
0005	VTVT00467		SCREW TE M 12X45 ZINC. UNI 5737	1,00	12/2002	--	--
0006	VTVR00267		ARTICULATION SFERICO D.12	1,00	12/2002	--	--
0007	VTRS00232		WASHER D.12 UNI 6592 ZINC.	4,00	12/2002	--	--
0008	VTDD00131		NUT M 12 AUT. DIN 982 ZINC	2,00	12/2002	--	--
0009	VTVT00285		SCREW TE M12X110	1,00	12/2002	--	--
0010	MECB00504		GROUP CABLAGGIO	1,00		--	--
0011	LAFN04113		PIN LEVA SUPERIORE	1,00	02/2003	--	--
0012	VTVT00781		SCREW TSPEI M 8-25	1,00	04/2003	--	--
0013	LAFN05604		LEVER SUPERIORE	1,00	12/2002	--	--
0014	RCDS35584		BUSHING D. 8X12X 4.3	1,00	12/2002	--	--
0015	VTVT13938		SCREW TE 8X20 UNI5739 INX	1,00	12/2002	--	--
0016	VTRS01080		WASHER D. 8 GRW	1,00	12/2002	--	--
0017	LAFN05643		BRACKET ELETTROVALVOLA	1,00	12/2002	--	--

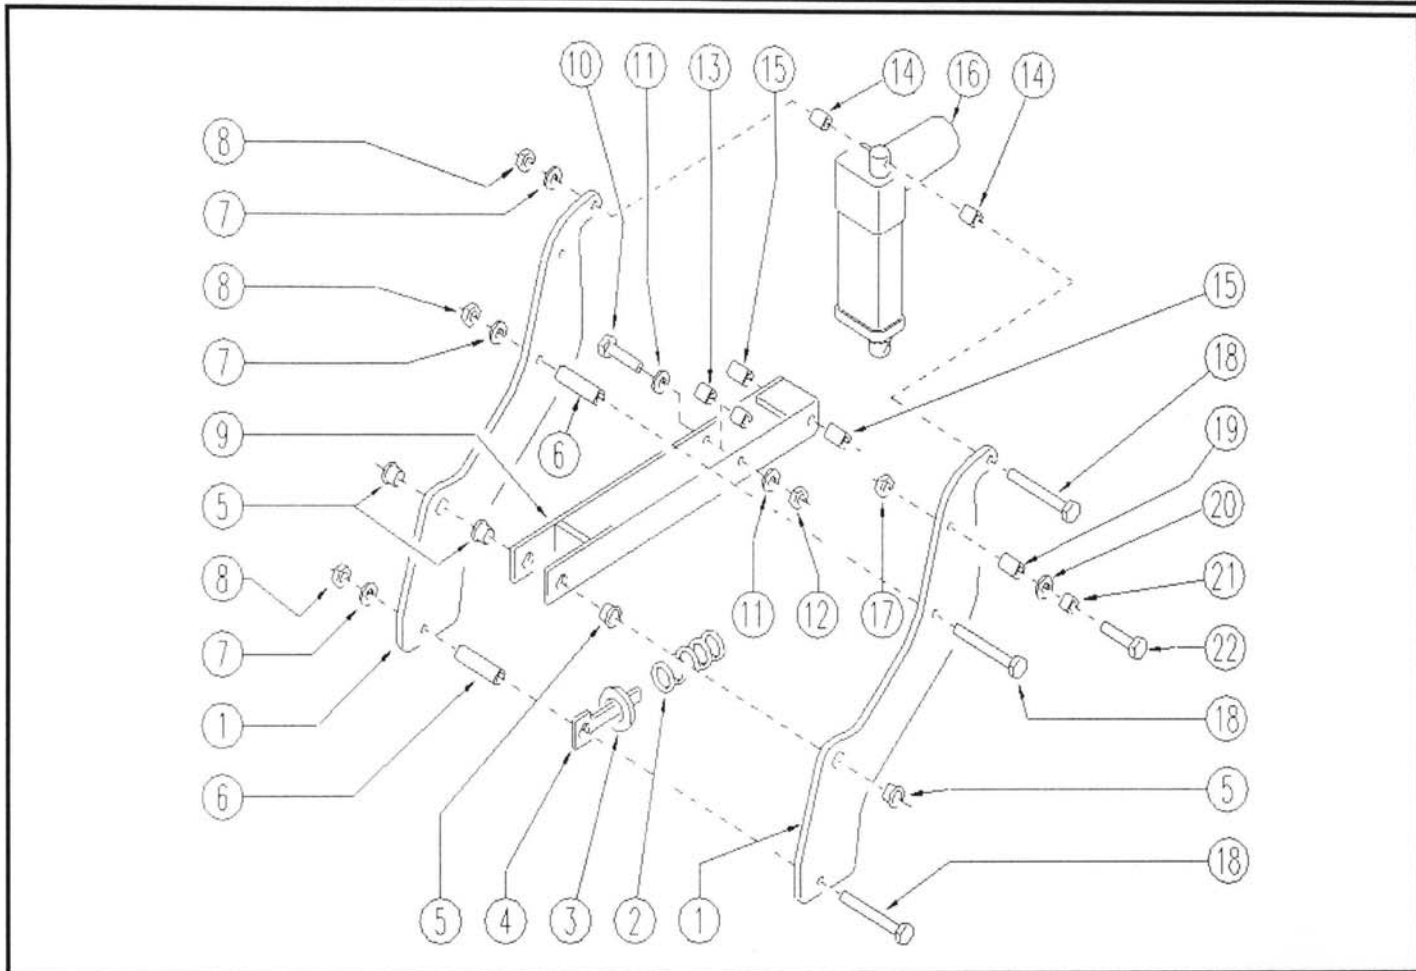


Ref. K	Part N.	Customer Part N.	Description	Qty	Validity:		Price
					From	To	
0001	LAFN05593		BRACKET	2,00	12/2002	--	--
0002	MLML00227		SPRING DI COMPRESS.	1,00	12/2002	--	--
0003	VTRS00250		WASHER D.14	1,00	12/2002	--	--
0004	LAFN05594		SPRING GUIDE	1,00	12/2002	--	--
0005	CUVR00130		BEARING STRISCIAMENTO	4,00	12/2002	--	--
0006	LAFN04043		SPACER D8.5-15	2,00	12/2002	--	--
0007	VTRS13947		WASHER D.8 INX UNI 6592	3,00	12/2002	--	--
0008	VTDD01695		NUT M 8 INX	3,00	12/2002	--	--
0009	LAFN05605		ARM	1,00	12/2002	--	--
0010	VTVT00867		SCREW	1,00	12/2002	--	--
0011	VTRS00245		WASHER D.6 UNI 6592 INOX	3,00	12/2002	--	--
0012	VTDD15518		NUT M 6 INX	1,00	12/2002	--	--
0013	LAFN03840		BUSHING	2,00	12/2002	--	--
0014	LAFN04042		SPACER D8.5-15	2,00	12/2002	--	--
0015	RCDS34717		BUSHING D. 9X12X 8.3	2,00	12/2002	--	--
0016	MOCC00226		ATUATOR ALI 1 100MM CABLATO	1,00	12/2002	--	--
0017	VTDD01694		NUT M 6 INX	1,00	12/2002	--	--
0018	VTVT00734		SCREW TE M. 8-80	3,00	12/2002	--	--
0019	LAFN04187		SPACER PER RIDUTTORE	1,00	12/2002	--	--
0020	VTRS13945		WASHER D. 6X18 INX UNI 6593	1,00	12/2002	--	--
0021	LAFN03742		SPACER SILENZIATORE	1,00	12/2002	--	--
0022	VTVT15145		SCREW TE 6X40 UNI5739 INX	1,00	12/2002	--	--

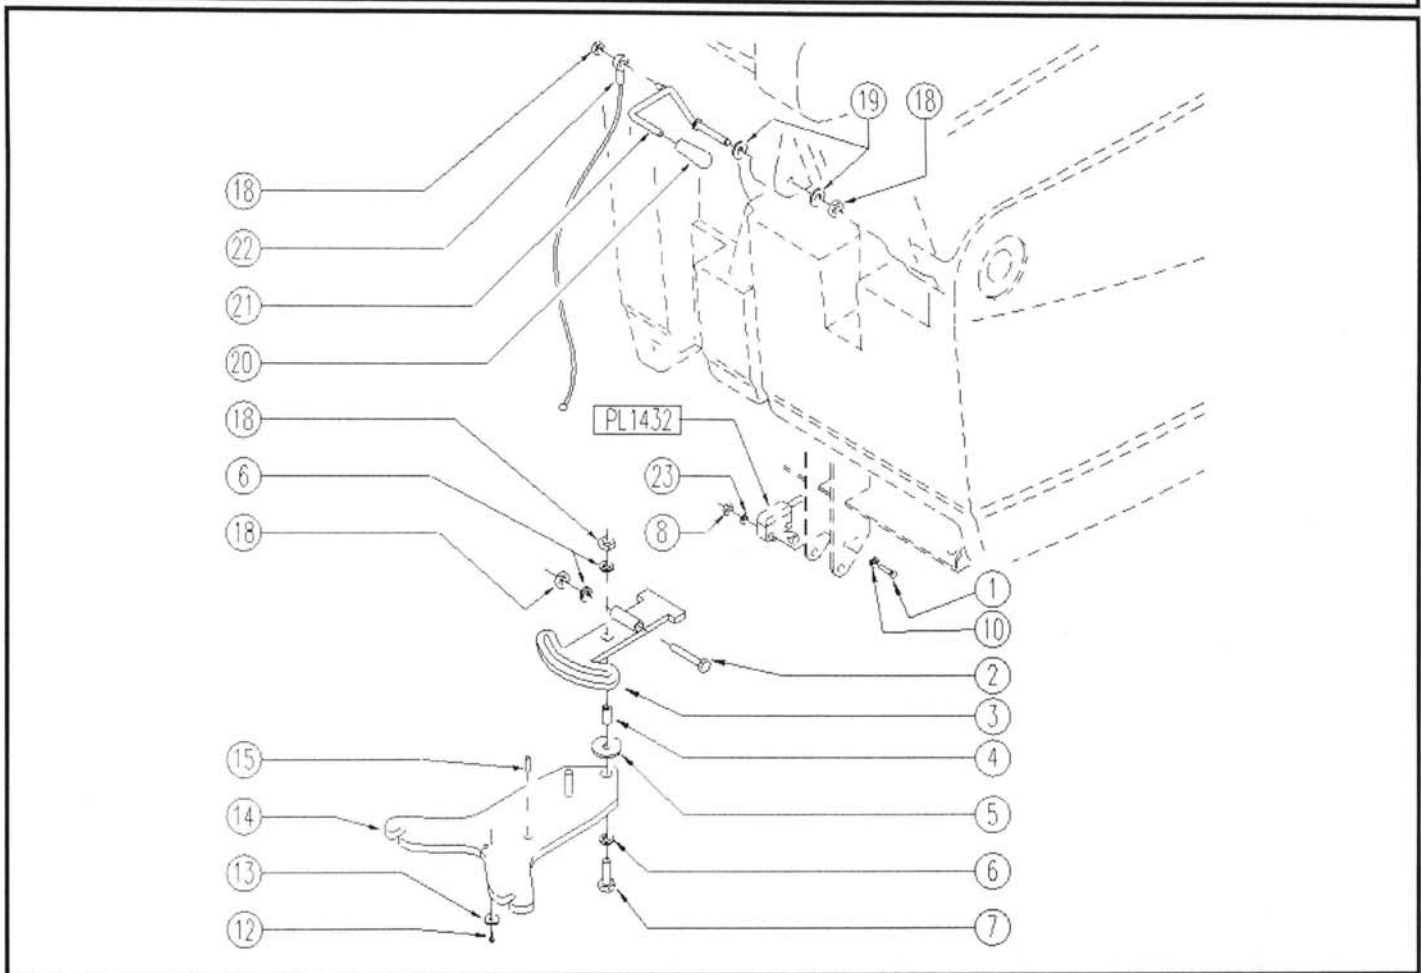


Ref. K	Part N.	Customer Part N.	Description	Qty	Validity:		Price
					From	To	
0001	VTVT00732		SCREW	2.00	12/2002	--	--
0002	VTVT00757		SCREW	1.00	12/2002	--	--
0003	LAFN05599		SUPPORT	1.00	12/2002	--	--
0004	LAFN03957		BUSHING RUOTINO	1.00	12/2002	--	--
0005	VTRS43258		WASHER D.13X24 X2.5 NYL UNI6592	1.00	12/2002	--	--
0006	VTRS13947		WASHER D.8 INX UNI 6592	3.00	12/2002	--	--
0007	VTVT00410		SCREW TE M8x35 UNI5739 INOX	1.00	12/2002	--	--
0008	VTDD15925		NUT M 4 INX	2.00	12/2002	--	--
0010	VTRS00501		WASHER D.4 0.232 UNI 6592	2.00	12/2002	--	--
0012	VTVT21887		SCREW TCB-TC 4X10 8112	1.00	12/2002	--	--
0013	VTRS00291		WASHER D.5 X20 ZC UNI 6593	1.00	12/2002	--	--
0014	LAFN05631		PLATE	1.00	12/2002	--	--
0015	VTVT01200		GRUB SCREW M8 X 16 INOX	1.00	04/2004	--	--
0018	VTDD01695		NUT M 8 INX	3.00	12/2002	--	--
0019	VTRS13946		WASHER D.8 X24 INX UNI 6593	2.00	12/2002	--	--
0020	VTVR49226		HANDWHEEL F M10 D.82	1.00	12/2002	--	--
0021	LAFN49035		LEVER LAV. SHK	1.00	12/2002	--	--
0022	CMCV00305		CABLE SOLLEVAMENTO	1.00	12/2002	--	--
0023	VTRS15913		WASHER D.4 GROVER A2 UNI1751	2.00	12/2002	--	--

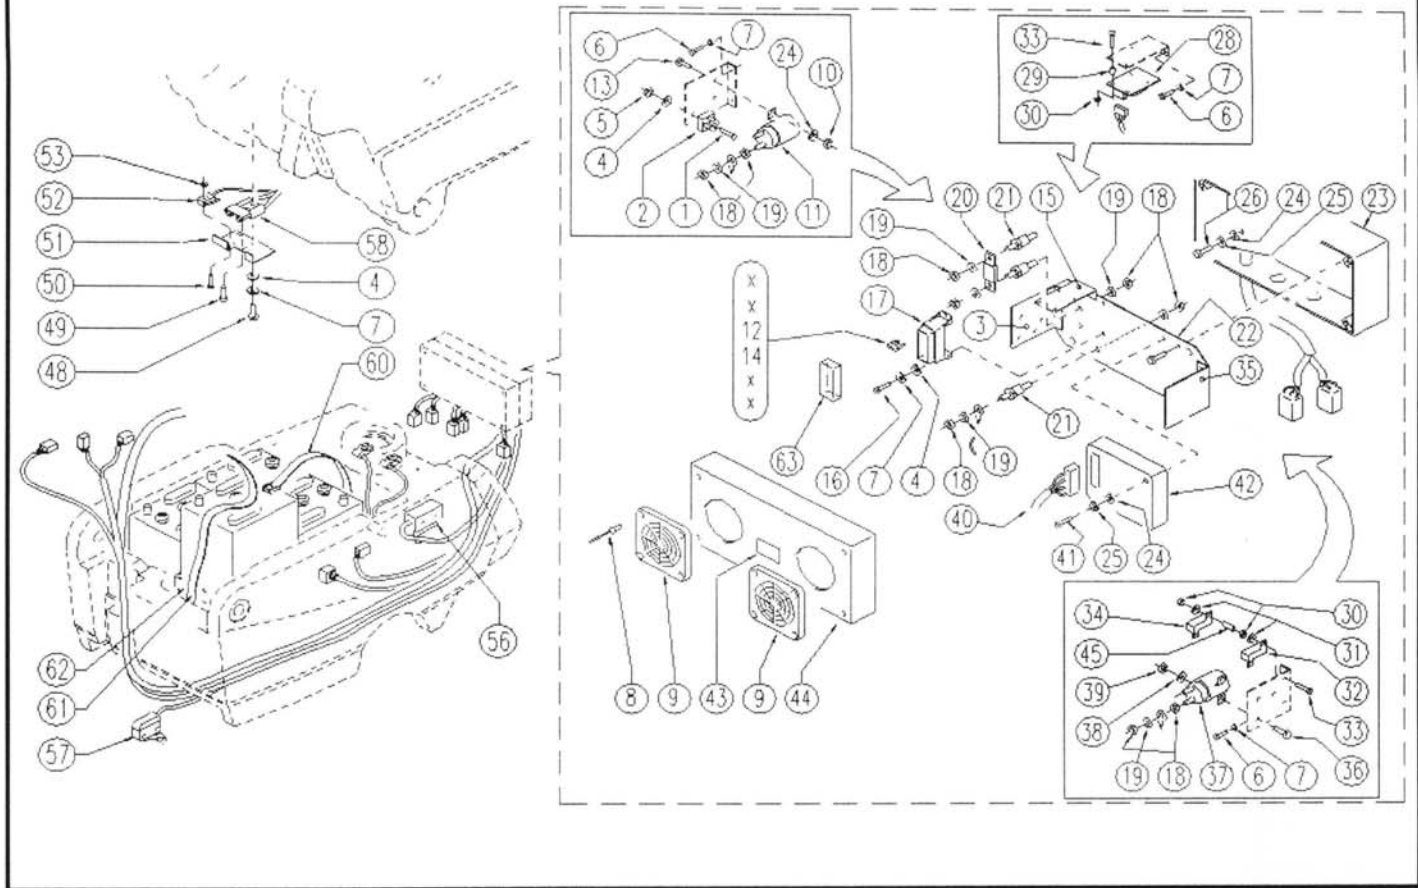


Ref. K	Part N.	Customer Part N.	Description	Qty	Validity:		Price
					From	To	
0001	VTVT00704		SCREW TE M 4X 16 UNI5739 INOX	1,00			--
0002	MECE35767		RECTIFIER LAV. E 450	1,00	12/2002		--
0003	LAFN05613		BRACKET PONTE DIODI	1,00	12/2002		--
0004	VTRS00501		WASHER D. 4 0.232 UNI 6592	10,00	12/2002		--
0005	VTDD04369		NUT M 4 TEF UNI 7473	2,00	12/2002		--
0006	VTVT00754		SCREW TC+ M 4-10	4,00	12/2002		--
0007	VTRS15913		WASHER D. 4 GROVER A2 UNI1751	6,00	12/2002		--
0008	VTVR00238		RIVET 4-10 ALLUMINIO	8,00	12/2002		--
0009	MPVR02797		BRACKET SALVADITA	2,00	12/2002		--
0010	VTDD15517		NUT M 5 INX	2,00			--
0011	METT30650		CONTACTOR 24 V	1,00	12/2002		--
0012	MEVR01380		FUSE A LAMA	1,00	12/2002		--
0013	VTVT34115		SCREW TE M 5X 10 UNI 5739	2,00	12/2002		--
0014	MEVR01316		FUSE A LAMA 10 A. 32V	1,00	12/2002		--
0016	VTVT00725		SCREW TC+ M 4-12	2,00	12/2002		--
0017	MEVR01386		FUSE CARRIER LAMA 6 POSTI	1,00			--
0018	VTDD10776		NUT M 8 X1 UNI 5588	18,00	12/2002		--
0019	VTRS01080		WASHER D. 8 GRW	14,00	12/2002		--
0020	MEVR01346		FUSE 125 A	1,00	12/2002		--
0021	MEVR01116		SUPPORT FUSIBILE 120 A	3,00	12/2002		--
0022	LAFN05612		PLATE ELETTRICA	1,00	12/2002		--
0023	MEVR01556		BOX BASE	1,00			--
0024	VTRS00516		WASHER D. 5 INX	6,00	12/2002		--
0025	VTRS15908		WASHER D. 5 INX GRW UNI 1751	4,00	12/2002		--
0026	VTVT48694		SCREW TCB TC 5 X12 UNI 9707 TZ	4,00			--
0027	VTVT00820		SCREW TC+ M 3,5-10	4,00	12/2002		--
0028	MECE00396		BOARD DI AUTORITENUTA	1,00			--
0030	VTDD21115		NUT M 3 INOX	4,00	12/2002		--
0031	VTRS00268		WASHER D.3	4,00			--
0032	MECE00391		RESISTANCE CORAZZATA	1,00	12/2002		--
0033	VTVT00722		SCREW	2,00	12/2002		--
0034	MECE00369		RESISTANCE CORAZZATA 10 OHM 50 WATT	1,00	12/2002		--
0035	LAFN05614		BRACKET RESISTENZE	1,00	12/2002		--
0036	VTVT01109		SCREW TE M 6X 10 ZC. UNI 5739	2,00	12/2002		--
0037	METT00056		CONTACTOR T-106	1,00	12/2002		--
0038	VTRS00231		WASHER D. 6 UNI 6592 PIANA ZINC.	2,00	12/2002		--
0039	VTDD00157		NUT M. 6 DIN 985 ZN	2,00			--
0040	MEC100277		CONNECTOR	1,00	11/2003		--
0041	VTVT62948		SCREW M 4X 50 TC-CR ZC U 7687	2,00	12/2002		--

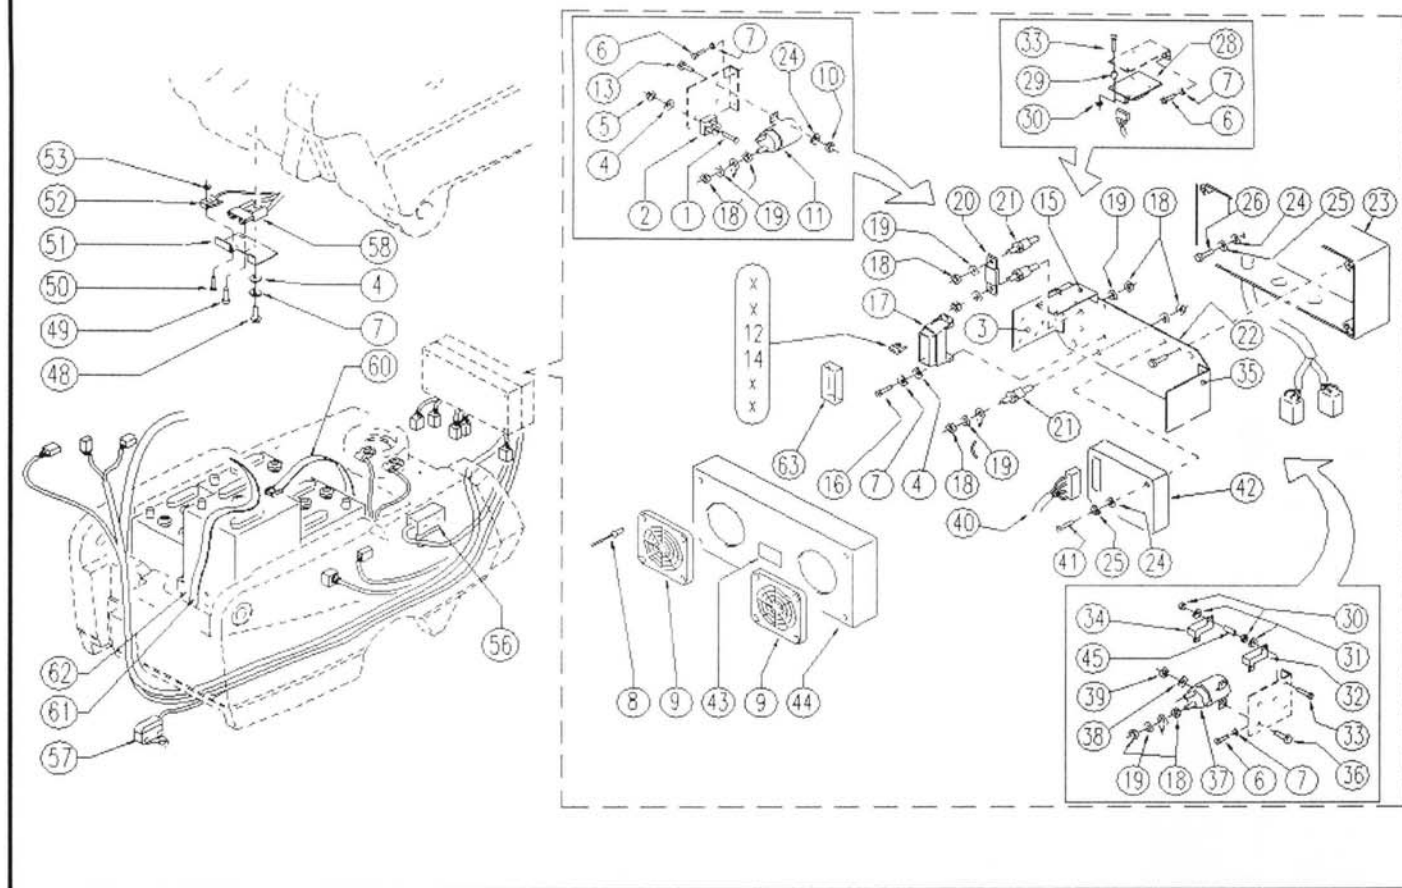


Ref. K	Part N.	Customer Part N.	Description	Qty	Validity:		Price
					From	To	
0042	MECE00336		GEARCASE TRAZ 24V	1,00	12/2002	--	--
0043	ETET00763		LABEL SIMBOLO FUSIBILI	1,00	12/2002	--	--
0044	MEVR01339		COVER SCATOLA MOD.150	1,00		--	--
0045	LAFN04047		SPACER X SCHEDE M3 15x8x8	2,00	12/2002	--	--
0048	VTVT00814		SCREW TE M 4-25	2,00	06/2004	--	--
0049	VTVT00872		SCREW TSP+ 2.9X13 AUTOFIL. INOX	1,00	12/2002	--	--
0050	VTVT00671		SCREW TC- M 2-16 OTTONE	2,00	12/2002	--	--
0051	LAFN05653		SUPPORT MICRO	1,00	12/2002	--	--
0052	MECI00334		MICROSWITCH V4	1,00	12/2002	--	--
0053	VTDD08634		NUT	2,00	12/2002	--	--
0056	MECI00199		MICROSWITCH CABLATO	1,00	12/2002	--	--
0058	MEVR01079		CONNECTOR CARICABATT.ROSSO	1,00	12/2002	--	--
0060	MPVR02994		BELT BATTERIA CON FIBIA	2,00	12/2002	--	--
0061	MPVR02995		BELT BATTERIA SENZA FIBIA	2,00	12/2002	--	--
0062	MPVR04042		PLATE BATTERIA	4,00	12/2002	--	--
0063	MEVR01383		COVER PVC TRASP.	1,00		--	--

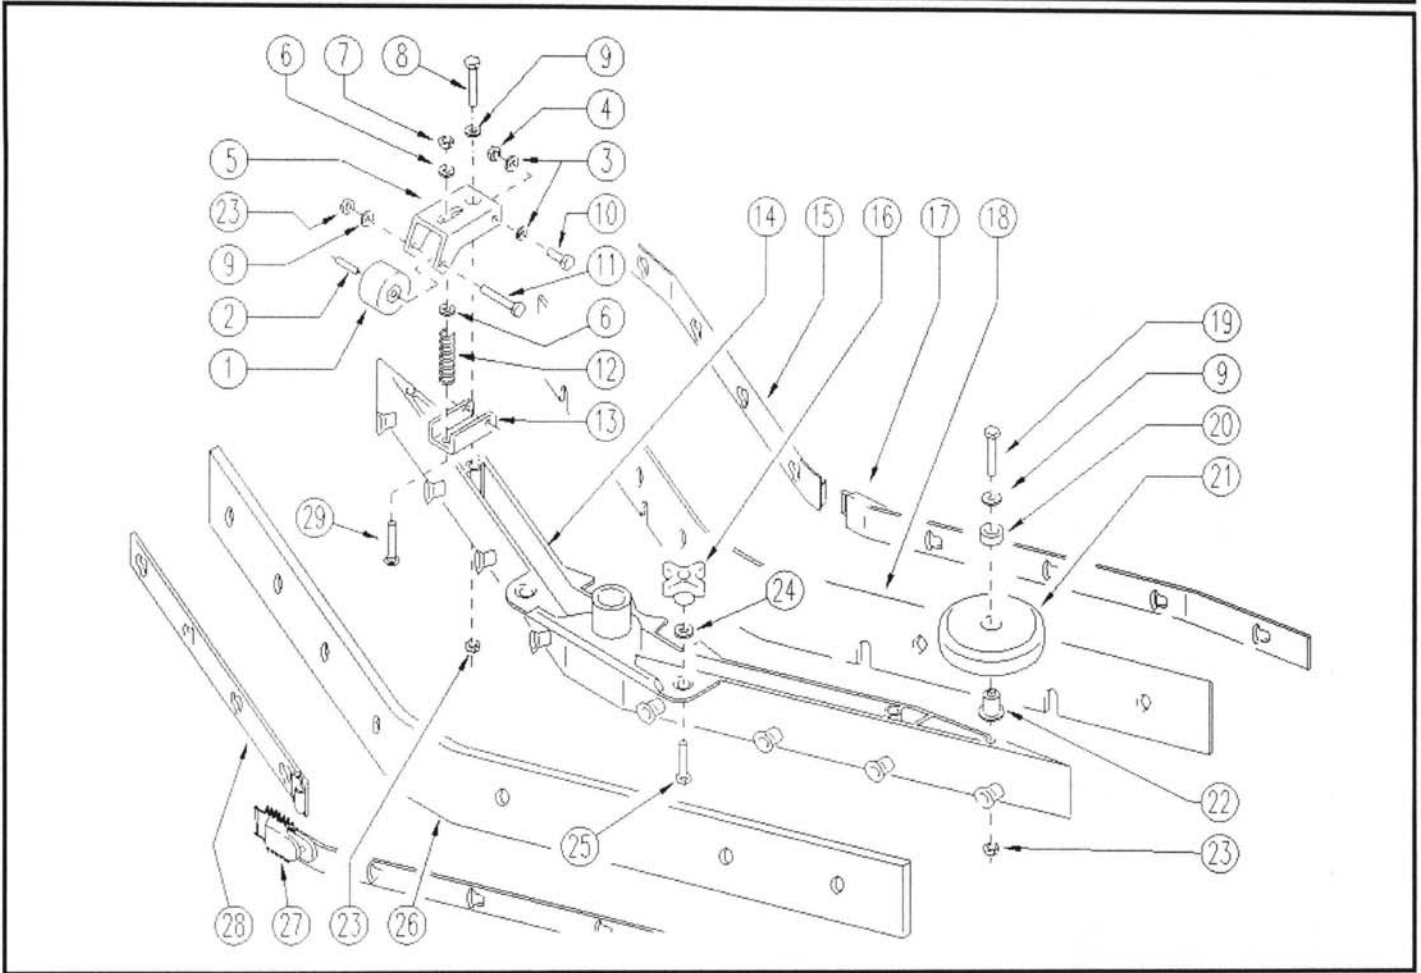


Ref. K	Part N.	Customer Part N.	Description	Qty	Validity:		Price
					From	To	
0001	RTRT49413		WHEEL D. 60-D.15 X36 NYL.	2,00	03/2004	--	
0002	LAFN04041		SPACER D6/15	2,00	03/2004	--	
0003	VTRS00245		WASHER D.6 UNI 6592 INOX	8,00	03/2004	--	
0004	VTDD01694		NUT M 6 INX	4,00	03/2004	--	
0005	LAFN05559		SUPPORT RUOTINO	2,00	03/2004	--	
0006	VTRS13947		WASHER D. 8 INX UNI 6592	4,00	03/2004	--	
0007	VTDD01695		NUT M 8 INX	2,00	03/2004	--	
0008	VTVT15142		SCREW TE M 6x45 INOX	2,00	03/2004	--	
0009	VTRS15144		WASHER D. 6 INX GRW UNI 1751	6,00	03/2004	--	
0010	VTVT15143		SCREW TE 6X16 UNI5739	4,00	03/2004	--	
0011	VTVT15515		SCREW TE M 6X 50 INOX A2	2,00		--	
0012	MLML49422		SPRING D.15X 45 X1	2,00	03/2004	--	
0013	LAFN51069		BRACKET SUPP.RUOTINO SQUEEGEE	2,00	03/2004	--	
0014	MFVR00140		BODY SQUEEGEE PRESSOFUSO	1,00	03/2004	--	
0015	LAFN51047		LAMINATION BLOCCA LAMA ANTER.SX L	1,00	03/2004	--	
0016	MPVR04164		HANDWHEEL M8 FILETTO PASSANTE	2,00	03/2004	--	
0017	LAFN51046		LAMINATION BLOCCA LAMA ANTER.DX L	1,00	03/2004	--	
0018	MPVR48380		RUBBER BLADE LAV. 890	1,00	03/2004	--	
0019	VTVT17342		SCREW TE M 6X 60 UNI 5739 INX	2,00	03/2004	--	
0020	MPVR49229		BUSHING SHK	2,00	03/2004	--	
0021	RTRT43370		CASTER D 100 2V	2,00	03/2004	--	
0022	LAFN04100		SPACER PER RUOTINO PARACOLPI	2,00	03/2004	--	
0023	VTDD15520		NUT M 6 A2 UNI 5588 INX	6,00	03/2004	--	
0024	VTAE00074		CIRCLIP D8	2,00	03/2004	--	
0025	VTVT00140		SCREW TE M8x30	2,00	04/2004	--	
0026	MPVR48379		RUBBER BLADE LAV. 890 PARA	1,00	03/2004	--	
0027	LAFN05675		BLADE HOLDER POSTERIORE DX (L)	1,00	03/2004	--	
0028	LAFN05674		BLADE HOLDER POSTERIORE SX (L)	1,00	03/2004	--	
0029	VTVT01304		SCREW M 8X 40 TTQST UNI 5731	2,00		--	

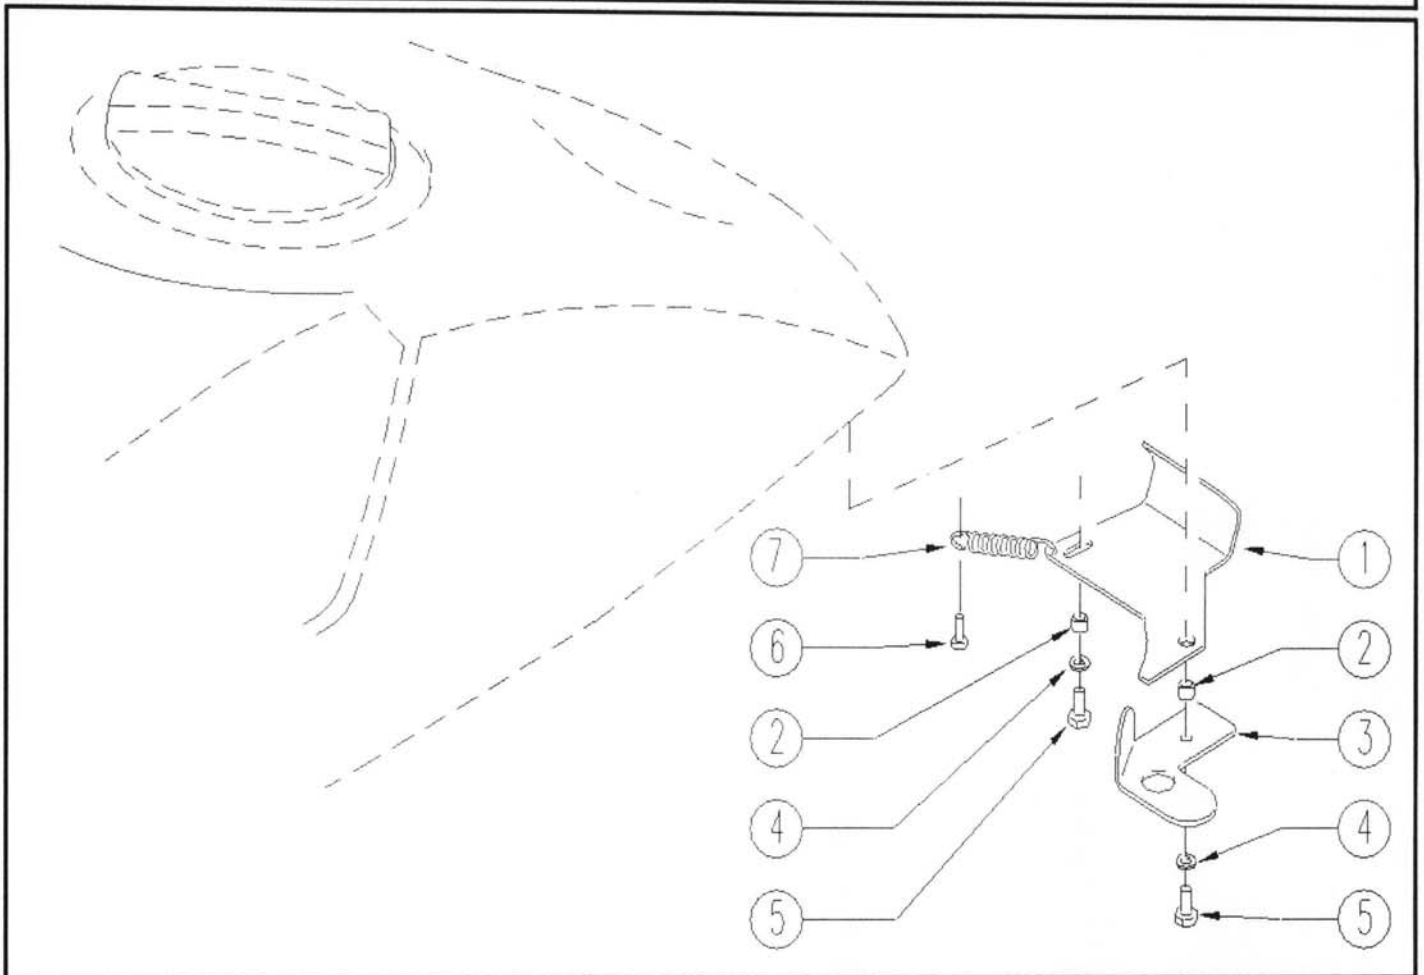

Ref. K	Part N.	Customer Part N.	Description	Qty	Validity:		Price
					From	To	
0001	LAFN05596		HOOK	1,00	12/2002	--	--
0002	RCDS35584		BUSHING D. 8X12X 4.3	2,00	12/2002	--	--
0003	LAFN05640		PLATE CENTRAGGIO AGGANCIO	1,00	12/2002	--	--
0004	VTRS13947		WASHER D. 8 INX UNI 6592	2,00	12/2002	--	--
0005	VTVT00779		SCREW TBEI M.8-16	2,00	12/2002	--	--
0006	VTVT48694		SCREW TCB TC 5 X12 UNI 9707 TZ	1,00	12/2002	--	--
0007	MLML00196		SPRING PER GIUNTO HS NADIR	1,00	12/2002	--	--

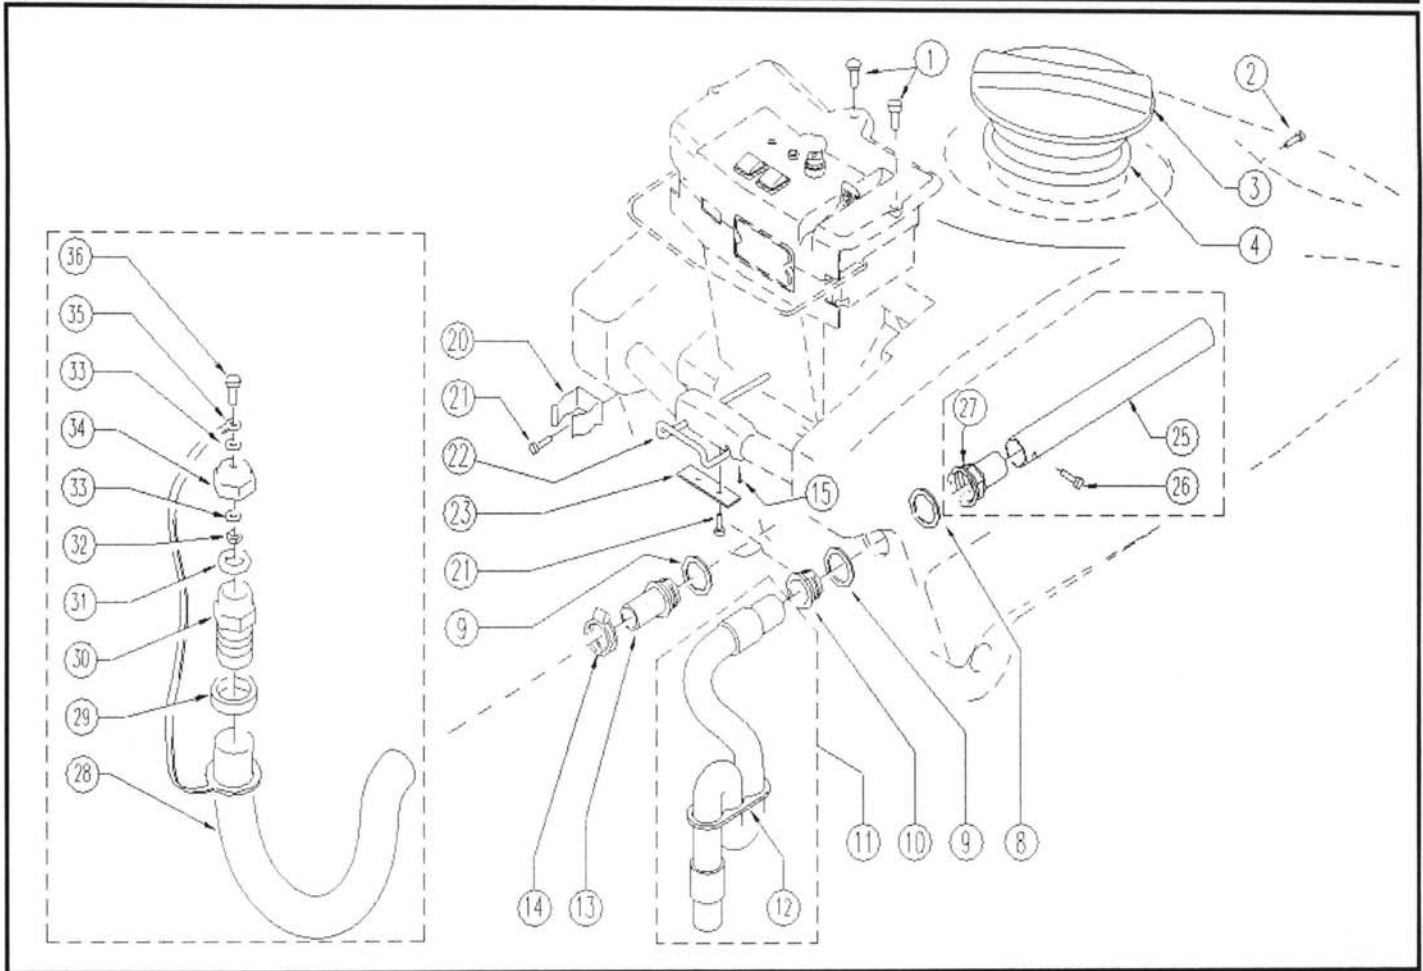


Ref. K	Part N.	Customer Part N.	Description	Qty	Validity:		Price
					From	To	
0001	VTVT00858		SCREW	3,00	12/2002	--	--
0002	VTVT00806		SCREW TBEI M. 6-10	2,00	12/2002	--	--
0003	MPVR04051		TANK CAP	1,00	01/2003	--	--
0004	GUGO00263		GASKET CIRCOLARE TAPPO	1,00	12/2002	--	--
0008	GUVR49928		GASKET RHN G4004	1,00	12/2002	--	--
0009	GUGO00216		GASKET ACQUA SPORCA	2,00	12/2002	--	--
0010	RCVR00508		PIPE UNION DI SCARICO	1,00	12/2002	--	--
0011	PMVR01043		TUBE ASPIRAZIONE	1,00	12/2002	--	--
0012	MPVR02730		PLATE SIFONE	1,00	12/2002	--	--
0013	RCVR49929		CONNECTOR DTT 1"1/2 D.50	1,00	12/2002	--	--
0014	FSVR00105		CLAMP DOPPIO FILO	1,00	12/2002	--	--
0015	VTVT00813		SCREW M 4X 8 TCB-TC UNI 8112	1,00	12/2002	--	--
0020	FSVR44166		HOSE CLIP D.50	1,00	12/2002	--	--
0021	VTVT48694		SCREW TCB TC 5 X12 UNI 9707 TZ	4,00	12/2002	--	--
0022	PMVR01058		BUTTON ASSIEME LEVA ANTISCHIACC.	1,00		--	--
0023	LAFN05607		PLATE	1,00	12/2002	--	--
0025	MPVR02889		TUBE INTERNO SERBATOIO	1,00	01/2003	--	--
0026	VTVT85145		SCREW TCB T-CROCE 4,2X9,5 INOX	1,00		--	--
0027	RCVR00504		CONNECTOR DRITTO FEMM.	1,00	01/2003	--	--
0028	TBFX00194		TUBE D 50-900 MM	1,00	01/2003	--	--
0029	MPVR46993		RING NUT SHK 57	1,00	01/2003	--	--
0030	RCVR46992		CONNECTOR DTT 2"	1,00	01/2003	--	--
0031	GUGO00226		GASKET 1"1/4	1,00	01/2003	--	--
0032	VTDD01695		NUT M 8 INX	1,00	01/2003	--	--
0033	VTRS13947		WASHER D. 8 INX UNI 6592	2,00	01/2003	--	--
0034	RCVR00524		CAP FEMMINA DA 2" FORATO D 8	1,00	01/2003	--	--
0035	MPVR02805		CLAMP TAPPO	1,00	01/2003	--	--
0036	VTVT00842		SCREW	1,00	01/2003	--	--

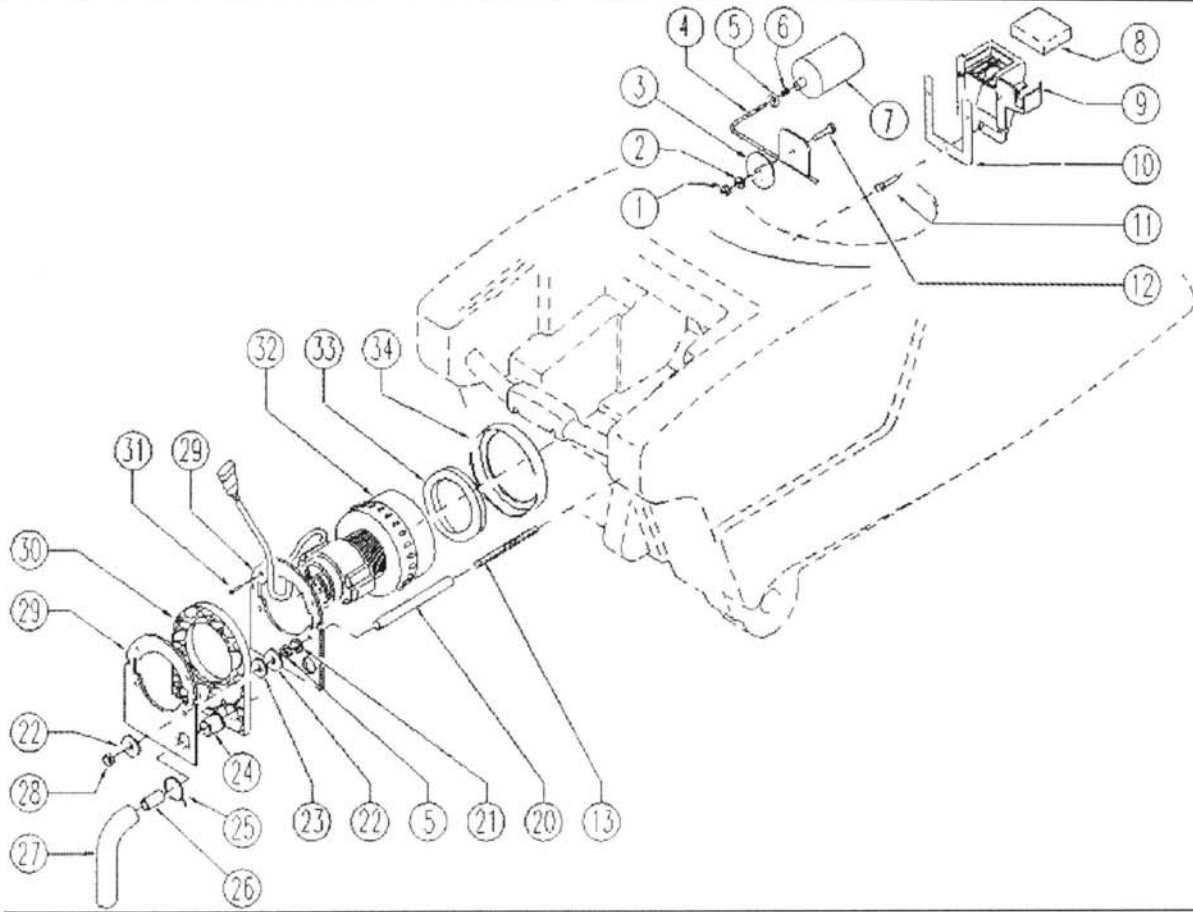

Ref. K	Part N.	Customer Part N.	Description	Qty	Validity:		Price
					From	To	
0001	VTDD01693		NUT M 5 INX	1,00	04/2004	--	--
0002	VTRS13750		WASHER D. 5X14 INX	1,00	04/2004	--	--
0003	MPVR02702		CAP ASPIRAZIONE	1,00	04/2004	--	--
0004	LAFN05118		ROD GALLEGGIANTE	1,00	04/2004	--	--
0005	VTDD15520		NUT M 6 A2 UNI 5588 INX	3,00	04/2004	--	--
0006	VTVR00212		INSERT	1,00	04/2004	--	--
0007	RCGR00064		FLOATER	1,00	04/2004	--	--
0008	FTAC47474		FILTER SHK	1,00	04/2004	--	--
0009	MPVR03846		SUPPORT GALLEGGIANTE	1,00	04/2004	--	--
0010	GUGO00221		GASKET SUPPORTO GALLEGGIANTE	1,00	04/2004	--	--
0011	VTVT00677		SCREW	3,00	04/2004	--	--
0012	VTVT00805		SCREW TBEI M. 5-10	1,00	04/2004	--	--
0013	VTVT00785		ROD FILETTO	2,00	04/2004	--	--
0020	LAFN51077		SPACER PH	2,00	04/2004	--	--
0021	VTRS13945		WASHER D. 6X18 INX UNI 6593	2,00	04/2004	--	--
0022	VTRS16937		WASHER 6x24 INOX UNI 6593	4,00	04/2004	--	--
0023	MPVR35582		RUBBER LAV.	2,00	04/2004	--	--
0024	MPVR31077		BUSHING L. 450	1,00	04/2004	--	--
0025	FSVR00086		CLAMP	1,00	04/2004	--	--
0026	TBFX00217		TUBE	1,00	04/2004	--	--
0027	ITSO00036		SOUND-PROOFING SCARICO ASP. SHARK/PANTHER	1,00	04/2004	--	--
0028	VTDD00124		NUT M 8 BASSO	2,00	04/2004	--	--
0029	LAFN51076		FLANGE INSONORIZZ. ASPIRATORE	2,00	04/2004	--	--
0030	ITSO00035		SOUND-PROOFING SHARK/PANTHER	1,00	04/2004	--	--
0031	VTVT00892		SCREW	4,00	04/2004	--	--
0032	MOCC00273		MOTOR 3 ST 24V 116598-13	1,00	05/2004	--	--
0033	GUVR48858		GASKET SRB SHK	1,00	04/2004	--	--
0034	GUGO30649		GASKET LAV DW.	1,00	04/2004	--	--

Ref. K	Part N.	Customer Part N.	Description	Qty	Validity:		Price
					From	To	
AP1	MECE00336		GEARCASE TRAZ 24V	1,00			--
AP2	MECE00345		BOARD LED INGR POTENZ +RESET	1,00			--
AP3	MECE00396		BOARD DI AUTORITENUTA	1,00			--
FU1	MEVR01346		FUSE 125 A	1,00			--
FU4	MEVR01380		FUSE A LAMA	1,00			--
FU5	MEVR01316		FUSE A LAMA 10 A 32V	1,00			--
FU6	MEVR01132		FUSE A LAMA 5 A	1,00			--
FU7	MEVR01132		FUSE A LAMA 5 A	1,00			--
FU8	MEVR01132		FUSE A LAMA 5 A	1,00			--
FV1	MECI00313		DIODE CPL R=10	1,00			--
FV2	MECI00313		DIODE CPL R=10	1,00			--
KM1	METT00056		CONTACTOR T-106	1,00			--
KM3	METT30650		CONTACTOR 24 V	1,00			--
M1	MOCC00236		MOTOR SPAZZOLE	1,00			--
M2	MOCC00236		MOTOR SPAZZOLE	1,00			--
M3	MOCC00243		MOTOR ASP.TR 24V	1,00			--
M4	MOCC00235		MOTOR GEARBOX TRAZIONE CABLATO	1,00			--
M5	MOCC00226		ATUATOR ALI 1 100MM CABLATO	1,00			--
R1	MECE00391		RESISTANCE CORAZZATA	1,00			--
R2	MECE00369		RESISTANCE CORAZZATA 10 OHM 50 WATT	1,00			--
R3	MECE00358		RESISTANCE 10 OHM 1/2W	1,00			--
RP1	MEVR01432		POTENTIOMETER A FILO	1,00			--
S1	MECI00334		MICROSWITCH V4	1,00			--
S2	MECI36393		MICROSWITCH TRZ DRW	1,00			--
S3	MECI36393		MICROSWITCH TRZ DRW	1,00			--
S5	MECI00303		MICROSWITCH STAGNO X LEVA BLOC. CASS.	1,00			--
S6	MECI00303		MICROSWITCH STAGNO X LEVA BLOC. CASS.	1,00			--
SB1	MECI46638		COMMUTAT SWITCHO CT 0401/C2	1,00			--
SB2	MECI00309		SWITCH	1,00			--
SF1	MECI36393		MICROSWITCH TRZ DRW	1,00			--
VD1	MECI00281		DIODE P 600 G	1,00			--
VD2	MECE35767		RECTIFIER LAV. E 450	1,00			--
VD3	MECI00281		DIODE P 600 G	1,00			--
VD4	MECI00281		DIODE P 600 G	1,00			--
VD5	MECI00281		DIODE P 600 G	1,00			--
VD6	MECI00281		DIODE P 600 G	1,00			--
VD7	MECI00294		DIODE 1N4007	1,00			--
VD8	MECI00294		DIODE 1N4007	1,00			--
XC1	MEVR01116		SUPPORT FUSIBILE 120 A	1,00			--

Ref. K	Part N.	Customer Part N.	Description	Qty	Validity:		Price
					From	To	
XC2	MEVR01116		SUPPORT FUSIBILE 120 A	1,00			--
XC3	MEVR01116		SUPPORT FUSIBILE 120 A	1,00			--
XC4	MEVR01222		CLAMP FORBOX E 29	1,00			--
XP1	MEVR01079		CONNECTOR CARICABATT.ROSSO	1,00			--
XP10	MEVR01294		CONNECTOR STAGNO CPL 2M	1,00			--
XP11	MEVR01283		CONNECTOR STAGNO CPL 2M	1,00			--
XP12	MEVR01283		CONNECTOR STAGNO CPL 2M	1,00			--
XP13	MEVR01285		CONNECTOR STAGNO CPL 3M	1,00			--
XP2	MEVR01145		CONNECTOR 8 POS. SENZA ALETTE	1,00			--
XP3	MEVR01285		CONNECTOR STAGNO CPL 3M	1,00			--
XP4	MEVR01294		CONNECTOR STAGNO CPL 2M	1,00			--
XP5	MEVR01283		CONNECTOR STAGNO CPL 2M	1,00			--
XP6	MEVR01294		CONNECTOR STAGNO CPL 2M	1,00			--
XP7	MEVR01283		CONNECTOR STAGNO CPL 2M	1,00			--
XP8	MEVR01294		CONNECTOR STAGNO CPL 2M	1,00			--
XS10	MEVR01296		CONNECTOR STAGNO CPL 2F 28A	1,00			--
XS11	MEVR01284		CONNECTOR STAGNO CPL 2F	1,00			--
XS12	MEVR01284		CONNECTOR STAGNO CPL 2F	1,00			--
XS14	MECI00278		CONNECTOR 1 OTTO VIE FEMMINA	1,00			--
XS15	MECI00276		CONNECTOR 1 QUATTRO VIE	1,00			--
XS2	MEVR01146		CONNECTOR 8 POS. PER FASTON FEMMINA	1,00			--
XS3	MEVR01146		CONNECTOR 8 POS. PER FASTON FEMMINA	1,00			--
XS4	MEVR01296		CONNECTOR STAGNO CPL 2F 28A	1,00			--
XS5	MEVR01284		CONNECTOR STAGNO CPL 2F	1,00			--
XS7	MEVR01284		CONNECTOR STAGNO CPL 2F	1,00			--
XS8	MEVR01296		CONNECTOR STAGNO CPL 2F 28A	1,00			--
YV1	MEEV00015		SOLENOID VALVE	1,00			--

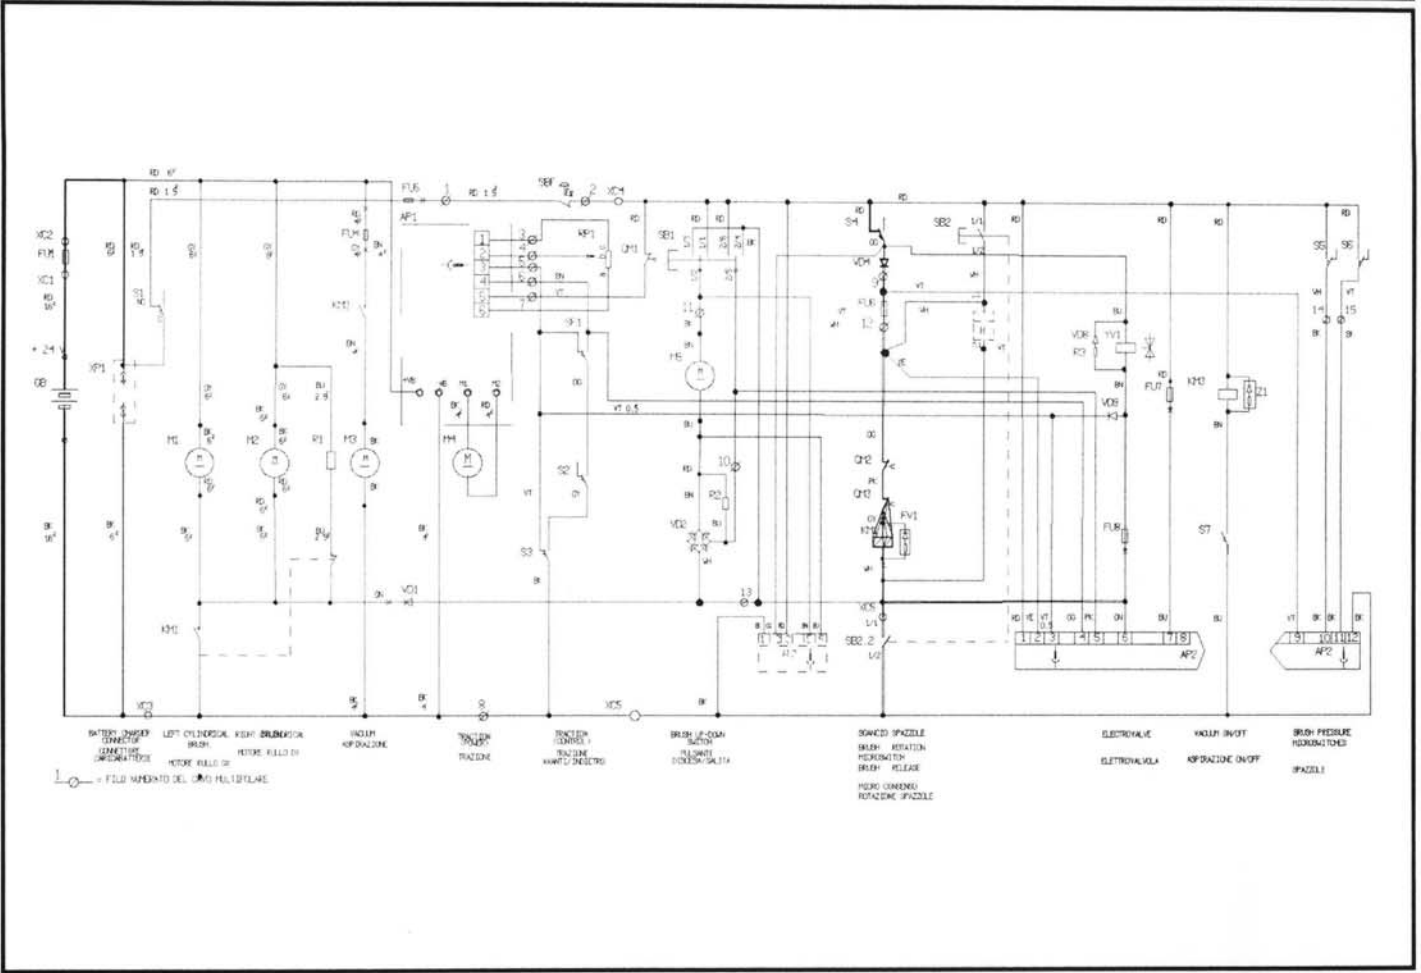

Ref. K	Part N.	Customer Part N.	Description	Qty	Validity:		Price
					From	To	
AP1	MECE00336		GEARCASE TRAZ 24V	1,00			--
AP2	MECE00344		BOARD LED CON 2 RESIST.	1,00			--
FU1	MEVR01346		FUSE 125 A.	1,00			--
FU4	MEVR01380		FUSE A LAMA	1,00			--
FU5	MEVR01316		FUSE A LAMA 10 A. 32V	1,00			--
FU6	MEVR01132		FUSE A LAMA 5 A.	1,00			--
FU7	MEVR01132		FUSE A LAMA 5 A.	1,00			--
FU8	MEVR01132		FUSE A LAMA 5 A.	1,00			--
FV1	MECI00313		DIODE CPL R=10	1,00			--
FV2	MECI00313		DIODE CPL R=10	1,00			--
KM1	METT00056		CONTACTOR T-106	1,00			--
KM3	METT30650		CONTACTOR 24 V	1,00			--
M1	MOCC00236		MOTOR SPAZZOLE	1,00			--
M2	MOCC00236		MOTOR SPAZZOLE	1,00			--
M3	MOCC00243		MOTOR ASP TR 24V	1,00			--
M4	MOCC00235		MOTOR GEARBOX TRAZIONE CABLATO	1,00			--
M5	MOCC00226		ATUATOR ALI 1 100MM CABLATO	1,00			--
R1	MECE00391		RESISTANCE CORAZZATA	1,00			--
R2	MECE00369		RESISTANCE CORAZZATA 10 OHM 50 WATT	1,00			--
R3	MECE00358		RESISTANCE 10 OHM 1/2W	1,00			--
RP1	MEVR01432		POTENTIOMETER A FILO	1,00			--
S1	MECI00334		MICROSWITCH V4	1,00			--
S2	MECI36393		MICROSWITCH TRZ DRW	1,00			--
S3	MECI36393		MICROSWITCH TRZ DRW	1,00			--
S4	MECI36393		MICROSWITCH TRZ DRW	1,00			--
S6	MECI00303		MICROSWITCH STAGNO X LEVA BLOC. CASS.	1,00			--
S7	MECI00303		MICROSWITCH STAGNO X LEVA BLOC. CASS.	1,00			--
SB1	MECI46638		COMMUTAT SWITCH 0 CT 0401/C2	1,00			--
SB2	MECI00309		SWITCH	1,00			--
VD1	MECI00281		DIODE P 600 G	1,00			--
VD2	MECE35767		RECTIFIER LAV. E 450	1,00			--
VD3	MECI00281		DIODE P 600 G	1,00			--
VD4	MECI00281		DIODE P 600 G	1,00			--
VD5	MECI00294		DIODE 1N4007	1,00			--
XC1	MEVR01116		SUPPORT FUSIBILE 120 A	1,00			--
XC2	MEVR01116		SUPPORT FUSIBILE 120 A	1,00			--
XC3	MEVR01116		SUPPORT FUSIBILE 120 A	1,00			--
XC4	MEVR01222		CLAMP FORBOX E 29	1,00			--
YV1	MEEV00015		SOLENOID VALVE	1,00			--